

## INSTALLATION INSTRUCTION

**WARNING! FLAMMABLE! Read and follow all instructions. Failure could result in fire, serious bodily injury or death.**

1. Filter to be installed or changed by authorized, trained, service personnel only.
2. Use of non-sparking hand tools, goggles, static control wrist trap, and fire extinguisher required!
3. No smoking or power tools!
4. Prior to filter change, turn off power and fuel supply to pumping unit and follow proper tag out procedures.
5. Operate nozzle until no flow occurs. If flow continues, do not attempt to change filter. Call for service!
6. Using an approved container, drain fuel from housing.
7. Loosen nut and remove housing from base and remove filter.
8. Place new housing gasket in groove of base.
9. Wipe inner housing with clean cloth.
10. Place new filter in housing.
11. Assemble housing to base, making sure housing flange is seated in base gasket groove. Replace nut and tighten to 50-60 ft. lbs.
12. Close all drain valves on housings.
13. Turn on power and fuel supply.
14. Pressurize system and check for leaks.
15. Used filters and fluids drained from filters must be contained and disposed of according to local regulations.

40-24818