


# • This Part Replaces the Filter Located Inside the Oil Pan •

1. Grommet
2. Oil Filter Element
3. O-ring
4. Pliers

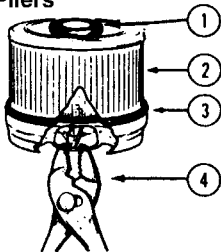

## INSTALLATION INSTRUCTIONS

1. Remove oil pan drain plug and drain oil.
2. With pliers slowly turn filter and pull downward to remove. Check for O-ring and grommet on used filter.
3. Coat O-ring and grommet of new filter with clean oil and press new filter in housing.
4. Wipe oil pan drain plug, coat with clean oil.
5. Replace oil pan drain plug and tighten to 1/4 turn after oil pan gasket makes contact.
6. After engine oil is added to proper level, run engine and check for leaks. Recheck oil fluid level.
7. Reference owner's manual for additional information.