

# • INSTALLATION INSTRUCTIONS •

## Fitting a new oil filter element

1. Check that the seatings of filter housing and cover are clean, and fit the rubber rings 1a, 1b and 1c . (Fig. 1.)

2. Position the new filter element on the rubber ring 1b and fit the nut 2a with the washer. Tighten the nut 2a so far that it just allows the filter element to be rotated by hand. (Fig. 2.)

3. Make a mark on nut and filter element and then tighten the nut 1 turn. (Fig. 3.)

4. Now insert the new filter unit into the filter housing by pushing it by hand or tapping it with a rubber hammer. Tighten the cap nuts evenly and crosswise, applying normal torque force.

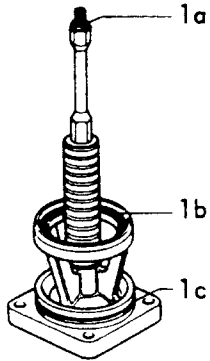


Fig. 1

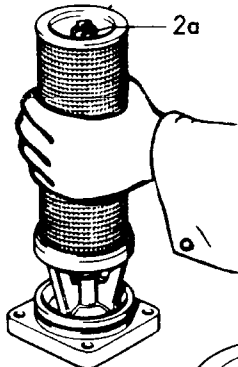


Fig. 2

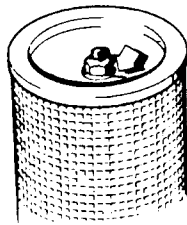


Fig. 3