



- Pump housing
- ① Filter cartridge
- ② Inner frost compensation membrane
- ③ Filter housing — Note the housing will contain the outer frost compensation membrane (no installation is required)
- ④ Lubricant spray pump



1 Attach ① main filter cartridge over the aluminum bolt in the pump housing. It's important to push the filter cartridge all the way until it stops in the housing.



2 Attach the ② inner frost compensation membrane over the filter cartridge in the pump housing, push until the sealing bead of the ② inner frost compensation membrane fully covers the groove on the pump housing.



3 Lubricate the sealing bead of the inner frost compensation membrane with ④ Lubricant Pump Spray. The threads on the pump housing must be lubricated with ④ Lubricant Pump Spray as well.



4 Attach the ③ filter housing by hand tightening



5 Using a wrench to fully secure housing.

*ATTENTION: The groove on the pump housing must be free of dirt and foreign material.*