

# INSTALLATION INSTRUCTIONS

Refer to Engine Service Manual for disassembly & assembly instructions.

**Primary Fuel Filter Housing**  
(found in driver side frame rail)



**Secondary Fuel Filter Housing**  
(found under the hood)

