# PQDXXA-Z10 & PQDXXA-PROFINET-Z10

#### **Firmware update**







#### ENGINEERING YOUR SUCCESS.

Effective: January, 24<sup>th,</sup> 2023 Supersedes: June 7<sup>h</sup>, 2021

#### 0. Choose Firmware

Attention! Wrong selection will make unit unusable! Compare with label at unit!

For PQDXXA-Z10 R07 and lower  $\rightarrow$  PQDXXA-Z10-2023-r07.s19 For PQDXXA-Z10 R08 and higher  $\rightarrow$  PQDXXA-Z10-2130-r08.s19

🔛 ProPVplus 3.6 - Start up tool 🕞 Parker Hannifin Manufacturing Germa	ny GmbH + Co. KG	_ 🗆 X
File Edit Options Help		
Command Parameter Help		Module Commands
		Save
	Options X	
	Interface Oscilloscope Monitor Table Input	Default
	Port selection Transfer Mode	Less (Death
	Serial Port       Full-Duplex	LOADBACK
	Half-Duplex (19200 Baud)	Parameter Import / Export
	Baudrate options	₹→ 🛄
	Fix baudrate	
	O Auto baudrate detection	
	Baudrate settings	Parameter view
	Fix baudrate	i anamotor nom
	57.6 KBaud	
	Delay On Firmware Update	
	0 Milliseconds	
	V OK	
port closed FDX		JI



#### 1. Start ProPVplus software

#### Go to Options $\rightarrow$ Settings $\rightarrow$ Interface

👪 ProPVplus 3.6 - Start up tool 🛛 - Parker Hannifin Manufacturing Germany GmbH + Co. KG	_ 🗆 ×
File Edit Options Help	
Command Parameter Help	Module Commands
	Save
Options X	
Interface Oscilloscope Monitor Table Input	Default
Port selection Transfer Mode	
Serial Port       Full-Duplex	LoadBack
V (19200 Baud)	Parameter Import / Export
Daudrate options     Ex baudrate	
Baudrate settinge	
Davu aic settings	Parameter view
Fix baudrate	
57.6 KBaud	
Delay On Firmware Update	
0 💭 Milliseconds	
OK Cancel	
(	>
port closed FDX	.i.



#### 2. Change Baudrate

) Baud)



WARNING: Ensure Power supply to the module at any time of the firmware update. Otherwise the module can be damaged.

- 3. Please contact PMDE for the up to date firmware file
- 4. Connect with the module 📉
- 5. Identify the module



#### 6. Go to Options → Settings→ Interface

PV ProPVplus 3.6 -	Start up tool - Parker Har	nnifin M	1anufac	turing Germany GmbH + Co. KG	_ [ ] :
File Edit Optio	ns Help				
COM15 Set	tings Ctrl+G				
Command Fire	mware Update	neter	Help	<u> </u>	Module Commands
LG		EN	Deut	ch (DE)/English (EN) - Bitte ID Button nach der Änderung drück	Save
MODE		EXP	STAN	DARD / EXPERT Mode	
<del>13</del>		10	Samp.	e time of the control loop in 100 µs	Default
TRIGGER		0	Trig	ger point of the input signal in 0,01%	
со	FP*	/UP*	Sele	ction of control option: FP*/UP*, FD*/UD*	LoadBack
PVSEL		360	Pump	displacement selection [cm³/rev]: 16 20 23 28 32 40 46 63 80 9	Parameter Import / Export
TYPE		Q	F (st	wivel angle ctrl.), P (+ open loop pressure ctrl.), Q (+ closed	i alamatar inport i coport
PMODE		PID	Cont	rol mode of the pressure control	1→
SOLENOIDS		15	Numbe	er of solenoids - swivel angle valve	
CCMODE		OFF	Char	acteristics linearization [ON/OFF] - pressure valve	
P_SENSOR		600	Sense	or nominal pressure in bar	
P_NOMINAL		350	Syste	em pressure value in bar	
P_CORR		15	Diff	erential pressure setting in bar	
PL:EXT		INT	Inte	rnal or external power limitation	
PL:RPM		1500	Engi	ne speed in rpm	
PL:EFF		9770	Effi	ciency in 0,01%	
PL:PL		3224	Power	r limitation in 0,1 kW (always activ if pressure sensor install	
PL:T1		500	Time	constant of the power limitation in 0,1 ms	
Q:CORR		0	Autor	matic flow correction in 0,01%	
SENS		AUTO	Sens	or monitoring [ON/OFF/AUTO].	
MIN:WQ		0	Input	t scaling of the flow command signal in 0,01%	
MAX:WQ	1	0000	Input	t scaling of the flow command signal in 0,01%	
AIN:WQ		۷	Input	t switching, flow command, voltage or current [V/C]	
AQ:UP		225	Ramp	time up stroking (flow) for 0 100 % in ms 💌	
·					
ort open Port: 1	15 FDX 57.6 KBaud		PQD)	XA-Z10-r03	

#### 7. Enter the security key → "Ctrl + Alt + F7"

	Warning!		
The execution	of firmware update could make the module unusable!!!		
please enter security key			
	please enter security key		



#### 8. Select the Firmware file

Firmware update	×			
Warning! The execution of firmware update could make the module unusable!!!				
Selected Firmware				
Start Erase Program Ca	ancel			

9. Follow the buttons on the bottom of the Dialog (Start → Erase → Program → Cancel, which will change to "Finish" after the update has been complete)



# 10. Identify the module again to read the new parameter from the module

#### 11. Counter/Cross check the new firmware revision

at the bottom of the GUI.

COM15 -	💊 📭 👘 📼 🐷		
			Module Commande
Command	Parameter	Help	
LG	EN	Deutsch (DE)/English (EN) - Bitte ID Button nach der Anderung drüc	Save
MODE	EXP	STANDARD / EXPERT Mode	
15	10	Sample time of the control loop in 100 µs	Default
TRIGGER	0	Trigger point of the input signal in 0,01%	
со	FP*/UP*	Selection of control option: FP*/UP*, FD*/UD*	LoadBack
PVSEL	360	Pump displacement selection [cm*/rev]: 16 20 23 28 32 40 46 63 80	9 Parameter Import / Expr
TYPE	Q	F (swivel angle ctrl.), P (+ open loop pressure ctrl.), Q (+ close	d
PMODE	PID	Control mode of the pressure control	₹→
SOLENOIDS	15	Number of solenoids - swivel angle valve	
CCMODE	OFF	Characteristics linearization [ON/OFF] - pressure valve	<u></u>
P_SENSOR	600	Sensor nominal pressure in bar	
P_NOMINAL	350	System pressure value in bar	
P_CORR	15	Differential pressure setting in bar	
PL:EXT	INT	Internal or external power limitation	
PL:RPM	1500	Engine speed in rpm	
PL:EFF	9770	Efficiency in 0,01%	
PLAL	3224	Power limitation in 0,1 kW (always activ if pressure sensor instal	1
PL:T1	500	Time constant of the power limitation in 0,1 ms	
Q:CORR	0	Automatic flow correction in 0,01%	
SENS	AUTO	Sensor monitoring [ON/OFF/AUTO].	
MIN:WQ	0	Input scaling of the flow command signal in 0,01%	
MAX:WQ	10000	Input scaling of the flow command signal in 0,01%	
AIN:WQ	v	Input switching, flow command, voltage or current [V/C]	
AQ:UP	225	Ramp time up stroking (flow) for 0 100 % in ms	



#### 12. Change Baudrate back to "Auto baudrate detection"

	Interface Oscilloscope Mor	nitor Table Input	
	Port selection	Transfer Mode	
Go to Options $\rightarrow$ Settings $\rightarrow$ Interface	Serial Port	Full-Duplex	
		O Half-Duplex (19200 Baud)	
Change "Auto baudrate detection"	Baudrate options		
to "Fix baudrate"	◯ Fix baudrate		
	Auto baudrate detection		
	Baudrate settings		
choose "auto daud <u>???</u>	Auto Change To Selected Baudrate		
	Auto Baudrate		
"OK"	57.6 KBaud	~	
	Delay On Firmware Update		
	0 Milliseconds		
	🗸 ок	X Cancel	



### 13. Optionally download the gateway script (Profinet version) with the Terminal command "SCRDL". The Terminal is available in the password mode.

ProPVplus 3.6 - Start up tool - Parker Hannifin Manufacturing Germany GmbH + Co. KG				
File Edit Options Help				
>SCRDI 0	Module Commands			
> UNIGATE_IC RESET Initiating communication Acknowledge recieved Deleting Input buffer	Save			
	Default			
Sending checksum Download oxstore data RestartIC-PN-SC V3.1.2-rc.1[43] (c)dA [66,666MHz] Script(C:449/32704,V:1313/16384)="gtw-pfn" Author="WEST" Version="r04" Date= 03.07.2018 SN=40970123 IP=0.0.0.0 MAC=00-14-11-B7-69-9B Name="gtw-pfnxb1db29"Konfigmode Exiting script download	LoadBack			
Litting bollpb download	Parameter Import / Export			
	<b>₹</b> →			
port open Port: 6 FDX 57.6 KBaud PQDXXA-PROFINET -Z10 -r01				



## Contact

#### Parker Hannifin Manufacturing Germany GmbH & Co. KG

Pump and Motor Division Europe - PMDE Neefestraße 96 09116 Chemnitz, Germany

- Tel: +49 (0)371 3937 0
- Fax: +49 (0)371 3937 488

Email: <u>pmde-pqd-support@parker.com</u> Web: www.parker.com/pmde

