

# Quick Connect Couplings

## Instructions for use

### Instructions for use

Series 14KE  
Series 24KE  
Series 26KE

#### **IMPORTANT!**

For reasons of safety, Rectus KE couplings may only be used with Rectus steel plugs:

- Series 14KE only with Series 22SF steel plugs
- Series 24KE only with Series 23SF steel plugs
- Series 26KE only with Series 25SE steel plugs

#### **Coupling**

- As is usual with modern couplings, coupling is effected simply by pushing the plug into the coupling. The sleeve snaps forwards towards the plug and the coupling is locked.
- During coupling, make sure that the plug is pushed into the coupling as far as it will go. The plug locks audibly into place.

#### **Self-venting operation**

- Pushing back the sleeve causes the 1st lock to be released. The coupling valve closes, and at the same time, the plug is pushed into a 2nd locking system by compressed air and the valve spring. The compressed air can now easily escape from the plug (hose).
- Make sure that any compressed air that may escape under these circumstances does not create any hazard.

#### **Uncoupling**

- The sleeve must not be pulled forwards towards the plug until the pressure in the coupling has dissipated and no more air escapes. This means that the 2nd locking system has been cleared, and the plug can now be removed without risk.

---

Parker Hannifin Manufacturing  
Germany GmbH & Co. KG  
**Low Pressure Connectors Europe**  
Daimlerstraße 7  
D-71735 Eberdingen-Nussdorf



ENGINEERING YOUR SUCCESS.