


CABIN AIR FILTER


IDENTIFICATION / INSTALLATION

CHRYSLER

PA4168

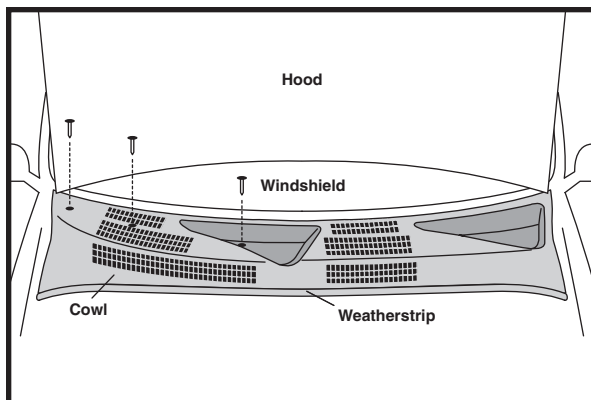

1. Open hood.
2. Pull back weatherstrip from passenger side of cowl.
3. Remove fasteners on passenger side of cowl.

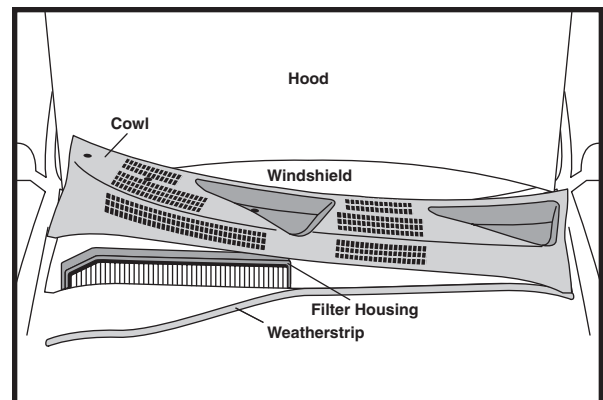

4. Lift up passenger side of cowl.
5. Remove filter from filter housing. (If installing for the first time, remove and discard factory filter inlet cover. Purchase and insert new filter housing).
6. Replace filter and reassemble.

Notice: The information provided is based on the latest authoritative information available at press time. However, due to manufacturers' changes, and year and model variations, Baldwin Filters cannot be responsible for misapplications and instruction errors.

BALDWIN FILTERS® **BALDWIN**
a CLARCOR company

4400 East Highway 30 ■ P.O. Box 6010
Kearney, Nebraska 68848-6010
Phone: (308) 234-1951 ■ Toll Free: (800) 822-5394
Fax: (800) 828-4453 ■ Int'l Fax: (308) 237-9769
Internet: www.baldwinfilter.com