


Using 100BN oils with a DIGI Cell

Check your DIGI Cell Software

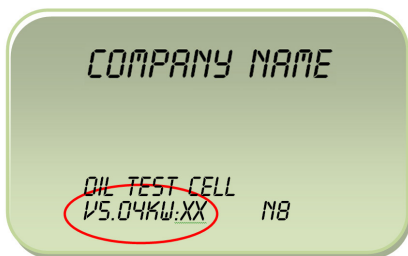

✓ V5.04 or higher is already designed for 100BN oils. Follow the user manual supplied with the DIGI Cell.

✗ V5.03 or lower, follow steps below.

Using V5.03 or older DIGI Cells with 100BN oil

To use with 100BN oil, follow the steps below:

1. Follow the user manual supplied with the DIGI Cell to do a TBN calibration as though you were using an 80BN oil.
2. When the TBN setup instructions ask you to add 2ml of fresh oil, use your 100BN fresh oil in place of 80BN oil.
3. Complete the calibration as directed.
4. Clean the cell.
5. Measure the BN of your used oil sample.
6. Multiply the on-screen value by 1.25.

All new DIGI Cells are produced with the most up to date software and able to work with 100BN oils.

New DIGI Cells are available under the part number:

- AS-K13890-KW: DIGI Cell Combined (TBN / Water)
- AS-K13889-KW: DIGI Cell TBN