

Housing quick reference

Standard housing range for life science applications



Air / Gas

- ▶ Particulate and micro-organism removal from compressed air
- ▶ Top pressure to tanks / drying lines / drying process
- ▶ Industrial biotechnology / fermentation

T-Port

PHS

PHS
(Multi)



In-line

PHI




Liquid

- ▶ Industrial biotechnology
- ▶ Clarification and sterilization, removal of particles or microorganisms

T-Port

PHL

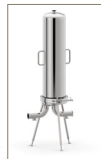

In-line

PHI



Vent

- ▶ Water for injection (WFI) tanks
- ▶ Tank vent to atmosphere

Open

PHV



T-Port

PHS

