





5 PORT PILOT OPERATED SOLENOID VALVE

aerospace
climate control
electromechanical
filtration
fluid & gas handling
hydraulics
pneumatics
process control
sealing & shielding





ADEX Valves

A00, A05, A12 Series

February 2010





ADEX VALVE







CONTENTS

| FEATURE | 4 |
|------------------------------------|----|
| Difference between P and R type | |
| SIZING MAP | 7 |
| VARIATIONS OF SOLENOID VALVE | |
| VARIATIONS OF MANIFOLD | 10 |
| FOR SAFETY USE | |
| SOLENOID VALVE/COMMON INSTRUCTIONS | 13 |
| ADEX VALVE/INDIVIDUAL INSTRUCTIONS | 17 |
| ADEX VALVE PR type | |
| A05P Series (Sub-base mounting) | |
| A05R Series (In-line mounting) | |
| Individual wiring type manifold | |
| Multipin connector type manifold | |
| A12P Series (Sub-base mounting) | |
| A12R Series (In-line mounting) | |
| Individual wiring type manifold | |
| Multipin connector type manifold | |
| ADEX VALVE A00S Series | |
| A00S Series (Sub-base mounting) | |
| Individual wiring type manifold | |
| ADEX VALVE Manifold Specifications | 96 |












Compact body with large flow

Body width remains the same, but the flow rate 1.5 to 3 times more than conventional valves.

(In comparison with KURODA products)

It allows flexibility on your applications saving space and reducing costs.

This series is most suitable for driving cylinders of $\; \phi \, 10$ to $\phi \, 100$ in diameter.

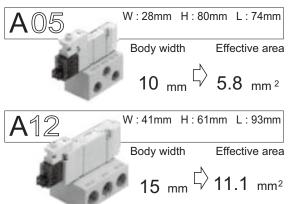

Quick response time, faster than 10ms

(A05 series, Single solenoid)

Uniquely designed pilot valve cut down on response time to faster than 10ms saving power consumption.

Expected life time more than 50,000,000 operations

(Based on KURODA's test conditions)

A well-reputed TS (Triple Squeeze) seal is employed in the main spool. resulting in low sliding friction and long service life.

Low power consumption Only 0.6W

(With indicator light and surge suppressor) Current required is 25mA on 24V DC.

Direct drive from PLC is possible, contributing to cost reduction as well as down-sizing of the DC power supply.

Multipin connector manifold


Two types of connectors, D sub-connector and a flat cable connector are provided for wiring between the manifold and control device, allowing either to be selected in relation to various control devices used.



Cylinder ports 2 and 4 selectable

(In-line mounting type)


| Series | Standard | Option | | | |
|--------|-------------|---------|---------|--|--|
| | Tapped hole | Push-in | fitting | | |
| A05 | M5 | φ4 | φ6 | | |
| A12 | Rc1/8 | Ψ6 | Φ8 | | |

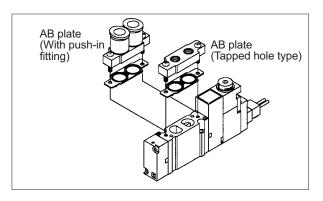

Locking button (Manual override)

Screwdriver-operated manual override is standard.


It can be used as a hand-operated locking button by fitting an optional locking cover.

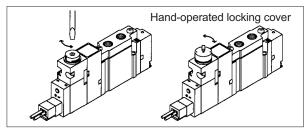

Multipurpose tag available

(Sub-base mounting type)

For the convenience of installation, testing, maintenance tag can be mounted on the upside of solenoid valve body.

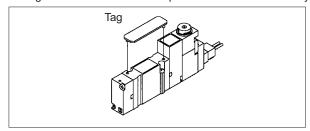


Captured exhaust from main valve and pilot valve

(Sub-base mounting type & manifold)

Exhaust air from pilot valve is captured together with exhaust air from main valve.


Unlike conventional exhaust systems, exhaust air from pilot valve is not directly discharged to the atmosphere.


This prevents air contamination in the atmosphere.

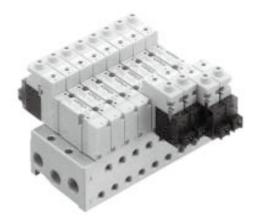




ADEX VALVE

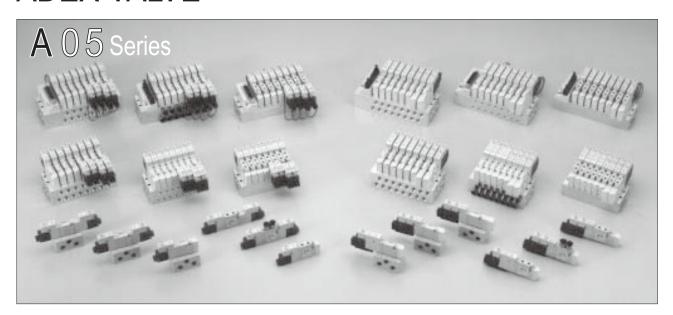


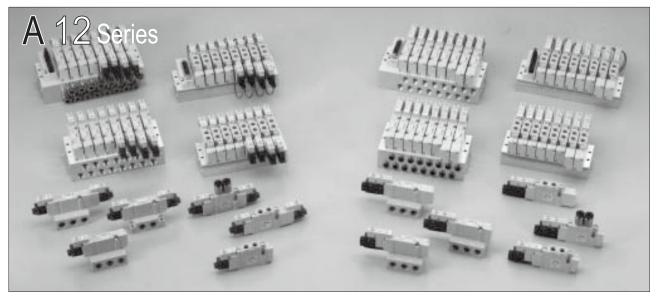




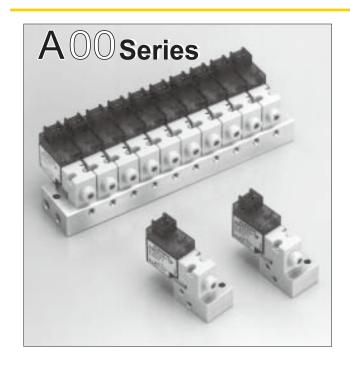

Difference between P and R type.

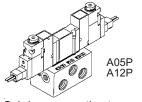

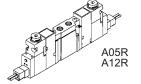

Sub-base mounting type In-line mounting type

Sizing map

| <u> </u> | | | | | | | | | | | | | | |
|----------|---|-----------------|----|-------|-----|-----|---------|---------|---------|------|-------|-----|-------|-------|
| Coming | 0 1:4: | Cylinder | | | | | | | | | | | | |
| Series | Conditions | Speed (mm/s) | φ6 | φ10 | φ16 | φ20 | φ25 | φ32 | φ40 | φ50 | φ63 | φ80 | φ 100 | φ 125 |
| Cnod | Ora and Oranturallan | | | P-H-N | 15 | | SP-2H-1 | | | SP-2 | :H-2 | | | |
| Spee | ed Controlle | i. | | | | | | SP-06-1 | SP-06-2 | S | P-15- | 3 | SP-2 | 20-4 |
| | | 150 | | | | | | | | | | | | |
| | | 300 | | | | | | | | | | | | |
| A05 | Pressure 0.5MPa Load factor 30% Tube Φ6× 1m | 450 | | | | | | | | | | | | |
| | | 600 | | | | | | | | | | | | |
| | | 750 | | | | | | | | | | | | |
| | | 900 | | | | | | | | | | | | |
| | | 150 | | | | | | | | | | | | |
| | | 300 | | | | | | | | | | | | |
| A12 | Pressure 0.5MPa | 450 | | | | | | | | | | | | |
| | Load factor 30% Tube Φ8× 1m | 600 | | | | | | | | | | | | |
| | | 750 | | | | | | | | | | | | |
| | | 900 | | | | | | | | | | | | |

As cylinder speeds vary according to operating conditions and configurations, use the data as a guide onry for selection.



Solenoid valve variations (Lower case)

| | | | | | F | uncti | on | | Voltage | Wir | ing |
|------|------------------|--------|------------------|-------|-----------------|---------------|----------------|-----------------|---------|--|--|
| | | | (mm²) | 2-pos | ition | 3- | ositior | 1 | | | |
| | | Series | Effective area (| | Double solenoid | Closed center | Exhaust center | Pressure center | DC24V | Plug-in connector with lead wire from the side | Plug-in connector with lead wire from the bottom |
| | Sub-base version | | | | | | | | | | |
| | | A05P | | | | | | 0 | | | |
| PR | | A12P | 11.1 | 0 | 0 | 0 | 0 | | 0 | 0 | |
| type | In-line version | | | | | | | | | | |
| | | A05R | 4 | 0 | | 0 0 | 0 0 | 0 | 0 | 0 | 0 |
| | | A12R | 8.8 | | O | | | | | | |



| | Mar | nual | Bra | cket | | | | Port | size | | | | Special application | | | tion |
|------------------------------------|-------------------------------------|------------------------------|---------------------|--------------|----|-----------|-----------|-----------|-----------|-------------------|--------|------------|---------------------|--------------|------------------------|--------------------|
| % \(\cdot \) | | | | | | | | | Pı (On | սsh-ir ly at բ | Fittir | ng 2 4) | Exte | ernal | pilot | (I) |
| Indicator light & surge suppressor | Screwdriver-operated locking button | Hand-operated locking button | Foot bracket | Side bracket | M5 | Rc 1/8 | Rc 1/4 | Rc 3/8 | φ 4 | φ6 | | φ 10 | Vacuum | Low pressure | Pressurizing ports 3,5 | Resistant to ozone |
| | | | | | _ | 0 | _ | _ | _ | _ | _ | | | | | |
| 0 | 0 | • | _ | _ | | _ | 0 | _ | _ | _ | _ | _ | Δ | 0 | Δ | Δ |
| | | | | | | | 0 | 0 | | | | | | | | |
| | | | | | 0 | _ | _ | | 0 | 0 | | _ | | | | |
| 0 | 0 | • | ol. | • | _ | 0 | _ | _ | _ | 0 | 0 | | Δ | 0 | Δ | Δ |
| | | | Single sol. only | | _ | _ | 0 | _ | _ | | 0 | 0 | | | | |

 ${\sf O}$: Standard ${\sf igodot}$: Optional ${\textstyle \bigwedge}$: Made to order



Manifold variations

| | | Manifold | Mountable solenoid valve series |
|------------------|--|----------|---------------------------------------|
| | | | PR type |
| | MFC Bar type Compact type Individual wiring | | A05P |
| | MFS | | A05P |
| | Bar type Individual wiring | | A12P |
| sion | MFX Bar type | | A05P |
| ver | Individual wiring Common external pilot | | A12P |
| Sub-base version | MCC Bar type Compact type Multipin connector | | A05P |
| | MCS Par type | | A05P |
| | Bar type Multipin connector | | A12P |
| | MCX Bar type | | A05P |
| | Multipin connector Common external pilot | | A12P |
| nc | MFU Bar type | | A05R |
| In-line version | Individual wiring | | A12R |
| line \ | MCU Par type | | A05R |
| <u>-</u> u | Bar type Multipin connector | | A12R |



| | Wiri | ng | | | | | P | ort siz | ze | | Special applica | | | | pplica | tion |
|---------------|-----------------|--------------------|-----------------------|-----------|-----------------|----|-----------|-----------|------------|----|-----------------|-----|--------|--------------|------------------------|--------------------|
| Conn metho | ecting od | Pola | arity | ports' | 1, 3, 5 | | | рс | ports 2, 4 | | | | Exte | ernal | pilot | one |
| 4 | ctor | non | | | Push-in fitting | | ıg | | <u>s</u> | ЭG |) 0ZC | | | | | |
| Flat cable | D sub-connector | Pluse common (NPN) | Minus common (NPN) | Rc 1/8 | Rc 1/4 | M5 | Rc 1/8 | Rc 1/4 | φ4 | Ψ6 | φ8 | Φ10 | Vacuum | Low pressure | Pressurizing port 3, 5 | Resistant to ozone |
| _ | _ | _ | _ | 0 | _ | 0 | _ | _ | 0 | 0 | _ | _ | _ | _ | _ | Δ |
| | | | | 0 | | | 0 | | l | | | | | | | |
| | | | | | 0 | _ | | 0 | _ | 0 | 0 | | | | | |
| _ | _ | | | 0 | | _ | 0 | | 0 | 0 | _ | _ | Δ | 0 | Δ | |
| | | | | | 0 | | | 0 | _ | 0 | 0 | _ | | | | |
| 0 | 0 | 0 | Δ | 0 | _ | 0 | _ | _ | 0 | 0 | _ | _ | _ | _ | _ | Δ |
| | _ | | A | 0 | | | 0 | | _ | | _ | _ | | | | |
| 0 | O | O | | _ | 0 | _ | _ | 0 | | 0 | 0 | _ | | | _ | |
| | 0 | 0 | Δ | 0 | | | 0 | | 0 | 0 | | | Δ | 0 | Δ | Δ |
| 0 | 0 | | | | 0 | | | 0 | _ | 0 | 0 | _ | | | | |
| | _ | | _ | 0 | | 0 | | | 0 | 0 | _ | _ | _ | | _ | Δ |
| | | | | | 0 | _ | 0 | | _ | 0 | 0 | _ | | | | |
| | 0 | 0 | Δ | 0 | | 0 | | | 0 | 0 | _ | _ | | | _ | |
| | | | | | 0 | | 0 | | _ | 0 | 0 | _ | | | | Δ order |

O: Standard A: Made to order





FOR SAFETY USE

Be sure to read the following instructions before use.

For common and individual instructions, refer to the text of this catalogue.

The following safety precautions are provided to prevent damage and danger to personnel and to provide instructions on the correct usage of this product. These precautions are classified into 3 categories; "CAUTION", "WARNING" and "DANGER" according to the degree of possible injury or damage and the degree of impendence of such injury or damage.

Be sure to comply with all precautions along with JIS B8370(X1) and ISO 4414(X2), as they include important content regarding safety.

- ▲ CAUTION Indicates a potentially hazardous situation which may arise due to improper handling or operation and could result in personal injury or property-damage-only accidents.

⚠ WARNING · Indicates a potentially hazardous situation which may arise due to improper handling or

operation and could result in serious personal injury or death.

△DANGER

- · Indicates an impending hazardous situation which may arise due to improper handling
- · or operation and could result in serious personal injury or death.

(%1) JIS B8370 : General Rules for Pneumatic Systems

(※2) ISO 4414 : Pneumatic fluid power-General rules relating to systems

↑ WARNING

●The applicability of pneumatic equipment to the intended system should be judged by the pneumatic system designer or the personnel who determined specifications for such

As operating conditions for products contained in this catalogue are diversified, the applicability of pneumatic equipment to the intended system should be determined by the pneumatic system designer or the personnel who determined specifications for such system after conducting an analysis or testing as necessary.

The system designer shall be responsible for assuring the intended system performance and safety.

Before making a system, the system designer should thoroughly examine all specifications for such a system and also take into consideration the possibility of any trouble with the equipment.

The pneumatic equipment should be handled by persons who have sufficient knowledge and rich experience.

Inproper handling of compressed air will result in danger.

Assembling, operation and maintenance of machinery using pneumatic equipment should be performed by persons who have sufficient knowledge and rich experience.

- Never operate machinery nor remove the equipment until safety is assured.
- · Before checking or servicing machinery and equipment, be sure to check that steps for prevention of dropping or runaway of the driven component have been completely taken.
- · When removing the equipment, make sure that the above-mentioned safety measures have been done
 - Then turn off air supply and power to the system and purge compressed air in the system.
- · When restarting machinery and equipment, check that proper prevention of malfunction has been provided for and then restart carefully.
- •When using the pneumatic equipment in the following conditions or environments, take the proper safety measures and consult KURODA beforehand.
- · Conditions and environments other than specified and outdoor use.
- · Applications to nuclear power equipment, railroads, aircraft, vehicles, medical equipment, equipment connected with food and drink, amusement facilities and safety devices such as emergency interruption devices, clutch/ brake circuits for a press and the likes.
- · Applications which require extreme safety and will also greatly affect men and property.





Solenoid valves/Common instructions



Be sure to read them before use.

Also refer to Par. "For Safety Use" and instructions mentioned for each series of solenoid valves.

Design



WARNING

Stopping actuator at intermediate position

When stopping the actuator at an intermediate position using a solenoid valve listed in this catalogue, it is difficult to stop it accurately because of the compressibility of air, unlike a hydraulic cylinder can dose.

In addition, as the solenoid valve and air cylinder allow a certain degree of air leak, they cannot stop at the fixed position for a long period of time according to circumstances. When it is required to stop them at the fixed position for a long period of time, contact KURODA.

Keeping pressure (including vacuum)

As the solenoid valve is designed to allow a certain degree of air leak, it cannot be used to keep pressure (including vacuum) in a pressure vessel etc.

• Do not use for emergency shutoff valves.

Solenoid valves listed in this catalogue are not designed for use in emergency shutoff valves and other safety applications. When using the solenoid valve for such applications, provide an independent means to assure safety.

Exhausting residual air

Provide a residual air exhausting function in due consideration of maintenance and inspection. Doing maintenance and inspection without exhausting residual air may sometimes malfunction the actuator.

When using a 3-position closed center type solenoid valve, compressed air is shut in between solenoid valve and actuator even if residual air from the air supply side to the solenoid valve is exhausted.

Therefore, provide a means to exhaust the residual air pressure separately.

• Use in vacuum

When using a solenoid valve for diverting vacuum and other applications, check specifications for the valve and select a proper one that can be used in vacuum.

In order to prevent sucking foreign matters from the suction pad and exhaust port, provide an inline filter between the suction pad and solenoid valve and at the exhaust port.

· Applying current continuously for long time

When using a solenoid valve while applying current to it continuously for a long period of time, contact KURODA beforehand.

Avoid applying current simultaneously.

When using a double-solenoid valve while applying current to it continuously for a long period of time, do not apply current to both solenoids simultaneously; otherwise the coil may be burnt out or the main valve may malfunction.

Remodeling the solenoid valve

Do not remodel the solenoid valve.

Design

! CAUTION


Applying current momentarily

When using a double-solenoid type valve, apply current for the prescribed period of time (0.1 sec.). If current is not applied for the prescribed period of time, the solenoid valve may not perform the diverting action acording to circumstances.

Leak current

When a C-R element is used in the contact protective circuit (surge voltage protection), leak current will flow through the C-R element.

If this leak current becomes large, a malfunction will occur. Therefore, reduce leak current to less than 1 mA.

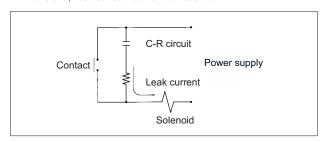

Use at low temperature

When using a solenoid valve at 5°C or below, provide an air dryer or other proper means to prevent moisture from solidifying or freezing.

Use with air blow

When using a solenoid valve with air blow, select a directoperated type or external pilot type solenoid valve.

When an internal pilot type solenoid valve is used, it may not perform the diverting action due to a pressure drop at the time of air blow

When an external pilot type solenoid valve is used, supply compressed air within the specified pressure range to the pilot port.

Mounting position and direction

A solenoid valve can be mounted in any position and direction as a general.

However, a metal seal type double-solenoid valve and a 3-position solenoid valve should be mounted so that the spool may be horizontal.

Shock and vibration

Reduce shocks and vibrations applied to the solenoid valve to less than the prescribed value. (refer to specifications.)

Applying shocks and vibrations exceeding the prescribed value

Applying shocks and vibrations exceeding the prescrit may rsult in a malfunction of the solenoid valve.





Solenoid Valves/Common instructions



Be sure to read them before use.

Also refer to Par. "For Safety Use" and instructions mentiond for each series of solenoid valves.

Selection



WARNING

Refer to specifications.

Solenoid valves listed in this catalogue are designed for compressed air. When using other fluid than compressed air, contact KURODA beforehand.

Do not use a solenoid valve at pressure and temperature outside the range of specifications, otherwise resulting in a breakdown or malfunction.

Mounting



WARNING

 When mounting the solenoid valve, firmly fix it while using care to prevent the stationary part and joint from loosening.

If the solenoid valve is mounted with insufficient strength, it may sometimes come off.

Do not start the system until it is ensured that equipment works properly.

After mounting the solenoid valve, connect power supply and then perform a functional test and a leak test. Check that it has been correctly mounted and works properly, before starting the system.

Coating with paint

When coating the resin portion with paint, it may be adversely affected by paint and solvent. For the propriety of painting, contact KURODA beforehand.

Do not peel off the nameplate affixed on the solenoid valve and do not erase or smear out the letter on it.

• Provide space for maintenance and inspection.



CAUTION

 Fit an air muffler to the exhaust port (ports 3 • 5) of the solenoid valve.

Dust or foreign matter that enters it may cause a malfunction of the solenoid valve.

 Do not wipe off the model name inscribed on a nameplate etc. with organic solvent.

The inscribed indication may be erased.

Piping


! CAUTION

Before piping

Thoroughly flush the inside of each pipe to remove chips, coolant, dust, etc. before piping.


How to wind a seal tape

When winding a seal tape around the threaded portion, leave space of 1.5 to 2 thread turns.

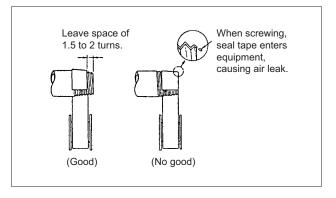

How to apply liquid sealant

When applying liquid sealant to the threaded portion, apply a proper amount to about 1/3 of the periphery of the threaded portion and then screw it.

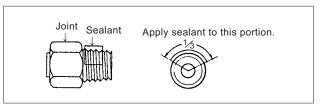

Screw of pipe and joint

When screwing the pipe and joint, use care to prevent chips and sealant from entering the pipe and joint.

Tighten them within a proper range of clamping torque.

| Clamping torque (N·m) |
|-----------------------|
| 0.3 ~ 0.5 |
| 1.5 ~ 2.0 |
| 7.0 ~ 9.0 |
| 12. ~ 14. |
| 22. ~24. |
| 28. ∼30. |
| 28. ∼30. |
| 36. ∼38. |
| 40. ∼42. |
| 48. ∼50. |
| |





Solenoid valves/Common instructions



Be sure to read them before use.

Also refer to Par. "For Safety Use" and instructions mentioned for each series of solenoid valves.

Piping



CAUTION

Avoid wrong piping.

When connecting a pipe to a solenoid valve, be careful not to mistake the supply port by referring to the nameplate affixed to the product or the product catalogue.

 When using a 3-position closed center type solenoid valve :

Thoroughly check the piping between solenoid valve and actuator for air leak.

Wiring



WARNING

 When doing wiring work, be sure to turn off compressed air and power supplies beforehand.

Wiring work without turning off air and power supplies may cause an electric shock or malfunction; this sometimes results in an injury to the human body or a damage to property.

Avoid mis-wiring.

Some solenoid valves have polarity: Those operating on DC with built-in indicator light and those equipped with surge protective circuit.

When wiring to a solenoid valve, check whether or not it has polarity.

For a solenoid valve having polarity, check the lead wire color and symbol of the polarity by the catalogue or actual article beforehand and then make correct wiring.

Mis-wiring will result in the following problems :

(Where no polarity protective diode is incorporated :)

Wiring to the wrong polarity will burn out the diode in the solenoid valve, the switching element on the control unit side or the power supply unit.

(Where a polarity protective diode is provided :)

Wiring to the wrong polarity will not cause the solenoid valve to perform a diverting action.

 Avoid applying stress and tensile force to lead wire repeatedly.

Wiring made in such a manner that stress and tensile force are repeatedly applied to the lead wire will result in the breaking of wire. Provide some degree of margin for wiring.

• Check that there is no insulation failure.

If an insulation failure occurs in the lead wire connection, extension cable and terminal base, an excess flows to the switching element of the solenoid valve or control unit, sometimes resulting in a damage.

Do not mistake applied voltage.
 Mistake in applied voltage in case of wiring to a solenoid valve

will cause an operation failure or burn out the coil.

 After completion of wiring, check for wrong connection before turning on power.

Operating environments



DANGER

Do not use solenoid valve in a explosive environment.



WARNING

- Do not use a solenoid valve in atmospheres containing corrosive gases, chemicals, seawater, water and vapor and in places where a solenoid valve contacts these matters.
- Do not use a solenoid valve in a place where vibrations or shocks are directly applied to it.
- When a solenoid valve is exposed to the direct sunlight, fit a protective cover to the solenoid valve.
- When a solenoid valve is located around a heat source, shut off the radiant heat.
- When installing a solenoid valve in the control panel, take proper heat-radiating measures so that the inside temperature may be kept within the specified temperature range.
- When using a solenoid valve in a place where it is exposed to welding spatters, provide a protective cover or other proper prevention.

Welding spaters may burn out the plastic parts of the solenoid valve, sometimes resulting in a fire.

Lubrication



CAUTION

 Solenoid valves listed in this catalogue are nonlubrication.

The non-lubricated solenoid valve can be used without lubrication, but can be used with lubrication.

When using it with lubrication, do not discontinue supplying oil. Otherwise, the applied lubricant may run off, sometimes resulting in an operation failure.

When using a lubricant, Class 1 turbine oil ISO VG 32 (containing additive) is recommended.





Solenoid Valves/Common instructions



Be sure to read them before use.

Also refer to Par. "For Safety Use" and instructions mentioned for each series of solenoid valves.

Quality of air



Use pure air.

Compressed air containing corrosive gases, chemicals, salt, etc. causes a breakdown or operation failure. So do not use such air




• Fit an air filter with filtration of 5 µm or fine.

• Install an air dryer.

Compressed air containing much drainage causes the operation failure of pneumatic equipment. Install an air dryer, lower the temperature and reduce drainage.

Take proper countermeasures against sludge.

If sludge produced in compressor oil enters pneumatic equipment, it will cause the operation failure of pneumatic equipment. It is recommendable to use compressor oil (NISSEKI FAIRCALL A68, IDEMITSU DAPHUNY SUPER CS68) featuring minimized sludge production or use a sludge filter or mist cleaner to prevent sludge from entering the pneumatic equipment.

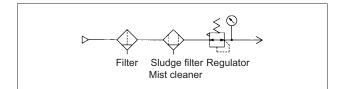

Maintenance and inspection

! WARNING

Inspection before maintenance

First check that load drop prevention has been provided.

Then shut off air and power supplies to the system and exhaust residual air in the system beforehand.

For a 3-position closed center type solenoid valve, compressed air is sealed between solenoid valve and cylinder.

Exhaust this residual compressed air.

Inspection after maintenance

When restarting the system, check that preventive measures against flying-out of the actuator have been taken. Then connect compressed air supply to the pneumatic system, and perform a proper functional test and a leak test to check that it works safely without fail, before starting the system.

Operation at low frequency

To prevent an operation failure, perform the switching action of the solenoid valve once per 30 days. (Be careful of air supply.)

Manual operation

When the solenoid valve is manually operated, the system connected to it is also operated. Make sure safety before operation.

Disassembly of solenoid valve

When disassembling the solenoid valve, contact KURODA beforehand



Draining

To keep the quality of air to a certain level, drain the air filter at periodical intervals.







Be sure to read them before use.

Also refer to Par. "For Safety Use" and common instructions.

Flow rate

Flow rate can be calculated from the following formula:

For values in the sonic velocity zone. find out from the attached table.


 $\bigcirc P_H \le 1.89 P_L$ (Subsonic velocity zone)

Q=240 × S× $\sqrt{P_L \times (P_H - P_L)}$ × $\sqrt{\frac{293}{T_H}}$

②P_H≥1.89P_L (Sonic velocity zone)

 $Q = 120 \times S \times P_H \times P_H \times \sqrt{273}$

(Note) Absolute pressure (MPa) = Supply pressure + 0.100 (MPa)

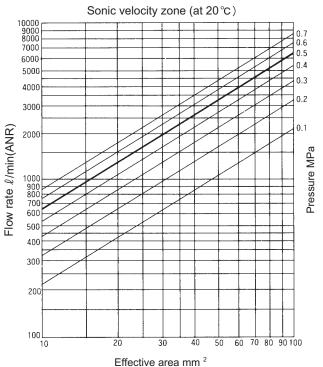

When the value of effective area is $\times 10^{-1}$ or $\times 10^{n}$, multiply the same figure by the flow rate.

Effective area

Effective areas mentioned in this catalog are measured between ports $1\rightarrow 2$, 4 in accordance with JIS (JAPANESE INDUSTRIAL STANDARD) B8374/8375.


Port identification



Port mark

Piping port marks such as P1 A4 conforming to JIS and ISO are given in the respective piping port positions.

| JIS | ISO | Use |
|----------------|-----|--------------|
| Р | 1 | Supply port |
| Α | 4 | Output port |
| В | 2 | Output port |
| R ₁ | 5 | Exhaust port |
| R ₂ | 3 | Exhaust port |

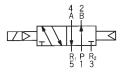



- X : External pilot port
- Y: Pilot valve captured exhaust port

Type of port thread

Type of port thread is marked on the sub-base by the following abbreviation.

| Abbrev. | Type of thread | | | | |
|---------|----------------|--|--|--|--|
| R | Rc | | | | |
| G | G | | | | |
| N | NPT | | | | |
| F | NPTF | | | | |

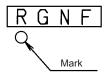

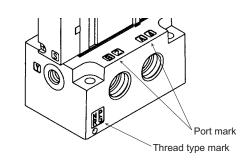

Using 5-port valve as 3-port valve



A05 and A12 Series are so designed that each of them can be used as a 3-port valve with normal close (NC) or normal open (NO) function. However, use it with port opened.

This function is useful when 3-port double solenoid valve is required.

| Plug p | osition | Port 4 | Port 2 | | |
|--------------------|-----------------|--------------|-------------------|--|--|
| Fun | ction | NO | NC | | |
| Number of solenoid | Single solenoid | 4 2 5 1 3 | 4 2 X 5 1 3 | | |
| Number o | Duble solenoid | 4 2 5 1 3 | 4 2 5 1 3 | | |







Be sure to read them before use. Also refer to Par. "For Safety Use" and common instructions.

Continuous energizing



CAUTION

- When ADEX VALVE is continuously energized with power turned on for a long period of time, the solenoid may heat up, resulting in a damage to the packing and gasket according to circumstances.
 However, ADEX VALVE can be used under the following conditions:
- ①Operating ambient temperature : Below 40 ℃
- 2Rated operating voltage (Only DC): +0 -10%
- 3The following models can be used under good heat-adiating conditions:
 - · Single item of A00
 - Single item of A05P and A05R, and bar type manifolds (MFS, MCS, MCC and MCU), except when MFC, MFU, MFX or single item is mounted on a plane.
 - Single item of A12P, A12R, A20P and A20R, and bar type manifolds (MFS, MFX, MFU, MCS, MCX and MCU).
- When operating ADEX VALVE with power continuously turned on in other conditions than above-mentioned, be sure to consult KURODA beforehand.

Selection of proper configuration fitting



CAUTION

There is the possibility that some fitting cannot be fitted to ports 2 and 4 (manifold, sub-base, and AB plate) of this solenoid valve because there are various fitting makers supplying different types of fittings.

Check the size of the intended fitting by referring to the catalogue supplied by the fitting maker.

Note that the pitch between ports 2 and 4 (AB plate) of the in-line mounting type valve is designed to be a minimum.

TAG



CAUTION

Do not reuse a tag that was once attached to same place. Otherwise, it may be too loose.

Air exhaust



CAUTION

- As this solenoid valve is so constructed that exhaust air from pilot valve and exhaust air from main valve are collected at ports 3, 5 use care that exhaust air is not extremely choked. Otherwise, it may cause a malfunction.
- When operating 5 or more solenoid valves simultaneously on a manifold of 10 or more stations, open both sides of ports 3, 5.
 (For common external pilot type, also open port Y.)
 (The bar type manifold is open on both sides. For a separate type manifold, place PR blocks on both sides.)

Pressure supply (For external pilot type)



CAUTION

- Supply pressure to external pilot valve from port X. (Port Y is pilot valve exhaust port.)
- When supplying air pressure, first supply external pilot pressure and then supply main valve pressure.
- To cut the pressure supply and exhaust air, do so for the main valve first and then for the external pilot valve.

Tightening torque for mounting screw



CAUTION

Recommended tightening torque range is shown as below.

| Name | Screw size | Torque (N·m) |
|--|------------|--------------|
| A05 solenoid valve mounting screw blank plate mounting screw | M2 | 0.2 ~0.22 |
| A12 solenoid valve mounting screw blank plate mounting screw | M3 | 0.5 ~0.55 |
| A05 AB plate mounting screw | M2 | 0.18~0.2 |
| A12 AB plate mounting screw | М3 | 0.8 ~1.0 |
| A00 solenoid valve mounting screw blank plate mounting screw | M1.6 | 0.08~0.1 |








Be sure to read them before use. Also refer to Par. "For Safety Use" and common instructions.


How to use connectors



When doing wiring work, be sure to turn off power beforehand.

How to attach and detach a connector
 When attaching a connector, pinch the clip with your finger and
 insert the connector into the pin straight to the end. When
 detaching a connector, pinch the clip with your finger and pull
 out the connector straight.

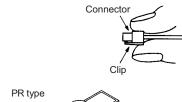


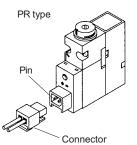

Connector ass'y with protective cover

! CAUTION

- Prevents short-circuiting caused by the entry of foreign matters into the connector.
- The cover is made of chloroprene rubber for electrical use, assuring excellent weather and insulation resistance. However, be careful not to place it under splash of cutting oil etc.
- Neat appearance owing to use of round cord.
 Connector Ass'y with protective cover is optionally available.
 Specify the following model No. when ordering.
- A05P-DC-CB10

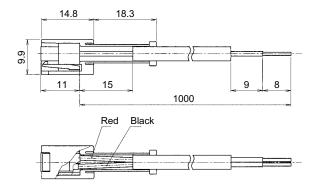








Be sure to read them before use. Also refer to Par. "For Safety Use" and common instructions.

Internal circuit of solenoid with indicator light and surge suppresor

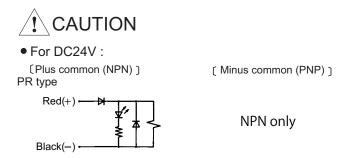

Make connection in accordance with polarity marks (+) (-).







Be sure to read them before use. Also refer to Par. "For Safety Use" and common instructions.

Manual override



WARNING

Screwdriver-operated locking manual override (Standard)

No-locking operation


Push the locking button with a screwdriver, and the valve shifts to energized position. When the screwdriver is released from the locking button, the valve is reset to non-energized position. Locking operation

Push the locking button with a slotted screwdriver and rotate the button clockwise by 90°.

The valve is locked to keep energized position.

When the button is rotated counterclockwise by 90° and the screwdriver is released from the button, the valve is reset to non-energized position.

Use a screwdriver with blade width of 2.3 to 2.4 mm.

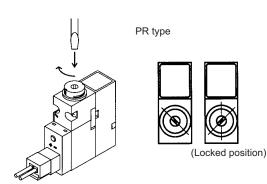


Hand-operated locking manual override (Option)

The screwdriver-operated locking button can be used as a hand-operated locking button by fitting an optional locking cover.

How to fit a locking cover

Adjust the rib provided inside the locking cover to 2 respective groove on the circumference of the screwdriver-operated locking button and insert the cover.

Then rotate it clockwise by 30° . Thus, the locking cover has been completely fitted. (To remove the locking cover, reverse the above-mentioned procedure.)

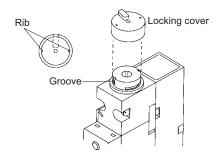

No-locking operation


Push the locking button with your finger, and the valve shifts to energized position. When the finger is released from the locking button, the valve is reset to non-energized position.

Locking operation

Push the locking button with your finger and rotate the button clockwise by 90° .

The valve is locked to keep energized position.

When the button is rotated counterclockwise by 90° and your finger is released from the button, the valve is reset to non-energized position.

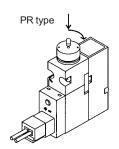







Be sure to read them before use. Also refer to Par. "For Safety Use" and common instructions.

Individual supply spacer



CAUTION

Mounting an individual supply spacer between solenoid valve and manifold makes it possible to provide each solenoid valve with an individual supply port. However, the types of manifolds to which these spacers can be mounted are specified as follows: As individual supply spacers are optionally available, please order by the model number shown below.

| Model No. | Applicable manifold | | | | |
|-------------|-------------------------|------------------------|--|--|--|
| | Individual wiring type | MFS □ -A05P-01 | | | |
| A05PA-IS-M5 | Multipin connector type | MCC □ -A05P-M5(C4, C6) | | | |
| | | MCS □-A05P-01 | | | |
| A05RA-IS-M5 | Multipin connector type | MCU □ -A05R-M5(C4, C6) | | | |
| A12PA-IS-01 | Individual wiring type | MFS□-A12P-02 | | | |
| | Multipin connector type | MCS □ -A12P-02(C6, C8) | | | |


Individual exhaust spacer

! CAUTION

Mounting an individual exhaust spacer between solenoid valve and manifold makes it possible to provide each solenoid valve with an individual exhaust port. However, the types of manifolds to which these spacers can be mounted are specified as follows: As individual exhaust spacers are optionally available, please order by the model number shown below.

| Model No. | Applicable manifold | | |
|-------------|---|--|--|
| A05PA-IE-M5 | Individual wiring type MFS ☐ -A05P-01 | | |
| | Multipin connector type MCC□ -A05P-M5(C4, C6) | | |
| | MCS□ -A05P-01 | | |
| A05RA-IE-M5 | Multipin connector type MCU□ -A05R-M5(C4, C6) | | |
| A12PA-IE-01 | Individual wiring type MFS ☐ -A12P-02 | | |
| | Multipin connector type MCS□ -A12P-02(C6, C8) | | |


A05PA-IS-M5, A12PA-IS-01

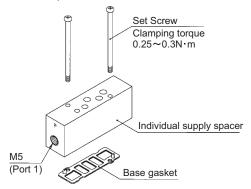

(Note) ● Mounting height of individual supply spacer A05: 18.5 mm, A12: 20 mm


• When mounting a supply spacer, turn port 1 toward the end cover side in case of single solenoid valve.

• A05RA-IS-M5

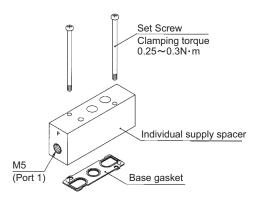


(Note) Mounting height of individual supply spacer: 18.5 mm

A05PA-IE-M5, A12PA-IE-01

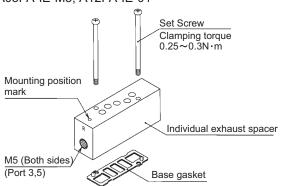

(Note) ● Mounting height of individual exhaust spacer A05: 18.5 mm, A12: 20 mm

- When mounting an exhaust spacer, turn the mounting position mark (shown in the above figure) toward the end cover side in case of single solenoid valve.
- Be sure to connect a pipe to the exhaust port on the pilot valve side and protect the wiring from drain.

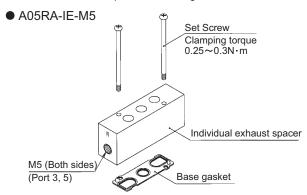

(Note) • Mounting height of individual exhaust spacer : 18.5 mm

 Be sure to connect a pipe to the exhaust port on the pilot valve side and protect the wiring from drain.







Be sure to read them before use. Also refer to Par. "For Safety Use" and common instructions.


Specifications for multipin connector type manifolds



CAUTION

This manifold allows wiring to each solenoid valve to be made on a printed circuit board and allows wiring from the outside to be collectively made using a D sub-connector or flat cable connector, thereby reducing the number of connections and providing a neat appearance. Use of connectors based on MIL specification broadens the compatibility of this manifold.


Wiring specifications for D sub-connector (25-pole)

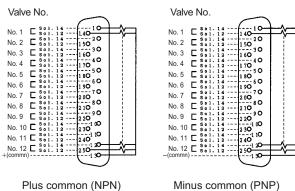

Minus common (PNP)

D sub-connector Ass'y Ordering Instructions DSS-R25FB-1K Cable length 1K: 1m Color B: Black Connector position F: Ftype R: Rtype Number of pin 25: 25pins

Valve numbering order

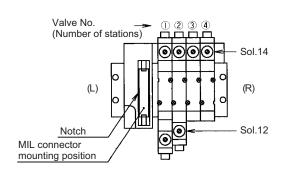


- (Note) Internal wiring of manifold is connected to Sol.14, Sol.12 and D sub-connector terminal on common specifications.
 - Count the number of stations based on the L side of D sub-connector mounting position.

Example: 1-station, 2-station, ... n-station

• Maximum number of stations is 12 for manifold and 24

For your specific requirement for more than the maximum number of stations, contact KURODA.

 When wiring with flat cable be careful of external surge voltage.

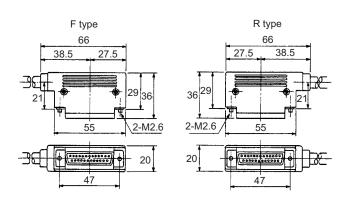








Be sure to read them before use. Also refer to Par. "For Safety Use" and common instructions.


Specifications for multipin connector type manifolds

Wiring specifications for flat cable connector (26-pole)

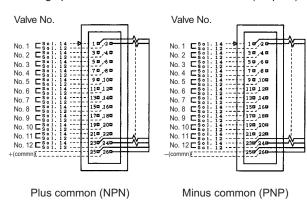

Flat cable connector
 Use a product conforming to MIL-C 83503/7A.

VALVE NUMBERING ORDER

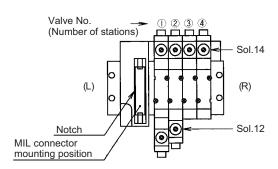


- (Note) Internal wiring of manifold is connected to Sol.14, Sol.12 and flat cable connector terminal on common specifications.
 - Count the number of stations from the L side of flat cable connector mounting position.

Example :1-station, 2-station, · · · · n-station

- Maximum number of stations is 12 for manifold and 24 for solenoid.
- For your specific requirement for more than the maximum number of stations, contact KURODA Pneumatics Ltd..
- When wiring with flat cable, be careful of external surge voltage.



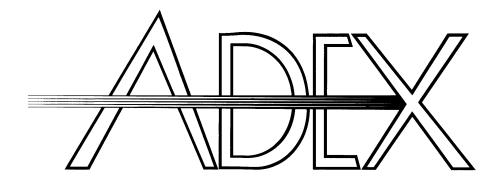



PR TYPE



5 port pilot operated solenoid valve

A05P Series

Rubber Seal/Sub-base Mounting type

| A05PS25 | 2-position Single solenoid |
|---------|-------------------------------|
| A05PD25 | 2-position Double solenoid |
| A05PD35 | 3-position Closed center |
| A05PE35 | 3-position Exhaust center |
| A05PO35 | 3-position Pressure center |



Specifications

| Model No. | | | Unit | A05PS25 | A05PD25 | A05PD35 | A05PE35 | A05PO35 | |
|---|---------------|----------|------------|---------------------------------------|---------|--------------|---------------|---------|--|
| Fluid | | | | Non-lubricated/lubricated air | | | | | |
| Port size | | | | | | Rc 1/8 | | | |
| Effective area | a | | mm² | 5. | 8 | 4. | .5 | 6.7 | |
| Cv value | | | | 0.3 | 32 | 0.25 | | 0.37 | |
| Operating ambi | ent tempe | rature | $^{\circ}$ | | | −5~50 | | | |
| Pressure ran | 70 | | MD | 0.15~0.7 | 0.1~0.7 | 0.2~0.7 | | | |
| riessule iali | ye | | MPa | −0.1~0.7 For external pilot operation | | | | | |
| Maximum fre | quency | | cycle/min | 60 | 0 | | 500 | | |
| Response time | | ON | S | 0.010 | 0.010 | | 0.010 | | |
| | DC | OFF | s | 0.010 (0.016) | _ | | 0.015 (0.021) | | |
| Pilot air exha | ust | | | Captured exhaust | | | | | |
| Manual overr | ide | | | Screwdriver-operated locking button | | | | | |
| Mounting position | | | | Free | | | | | |
| Shock resistance, vibration resistance m/s² | | | m/s² | 150/30 | | | | | |
| | Without s | sub-base | g | 52 | 67 | 67 69 | | | |
| Mass | With sub-base | | g | 108 | 126 | 128 | | | |


- (Note) · Service kit not available
 · When temperature of valve site goes down below 5 °C, complete dry air should be supplied to prevent from freezing.
 · Pressure range of external pilot supply: 0.25~0.7MPa
 · Response time in bracket () shows with surge suppressor.
 · Response time shown above is in accordance with JIS B 8375.
 · Effective area shown above is a value between ports 1 and 2, 4.

Electrical Specifications

| Rated voltage | | DC | V | 24 |
|---------------------------------|---|-------|-------------|--|
| Permissible voltage fluctuation | | % | +10, -10 | |
| Power consumption | D | С | W | 0.6 (with indicator light and surge suppressor), 0.55 (without indicator light and surge suppressor) |
| Grade of Insulation | | | JIS grade E | |
| Wiring | | iring | | Plug-in connector |
| Surge suppressor | | | Diode | |
| Indicator light | | | LED | |



Ordering Instructions

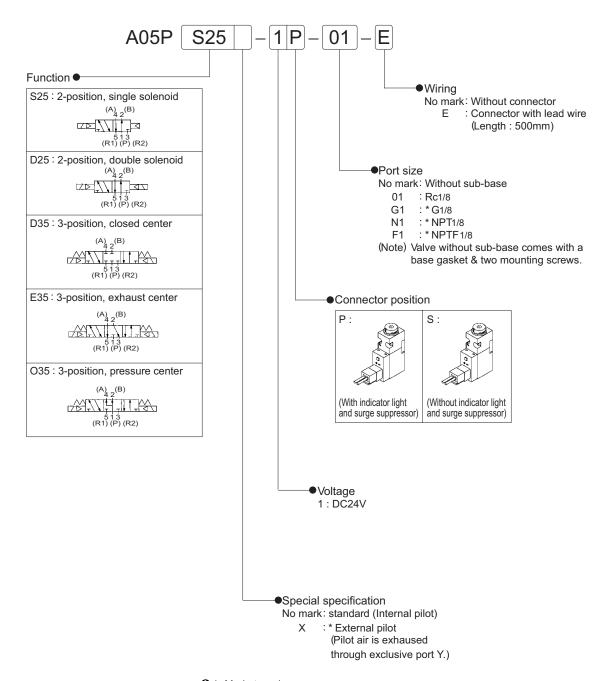


*: Made to order




Optional Accessories and Spare parts


● Connector with lead wire

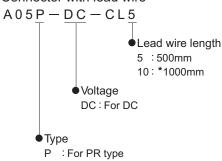




(Note) For common use with PR type of A05 and A12

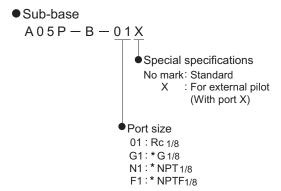

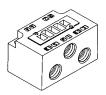


Locking cover

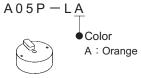

(Note) For common use with all A05 and A12

Tag for solenoid valve

A05P-N (Pack of 10)

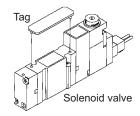


(Note) For common use with sub-base mounted type of A05 and A12

(Note) For common use with A05P


*: Made to order

Material Specification


2-position Single solenoid

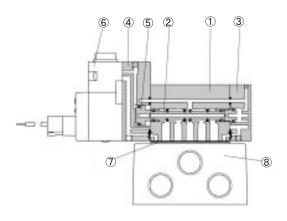

2-position Double solenoid

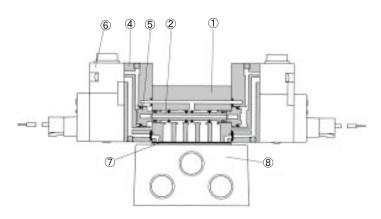

3-position Closed center 3-position Exhaust center 3-position Pressure center

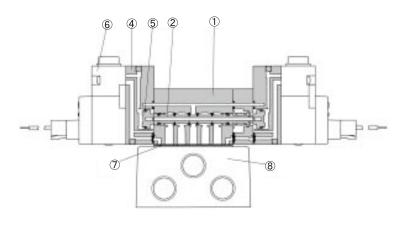


Main Components


| No. | Description | Material |
|-----|----------------|-----------------------|
| 1 | Body | Zinc die-casting |
| 2 | Spool ass'y | Aluminium/NBR |
| 3 | End cover | Resin |
| 4 | Piston housing | Resin |
| 5 | Piston | Resin |
| 6 | Pilot valve | Refer to A00 Series |
| 7 | Base gasket | NBR |
| 8 | Sub-base | Aluminium die-casting |



Dimensions

●A05PS25 (Unit:mm)

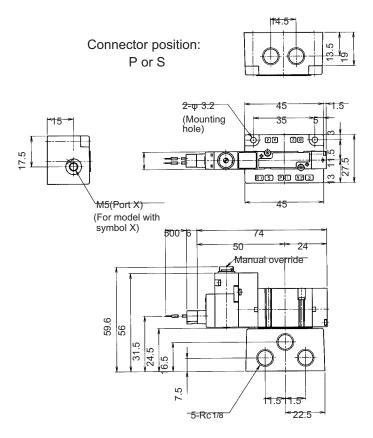


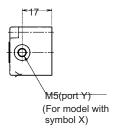

With locking cover




●A05PD25

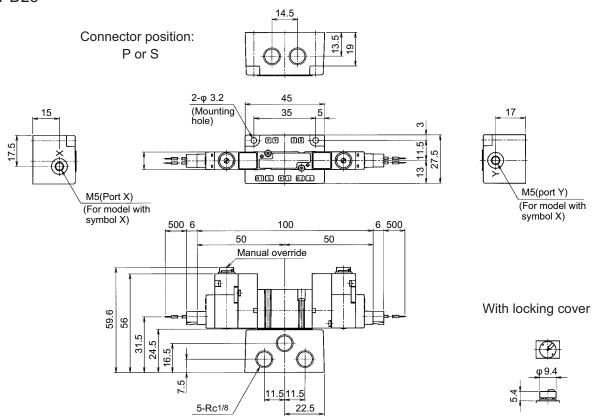



Dimensions
•A05PD35, A05PE35, A05PO35

(Unit: mm)

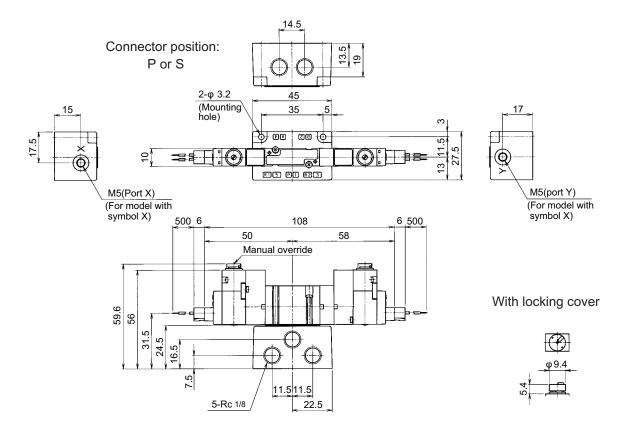



5 Port pilot operated solenoid valve

A05R Series

Rubber Seal/In-line Mounting type

| A05RS25 | 2-position Single solenoid |
|---------|-------------------------------|
| A05RD25 | 2-position Double solenoid |
| A05RD35 | 3-position Closed center |
| A05RE35 | 3-position Exhaust center |
| A05RO35 | 3-position Pressure center |



Spscifications

| Model No. | | | Unit | A05RS25 | A05RD25 | A05RD35 | A05RE35 | A05RO35 |
|---|-----------|--------|---------------------------------------|-------------------------------------|---------|-------------------|---------------|---------|
| Fluid | | | | Non-lubricated / lubricated air | | | | |
| Port size | | | | Port 2, 4 : M5, C4, C6 | | | | |
| 1 011 3120 | | | | | | Port 1, 3, 5 : M5 | | |
| Effective area | | | mm² | 4 | | 3 | .7 | 4.5 |
| Cv value | | | | 0.2 | 22 | 0 | 20 | 0.25 |
| Operating ambie | ent tempe | rature | ℃ | | | -5~50 | | |
| Dressure rand | 10 | | MD- | 0.15~0.7 | 0.1~0.7 | | 0.2~0.7 | |
| Pressure range | | MPa | −0.1~0.7 For external pilot operation | | | | | |
| Maximum free | quency | | cycle/min | 600 | | 500 | | |
| Response | | ON | s | 0.010 | 0.010 | | 0.010 | |
| time | | OFF | s | 0.010 (0.016) | _ | | 0.015 (0.021) | |
| Pilot air exhau | ıst | | | Individual exhaust | | | | |
| Manual override | | | | Screwdriver-operated locking button | | | | |
| Mounting position | | | | Free | | | | |
| Shock resistance, vibration resistance m/s² | | | | 150/30 | | | | |
| N.4 | | | g | 59 | 76 | | 78 | |

(Note) · Service kit not available


- When temperature of valve site goes down below 5°C, complete dry air should be supplied to prevent from freezing.
 Pressure range of external pilot supply: 0.25 ~ 0.7MPa
 Response time in bracket () shows with surge suppressor.
 Response time shown above is in accordance with JIS B 8375.
 Effective area shown above is a value between ports 1 and 2, 4.

Electrical Specifications

| Rated voltage | DC | V | 24 |
|---------------------------------|----|----------------|--|
| Permissible voltage fluctuation | | % | +10, -10 |
| Power consumption DC | | W | 0.6 (with indicator light and surge suppressor), 0.55 (without indicator light and surge suppressor) |
| Grade of Insulation | | | JIS grade E |
| Wiring | | | Plug-in connector |
| Surge suppressor | | | Diode |
| Indicator light | | ator light LED | |




Ordering Instructions

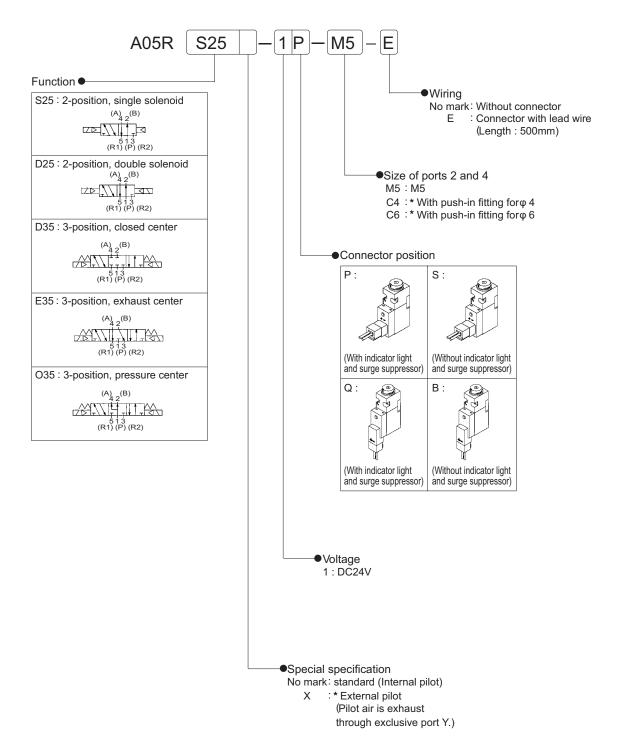

*: Made to order




Optional Accessories and Spare parts

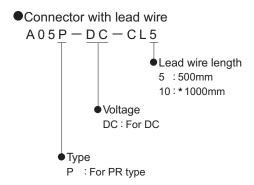





(Note) For common use with PR type of A05 and A12

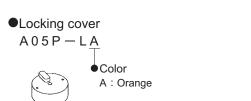



(Note) For common use with all A05 and A12

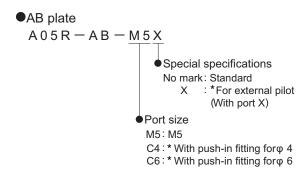


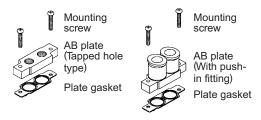

(Note) Gasket & mounting screws are supplied For common use with A05R

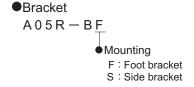

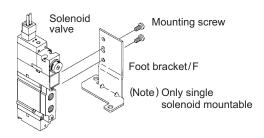

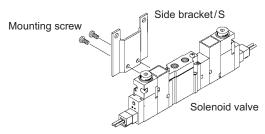


*: Made to order




Material Specification


2-position Single solenoid

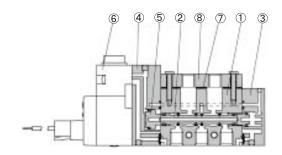

2-position Double solenoid

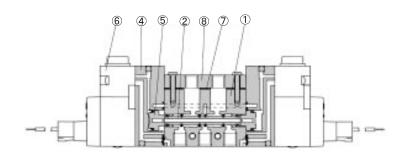

3-position Closed center 3-position Exhaust center 3-position Pressure center

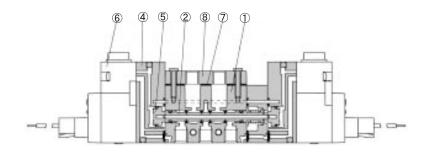


Main Components

| No. | Description | Material |
|-----|----------------|-----------------------|
| 1 | Body | Zinc die-casting |
| 2 | Spool ass'y | Aluminium/NBR |
| 3 | End cover | Resin |
| 4 | Piston housing | Resin |
| (5) | Piston | Resin |
| 6 | Pilot valve | Refer to A00 Series |
| 7 | Plate gasket | NBR |
| 8 | AB plate | Aluminium die-casting |




Dimensions ●A05RS25

(Unit: mm)

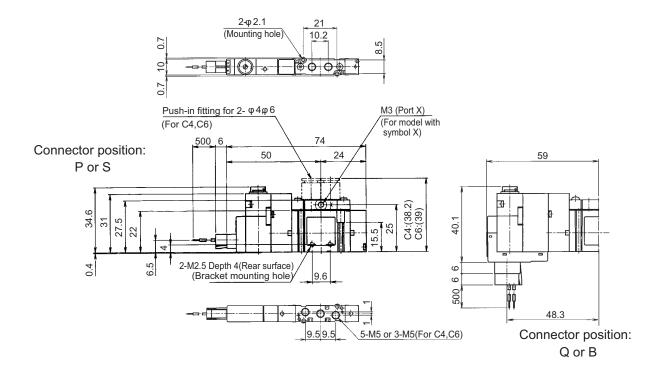


With locking cover



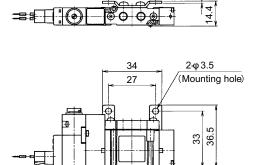

With side bracket

With foot bracket

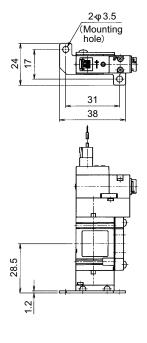




A05R Series

Dimensions ●A05RD25


(Unit: mm)

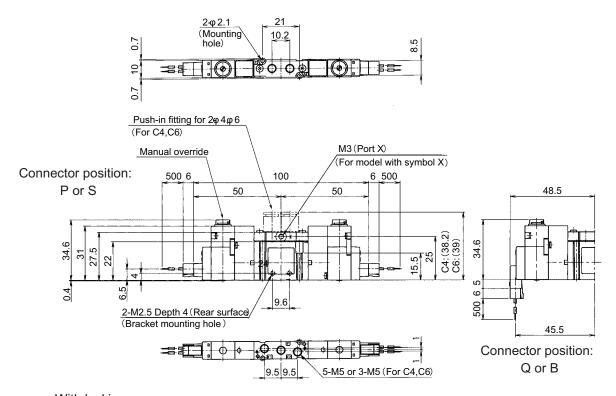


With locking cover



With side bracket

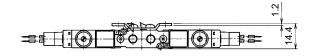

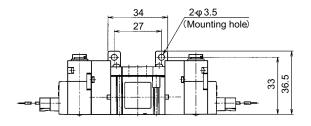




A05R Series


Dimensions •A05RD35, A05RE35, A05RO35


(Unit: mm)

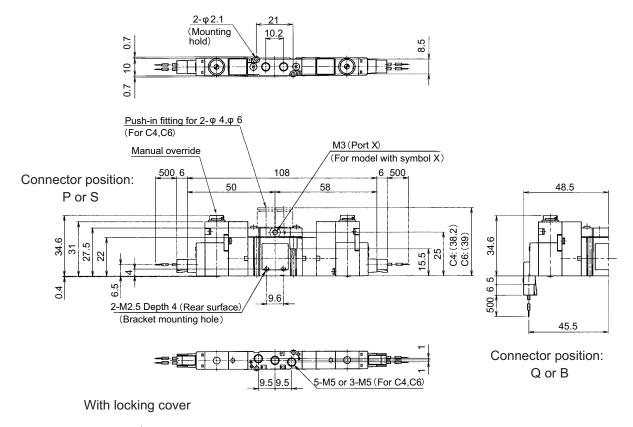



With side bracket

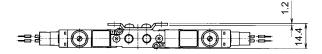

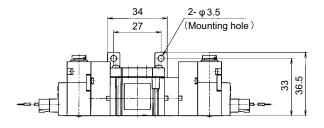



Individual wiring type manifold

MF()-A05R


Bar type

MFC — A05P Common SUP, Common EXH Ports 2 & 4 on side Compact type

MFS -A05P Common SUP, Common EXH Ports 2 & 4 on side

MFX — A05P Common SUP, Common EXH Common external pilot Ports 2 & 4 on side

 $MFU\square - A05R \begin{array}{l} \text{Common SUP, Common EXH} \\ \text{Ports 2 \& 4 on valve body} \end{array}$

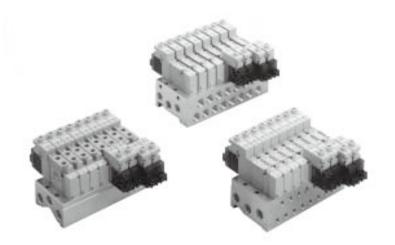

Manifold Specifications

| | | | For A05P Series | | For A05R Series | | |
|--------------------------|---------------|---|---|--|---|--|--|
| Type of manifold | | MFC□-A05P | MCS□-A05P | MCX□-A05P | MCU□-A05R | | |
| | | Common SUP, Common EXH Pilot valve captured exhaust Ports 2 & 4 on side Compact type | Common SUP, Common EXH Pilot valve captured exhaust Ports 2 & 4 on side | Common SUP, Common EXH Common external pilot Pilot valve captured exhaust Ports 2 & 4 on side | Common SUP, Common EXH Pilot valve captured exhaust Ports 2 & 4 on valve body | | |
| | Ports 1, 3, 5 | Rc1/8 | Rc1/8 | Rc1/8 | Rc1/8 | | |
| Port size | Ports 2, 4 | M5, C4, C6 | Rc1/8 | Rc1/8, C4, C6 | M5, C4, C6 | | |
| FUIT SIZE | Port Y | _ | _ | M5 | _ | | |
| | Port X | _ | _ | M5 | _ | | |
| Number of s | tations | 2~20 | | | | | |
| Mounting | | Direct mount | | | | | |
| | | A05PS25 | A05PS25 | A05PS25X | A05RS25 | | |
| | | A05PD25 | A05PD25 | A05PD25X | A05RD25 | | |
| Mountable solenoid valve | | A05PD35 | A05PD35 | A05PD35X | A05RD35 | | |
| | | A05PE35 | A05PE35 | A05PE35X | A05RE35 | | |
| | | A05PO35 | A05PO35 | A05PO35X | A05RO35 | | |
| Blank plate | | | A05P-BP | | A05R-BP | | |



A05P

(Note) External pilot valve is available only when it is mounted on MFX.

Ordeing Instruction

Manifold for A05P Series MFC |7|-A05P M5 Type of manifold • Option 1 : With bracket MFC: Common SUP, Common EXH В No mark: Without bracket Ports 2 & 4 on side (Note) Bracket can be mounted Compact type only when single solenoid is MFS: Common SUP, Common EXH mounted on MFC, MFS type. Ports 2 & 4 on side MFX: Common SUP, Common EXH Size of Ports 2 and 4 Common external pilot M5: M5 Ports 2 & 4 on side 01 : Rc1/8 C4: *With push-in fitting for ϕ 4 Number of stations • C6: *With push-in fitting for ϕ 6 2 : 2 station Type | M5 | 01 | C4 | MFC 0 20 : 20station

MFS

MFX


0

0 0 0

(Note) When using G, NPT, NPTF threads, consult KURODA Pneumatics Ltd.

Mountable solenoid valve (For details refer to Pages 26~28.)

Mountable solenoid valve series

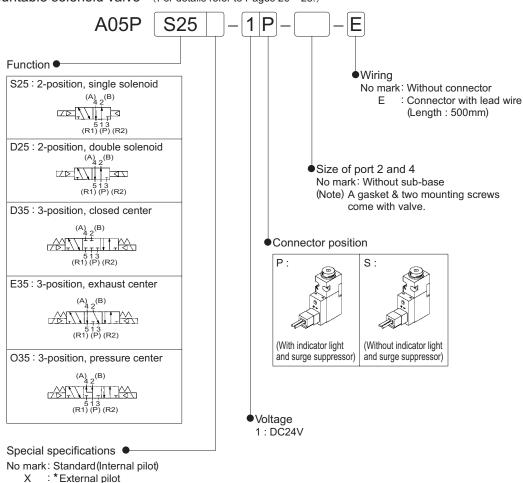



Ordering Instruction

20 : 20 station

MANIFOLD FOR Series

MFU 7 — A05R — M5

Type of manifold

Size of A and B ports

M5: M5

C4: *With push-in fitting for φ 4


C6: *With push-in fitting for φ 6

Number of stations

Mountable solenoid valve series


A05R

Mountable solenoid valve (For details refer to Pages 32~34.)

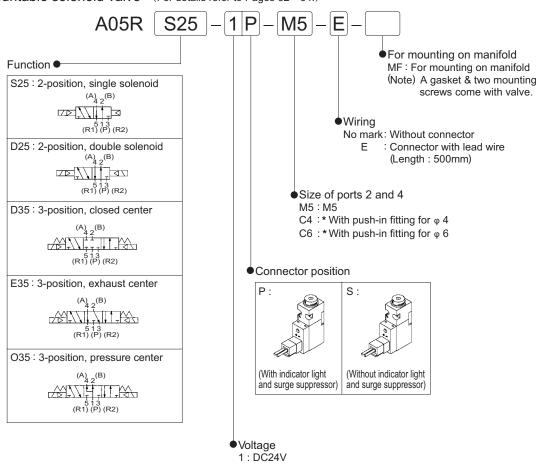




Optional Accessories and Spare parts

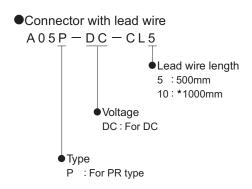




(Note) For common use with PR type of A05 and A12

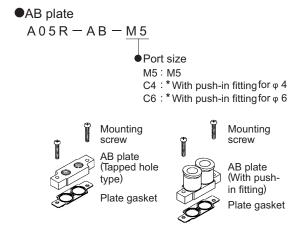


(Note) Gasket & mounting screws are supplied For common use with A05R

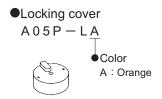



(Note) For common use with all A05 and A12


Tag for solenoid valve A05P - N

(Note) For common use with sub-base mountig type of A05 and A12

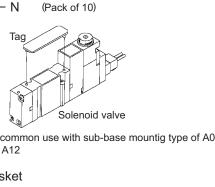

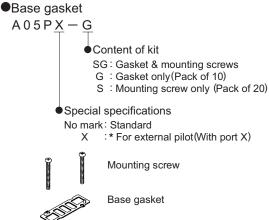

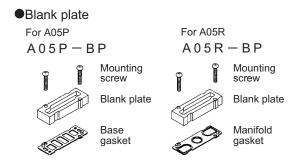

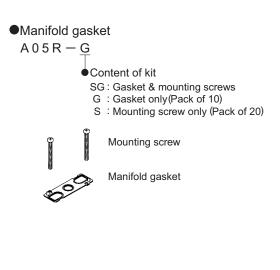



Dimensions


●MFC□-A05P-M5(C4, C6)

(Unit: mm)



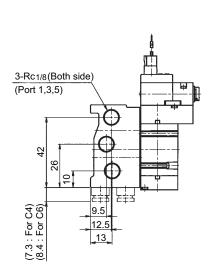

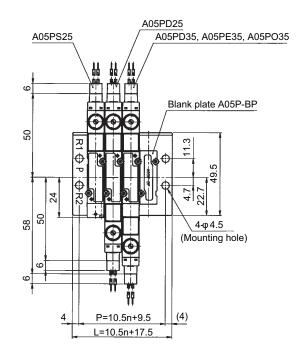

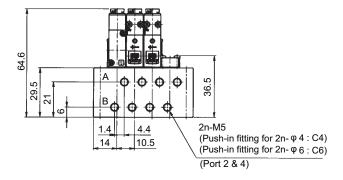


Dimensions


●MFC□-A05P-M5 (C4, C6)-B


(Unit: mm)





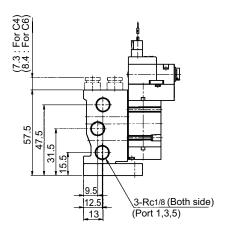

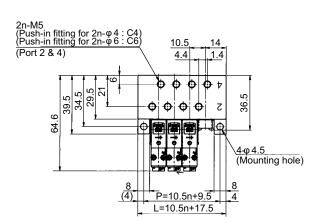

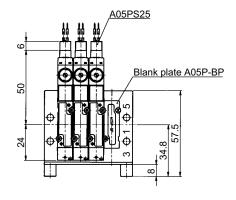




Dimensions

●MFS□-A05P-01, MFX□-A05P-01 (C4, C6)

(Unit: mm)



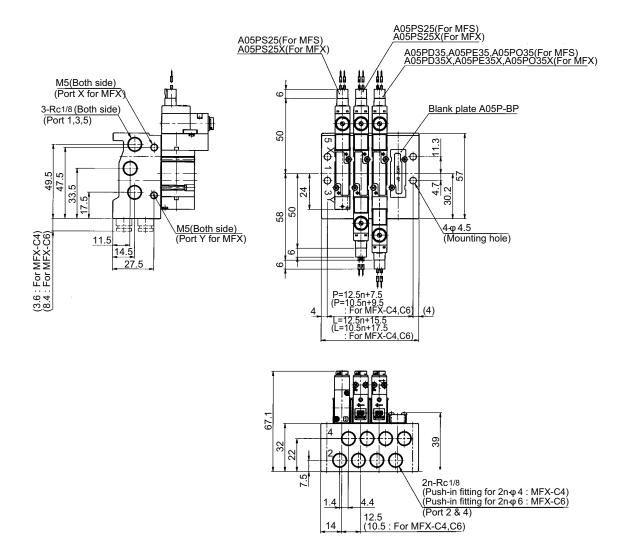






Dimensions ●MFS□-A05P-01-B

(Unit: mm)



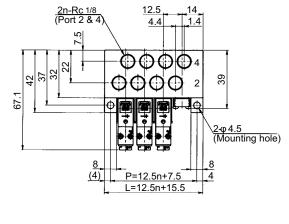

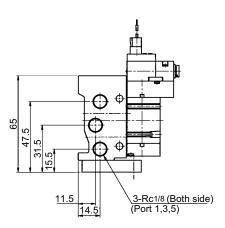

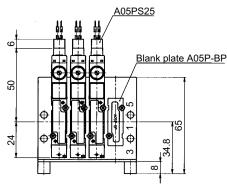





Dimensions


●MFU□-A05R-M5 (C4, C6)

(Unit: mm)



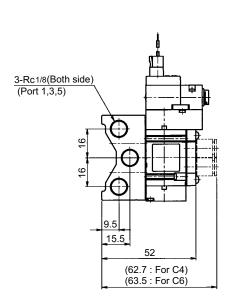

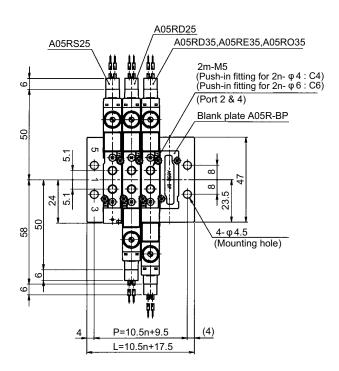

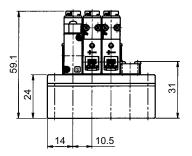

Multipin connector type manifold

MC○-A05₽

Bar type

MCC - A05P Common SUP, Common EXH Ports 2 & 4 on side Compact type

 $MCS \square -A05P \stackrel{Common SUP, Common EXH}{\text{Ports 2 \& 4 on side}}$

MCX — A05P Common SUP, Common EXH Common external pilot Ports 2 & 4 on side

MCU - A05R Common SUP, Common EXH Ports 2 & 4 on valve body



Manifold Specifications


| | | | For A05P Series | | For A05R Series | | |
|--------------------------|------------|---|---|--|---|--|--|
| | | MCC□-A05P MCS□-A05P | | MCX□-A05P | MCU□-A05R | | |
| Type of manifold | | Common SUP, Common EXH Pilot valve captured exhaust Ports 2 & 4 on side Compact type | Common SUP, Common EXH Pilot valve captured exhaust Ports 2 & 4 on side | Common SUP, Common EXH Common external pilot Pilot valve captured exhaust Ports 2 & 4 on side | Common SUP, Common EXH Pilot valve captured exhaust Ports 2 & 4 on valve body | | |
| Ports 1, 3, 5 | | Rc1/8 | Rc 1/8 | Rc1/8 | Rc1/8 | | |
| Dort oizo | Ports 2, 4 | M5, C4, C6 | Rc 1/8 | Rc1/8, C4, C6 | M5, C4, C6 | | |
| Port size | Port Y | _ | _ | M5 | _ | | |
| | Port X | _ | _ | M5 | _ | | |
| Number of s | stations | 2~12 | | | | | |
| Mounting | | Direct mount | | | | | |
| Mountable solenoid valve | | A05PS25 A05PD25 A05PD35 | A05PS25 A05PD25 A05PD35 | A05PS25X A05PD25X A05PD35X | A05RS25 A05RD25 A05RD35 | | |
| | | A05PE35 A05PO35 | A05PE35 A05PO35 | A05PE35X A05PO35X | A05RE35 A05RO35 | | |
| Blank plate | | | A05PG-BP | 1 | A05RG-BP | | |

Wiring


When doing wiring work, be sure to turn off power beforehand. For wiring instructions, refer to Pages 23 and 24.




Ordering Instructions

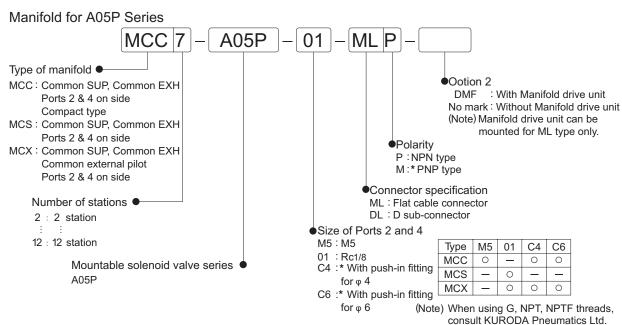

Mountable solenoid valve (For details refer to Pages 26~28.)

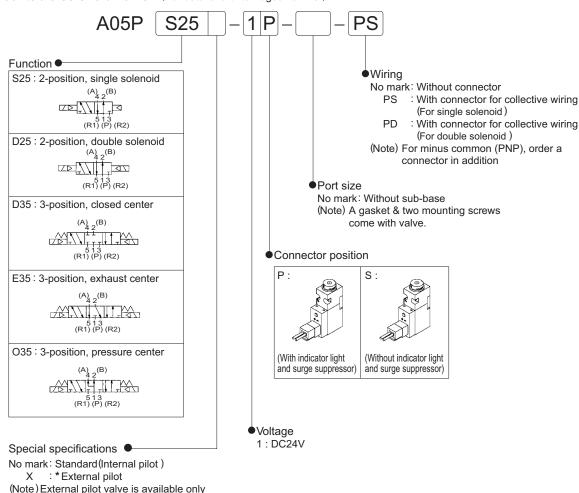


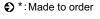




when it is mounted on MCX.

Ordering Instructions

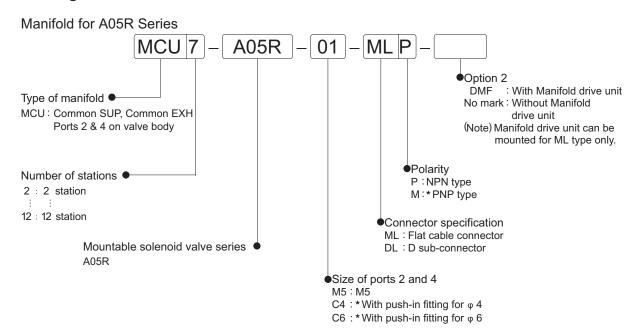


Mountable solenoid valve (For details refer to Pages 32~34.)

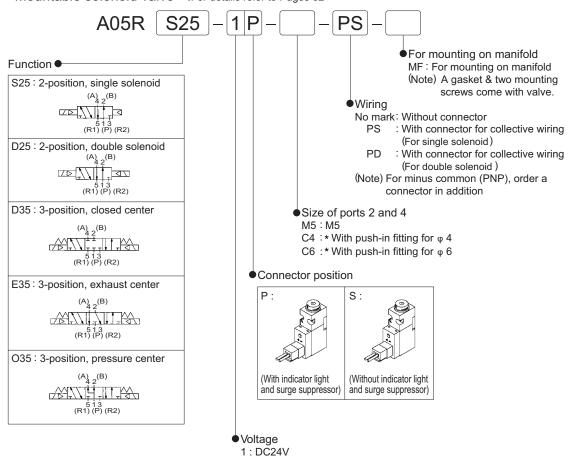





Optional Accessories and Spare parts

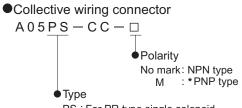

PS : For PR type single solenoid PD : For PR type double solenoid

For PR type single solenoid

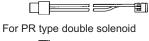


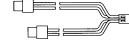




(Note) For common use with all A05 and A12


Tag for solenoid valve

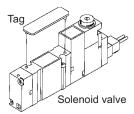



(Note) For common use with sub-base mountig type of A05 and A12


●Base gasket

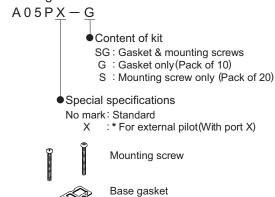

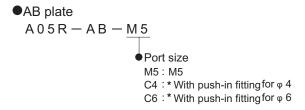

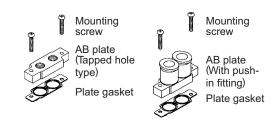

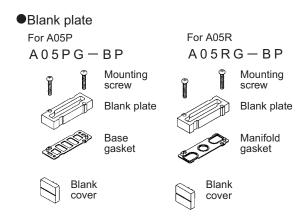

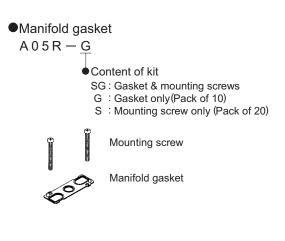



Dimensions

● MCC □-A05-M5 (C4, C6)-DL

(Unit: mm)

With locking cover (51.5)A05PS25 A05PD25 D sub-connector(25P) A05PD35,A05PE35,A05PO35 Blank plate A05PG-BP 3-Rc1/8(Both side) (Port 1,3,5) 20 58 (7.3 : For C4) (8.4 : For C6) 4φ4.5 (Mounting hole) (4) P=12.5n+34.5 L=12.5n+42.5 2n-M5 (Push-in fitting for $2n-\phi 4$: C4) (Push-in fitting for $2n-\phi 6$: C6) (Port 2 & 4) 36.5 6 Φ Φ 38




Dimensions

●MCC□-A05P-M5 (C4, C6)-ML

(Unit: mm)



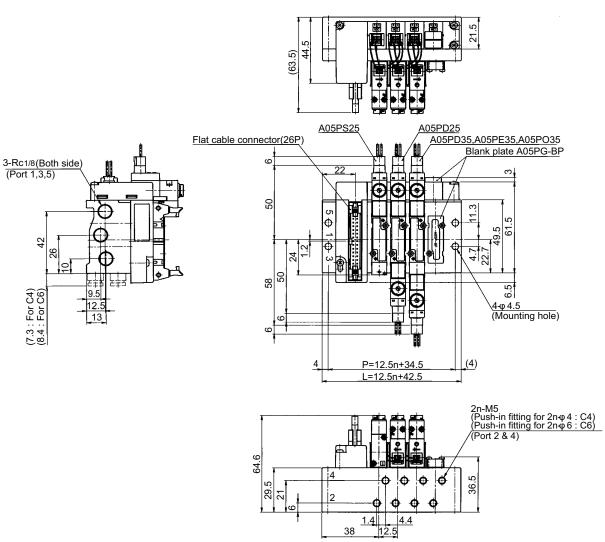



Dimensions

●MCS□-A05P-01-DL, MCX□-A05P-01 (C4, C6)-DL

(Unit: mm)

With locking cover (54)A05PD25(For MCS) A05PD25X(For MCX) A05PS25(For MCS) A05PS25X(For MCX) D sub cable connector(25P) A05PD35,A05PE35,A05PO35(For MCS) A05PD35X,A05PE35X,A05PO35X(For MCS) M5(Both side) (X port for MCX) Blank plate A05PG-BP 3-Rc1/8 (Both side) (P, R1, R2 port) 50 49.5 47.5 Φ 33.5 50 \4-φ4.5 (Mounting hole) M5(Both side) <u>11.5</u> (Y port for MCX) (7.3 : For MCX-C4) (8.4 : For MCX-C6) 14.5 27.5 (4) P=12.5n+34.5 L=12.5n+42.5 2n-Rc1/8 (Push-in fitting for 2n-φ 4 : MCX-C4) (Push-in fitting for 2n-φ 6 : MCX-C6) (Port 2 & 4) 67. 39 38





Dimensions

●MCS□-A05P-01-ML, MCX□-A05P-01(C4, C6)-ML

(Unit: mm)



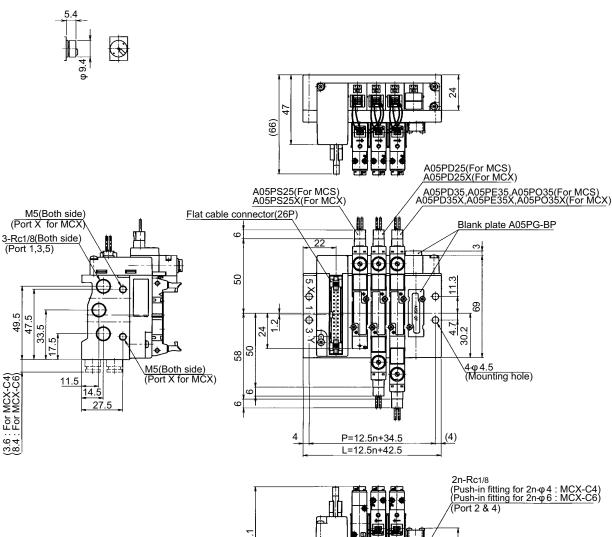

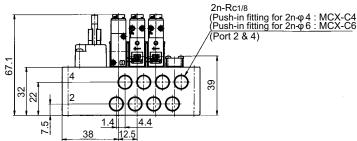





Dimensions

●MCU□-A05R-M5 (C4, C6)-DL

(Unit: mm)



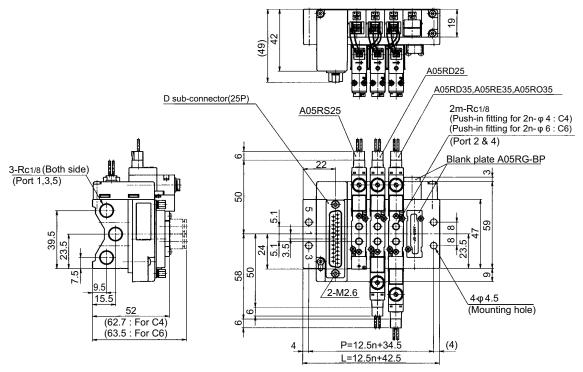

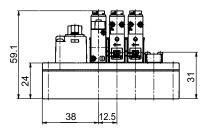





Dimensions

●MCU□-A05R-M5 (C4, C6)-ML

(Unit: mm)



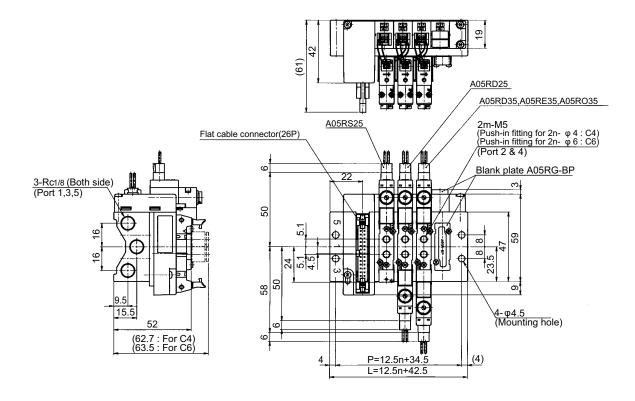

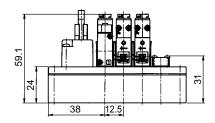



5 Port pilot operated solenoid valve

A12P Series

Rubber Seal/Sub-base Mounting type

| A12PS25 | 2-position Single solenoid |
|---------|-------------------------------|
| A12PD25 | 2-position Double solenoid |
| A12PD35 | 3-position Closed center |
| A12PE35 | 3-position Exhaust center |
| A12PO35 | 3-position Pressure center |



Specifications

| Model No. | | | Unit | A12PS25 | A12PD25 | A12PD35 | A12PE35 | A12PO35 |
|---|-----------|---------|-------|---------------------------------------|---------|---------|---------------|---------|
| Fluid | | | | Non-lubricated / lubricated air | | | | |
| Port size | | | | | | Rc1/8 | | |
| Effective area | l | | mm² | 11 | .1 | 7. | 6 | 14.1 |
| Cv value | | | | 0.0 | 61 | 0.4 | 42 | 0.78 |
| Operating ambi | ent tempe | rature | ℃ | | | -5~50 | | |
| D | | | MPa | 0.15~0.7 | 0.1~0.7 | | 0.2~0.7 | |
| Pressure ranç | Je | | IVIPa | −0.1~0.7 For external pilot operation | | | | |
| Maximum frequency cycle/min | | | | 600 | | 500 | | |
| Response | DC - | ON | s | 0.015 | 0.010 | | 0.012 | |
| time | | OFF | s | 0.018 (0.024) | _ | | 0.036 (0.042) | |
| Pilot air exha | ust | | | Captured exhaust | | | | |
| Manual overri | de | | | Screwdriver-operated locking button | | | | |
| Mounting pos | ition | | | Free | | | | |
| Shock resistance, vibration resistance m/s ² | | | m/s² | 150/30 | | | | |
| Mass | Without s | ub-base | g | 60 | 75 | | 79 | |
| Mass | With su | b-base | g | 143 | 161 | 166 | | |


- (Note) · Service kit not available
 · When temperature of valve site goes down below 5°C, complete dry air should be supplied to prevent from freezing.
 · Pressure range of external pilot supply : 0.25 ~ 0.7MPa
 · Response time in bracket () shows with surge suppressor.
 · Response time shown above is in accordance with JIS B 8375.
 · Effective area shown above is a value between ports 1 and 2, 4.

Electrical Specifications

| Rated voltage DC | | age DC | | 24 | |
|---------------------------------|--|-----------------|-------------|--|--|
| Permissible voltage fluctuation | | % | +10, -10 | | |
| Power consumption | | | W | 0.6 (with indicator light and surge suppressor), 0.55 (without indicator light and surge suppressor) | |
| Grade of Insulation | | | JIS grade E | | |
| Wiring | | /iring | | Plug-in connector | |
| Surge suppressor | | urge suppressor | | Diode | |
| Indicator light | | | | LED | |
| | | | | | |



Ordering Instructions

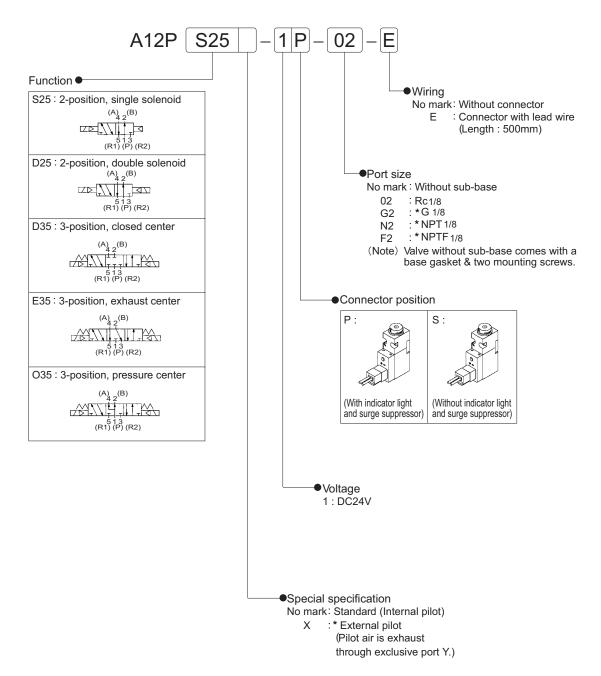

*: Made to order




Optional Accessories and Spare parts

Connector with lead wire A 0 5 P — D C — C L 5 Lead wire length 5 : 500mm 10:*1000mm Voltage DC: For DC



P : For PR type


(Note) For common use with PR type of A05 and A12

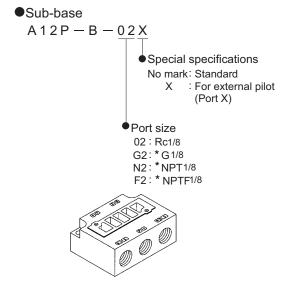


●Locking cover A 0 5 P − L A Color A: Orange

(Note) For common use with all A05 and A12

Tag for solenoid valve

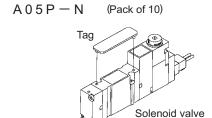


(Note) For common use with sub-base mounting type of A05 and A12

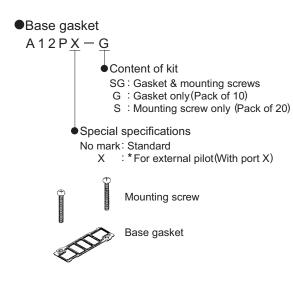




Material Specification


2-position Single solenoid

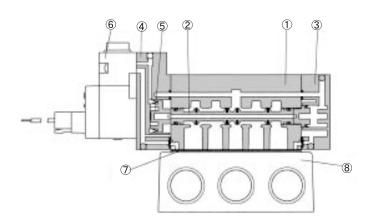

2-position Double solenoid

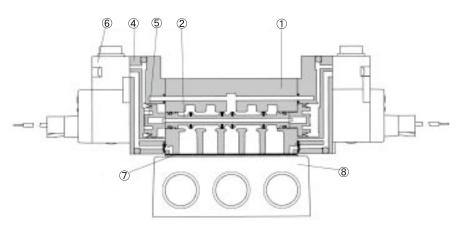

3-position Closed center 3-position Exhaust center 3-position Pressure center

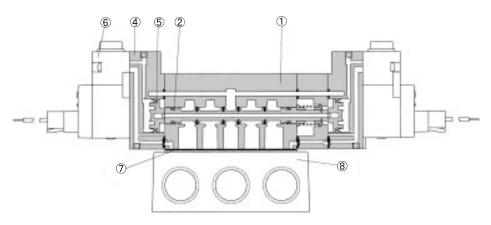


Main Components

| No. | Description | Material | | |
|-----|----------------|-----------------------|--|--|
| 1 | Body | Aluminium die-casting | | |
| 2 | Spool ass'y | Aluminium/NBR | | |
| 3 | End cover | Resin | | |
| 4 | Piston housing | Resin | | |
| (5) | Piston | Resin | | |
| 6 | Pilot valve | Refer to A00 Series | | |
| 7 | Base gasket | NBR | | |
| 8 | Sub-base | Aluminium die-casting | | |



Dimensions ●A12PS25

(Unit: mm)

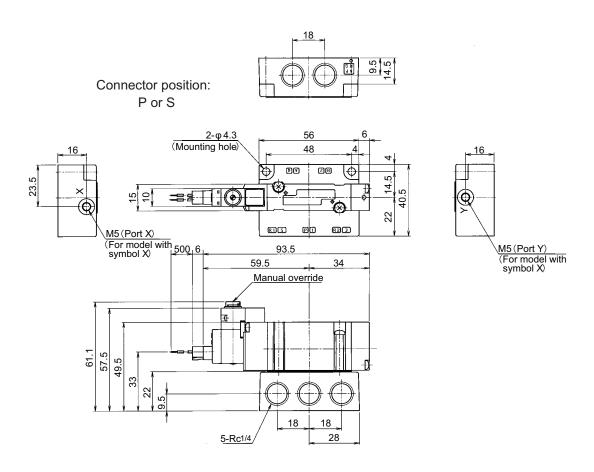






Dimensions ●A12PD25

(Unit: mm)

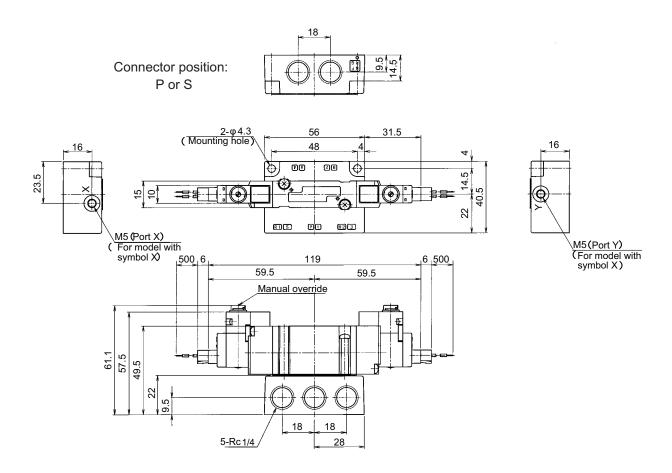






Dimensions

•A12PD35, A12PE35, A12PO35

(Unit: mm)

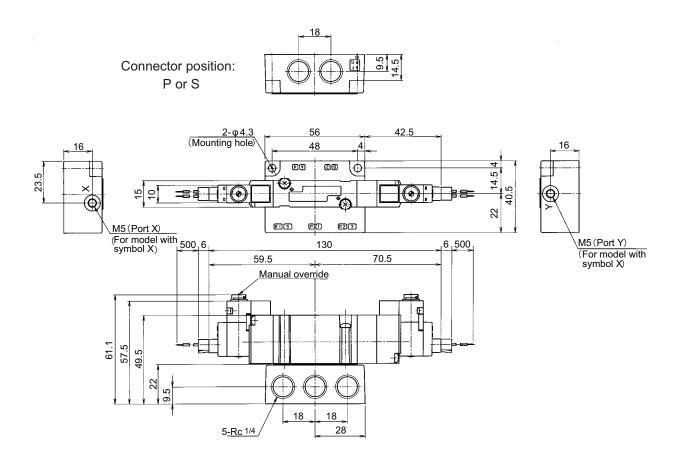





5 Port pilot operated solenoid valve

A12R Series

Rubber Seal/In-line Mounting type

| A12RS25 | 2-position Single solenoid |
|---------|-------------------------------|
| A12RD25 | 2-position Double solenoid |
| A12RD35 | 3-position Closed center |
| A12RE35 | 3-position Exhaust center |
| A12RO35 | 3-position Pressure center |



Specifications

| Model No. | | | Unit | A12RS25 | A12RD25 | A12RD35 | A12RE35 | A12RO35 | | |
|----------------------------------|----------------|--------|-----------------|---------------------------------------|----------------------|-----------------------|---------------|---------|--|--|
| Fluid | | | | | Non- | lubricated / lubricat | ed air | | | |
| Port size | | | | Port 2, 4 : Rc1/8 , C6, C8 | | | | | | |
| Port size | | | | | Port 1, 3, 5 : Rc1/8 | | | | | |
| Effective area | Į. | | mm ² | 8. | 8 | 8 | .5 | 12 | | |
| Cv value | | | | 0.4 | 18 | 0.4 | 46 | 0.66 | | |
| Operating ambie | ent tempe | rature | ℃ | | | -5~50 | | | | |
| D | | | MPa | 0.15~0.7 0.1~0.7 | | 0.2~0.7 | | | | |
| Pressure rang | je | | IVIPA | −0.1~0.7 For external pilot operation | | | | | | |
| Maximum fred | quency | | cycle/min | 600 | | 500 | | | | |
| Response | D.0 | ON | S | 0.015 | 0.010 | | 0.012 | | | |
| time | DC | OFF | s | 0.018 (0.024) | _ | | 0.036 (0.042) | | | |
| Pilot air exhau | ust | | | Individual exhaust | | | | | | |
| Manual overri | de | | | Screwdriver-operated locking button | | | | | | |
| Mounting pos | ition | | | Free | | | | | | |
| Shock resista vibration resis | nce, stance | | m/s² | 150/30 | | | | | | |
| Mass | | | g | 83 | 101 | | 106 | | | |

- (Note) · Service kit not available · When temperature of valve site goes down below 5 °C , complete dry air should be supplied to prevent from freezing. · Pressure range of external pilot supply : 0.25 ~ 0.7MPa · Response time in bracket () shows with surge suppressor. · Response time shown above is a value between ports 1 and 2 · 4


 - · Effective area shown above is a value between ports 1 and 2, 4.

Electrical Specifications

| Rated voltage DC | | V | 24 | | | |
|---------------------------------|---------------------|-----------------|-------------|--|--|-------------------|
| Permissible voltage fluctuation | | % | +10, -10 | | | |
| Power consumption | DC | | W | 0.6 (with indicator light and surge suppressor), 0.55 (without indicator light and surge suppressor) | | |
| Grade of Insul | Grade of Insulation | | | JIS grade E | | |
| Wiring | Wiring | | liring land | | | Plug-in connector |
| Surge suppressor | | urge suppressor | | Diode | | |
| Indicator light | | dicator light | | LED | | |
| Surge suppressor | | | Diode | | | |




Ordering Instructions

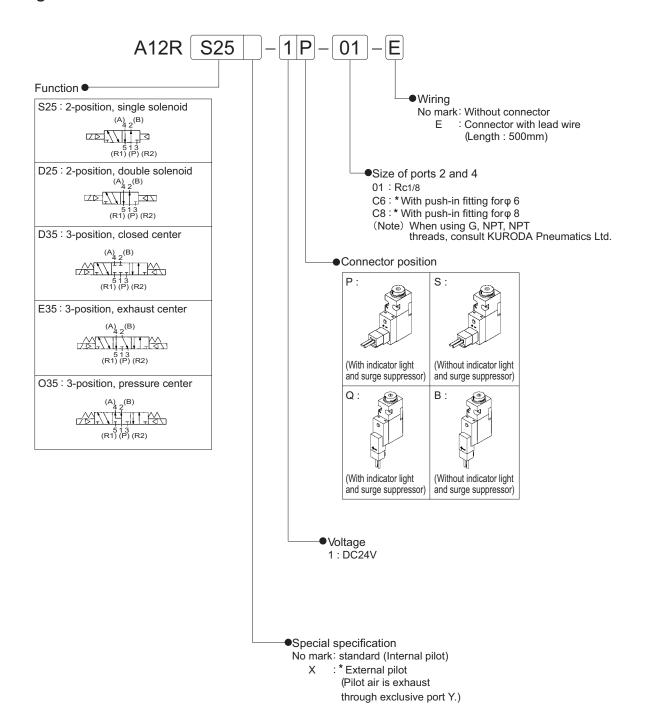

*: Made to order



Optional Accessories and Spare parts

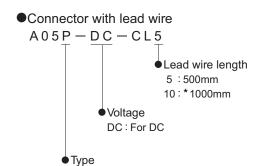

P: For PR type





(Note) For common use with PR type of A05 and A12


● Voltage convertor with connector Refer to page 16 for voltage convertor with connector.




(Note) For common use with all A05 and A12

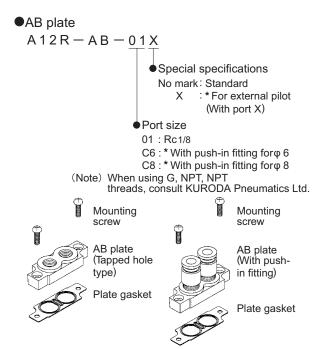

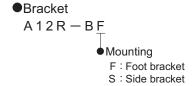

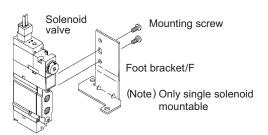

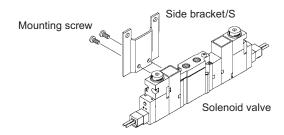


*: Made to order




Material Specification


2-position Single solenoid

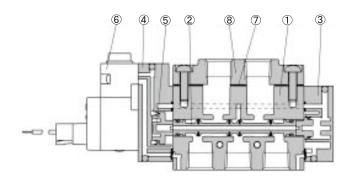

2-position Double solenoid

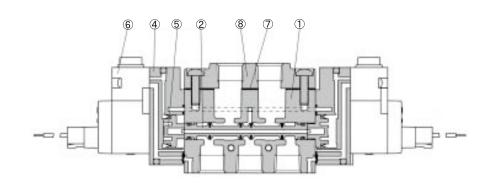

3-position Closed center 3-position Exhaust center 3-position Pressure center

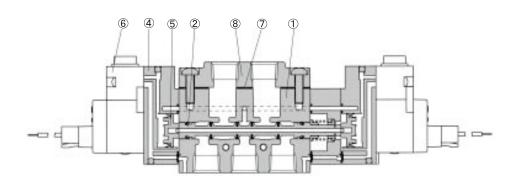


Main Components


| | • | | | |
|-----|----------------|-----------------------|--|--|
| No. | Description | Material | | |
| 1 | Body | Aluminium die-casting | | |
| 2 | Spool ass'y | Aluminium/NBR | | |
| 3 | End cover | Resin | | |
| 4 | Piston housing | Resin | | |
| 5 | Piston | Resin | | |
| 6 | Pilot valve | Refer to A00 Series | | |
| 7 | Plate gasket | NBR | | |
| 8 | AB plate | Aluminium die-casting | | |
| | | | | |



Dimensions ●A12RS25

(Unit: mm)

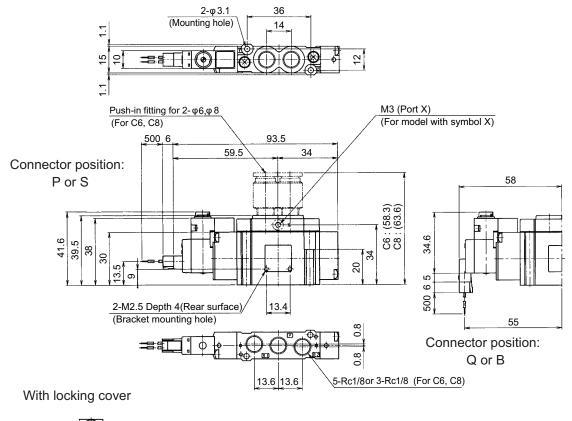


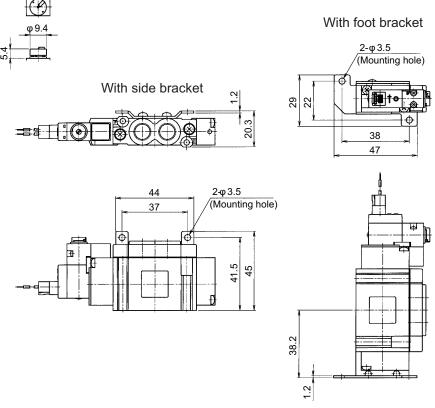





Dimensions ●A12RD24


(Unit:mm)

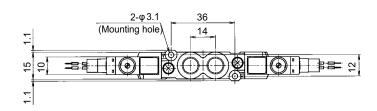


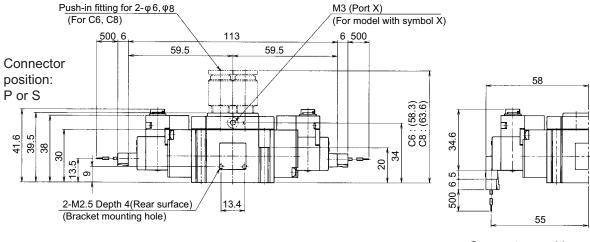

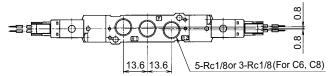

Connector position: Q or B

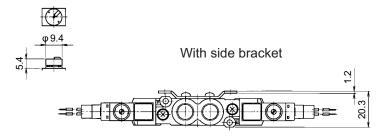


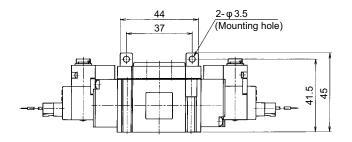




Dimensions •A12RD35, A12RE35, A12RO35

(Unit: mm)

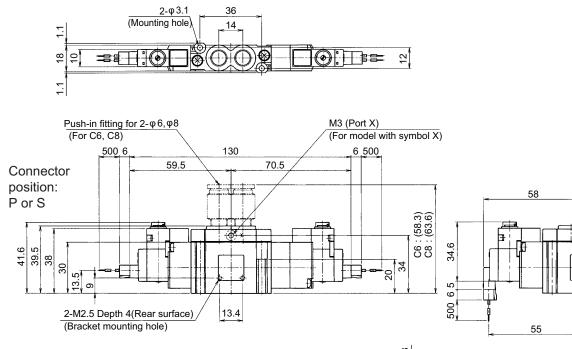

13.6 13.6 5-Rc1/8 or 3-Rc1/8 (For C6, C8)

Connector position: Q or B

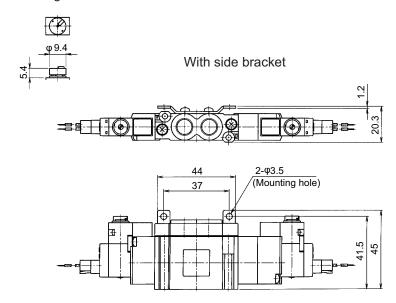

Individual wiring type manifold

MF — A12 R

Bar type

MFS -A12P Common SUP, Common EXH Ports 2 & 4 on side

MFX — -A12P Common SUP, Common EXH Common external pilot Ports 2 & 4 on side

MFU -A12R Common SUP, Common EXH Ports 2 & 4 on valve body



Manifold Specifications

| | | For A12 | P Series | For A12R Series | | |
|--------------------------|---------------|--|---------------|---|--|--|
| | | MFS□-A12P | MFX□-A12P | MFU□-A12R | | |
| Type of manifold | | Common SUP, Common EXH Pilot valve captured exhaust Ports 2 & 4 on side Common SUP, Common EXH Common SUP, Common EXH Common SUP, Common EXH Pilot valve captured exhaust Ports 2 & 4 on side | | Common SUP, Common EXH Pilot valve captured exhaust Ports 2 & 4 on valve body | | |
| | Ports 1, 3, 5 | Rc1/4 | Rc1/4 | Rc1/4 | | |
| Port size | Ports 2, 4 | Rc1/4, C6, C8 | Rc1/4, C6, C8 | Rc1/4, C6, C8 | | |
| Port Size | Port Y | _ | M5 | | | |
| | Port X | _ | M5 | _ | | |
| Number of | stations | 2~20 | | | | |
| Mounting | | Direct mount | | | | |
| Mountable solenoid valve | | A12PS25 A12PS25X A12PD25 A12PD25X A12PD35 A12PD35X A12PE35 A12PE35X A12PO35 A12PO35X | | A12RS25 A05RD25 A05RD35 A05RE35 A05RO35 | | |
| Blank plate | | A12I | P-BP | A12R-BP | | |



2 : 2 station


20 : 20 station

Ordering Instructions

Manifold for A12P Series A12P MFS 7 Type of manifold • Size of ports 2 and 4 01 : Rc1/8 C4 :* With push-in fitting for ϕ 6 MFS: Common SUP, Common EXH Ports 2 & 4 on side C6: *With push-in fitting for φ 8 MFX: Common SUP, Common EXH Common external pilot (Note) When using G, NPT, NPTF Ports 2 & 4 on side threads, consult KURODA Pneumatics Ltd. Number of stations • Mountable solenoid valve series

A12P

Mountable solenoid valve (For details refer to Pages 58~60.) E A₁₂P S25 Function • Wiring S25: 2-position, single solenoid No mark: Without connector (A) (B) : Connector with lead wire (Length: 500mm) D25: 2-position, double solenoid Port size No mark: Without sub-base (Note) A gasket & two mounting screws 5 1 3 (R1) (P) (R2) come with valve. D35: 3-position, closed center **♦**Connector position E35: 3-position, exhaust center (With indicator light (Without indicator light 513 (R1) (P) (R2) and surge suppressor) and surge suppressor) O35: 3-position, pressure center Voltage 1: DC24V Special specifications • No mark: Standard (Internal pilot) : *External pilot (Note) External pilot valve is available only

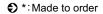





when it is mounted on MFX.

Ordering Instructions

Manifold for A12R Series

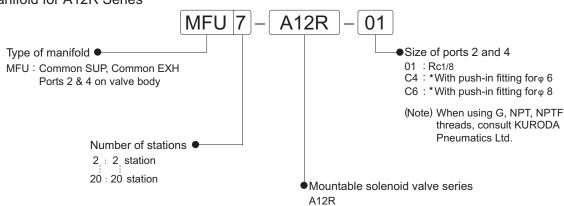

Mountable solenoid valve (For details refer to Pages 65~67.)

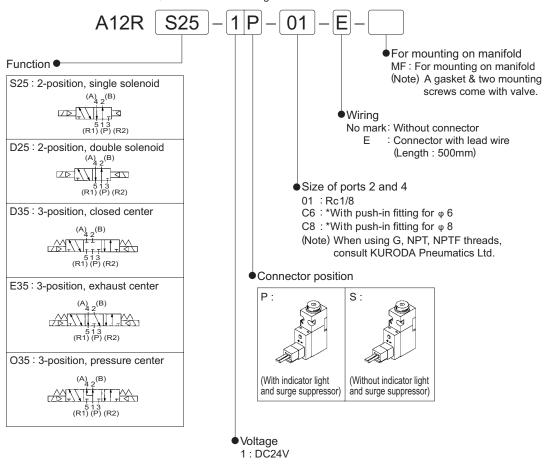







Optional Accessories and Spare parts



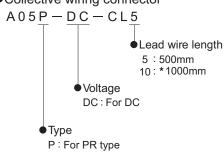




(Note) For common use with PR type of A05 and A12

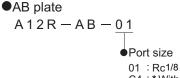


C4: *With push-in fitting for φ 6 C6 : * With push-in fitting for $\!\phi$ 8

(Note) When using G, NPT, NPTF

threads, consult KURODA Pneumatics Ltd.

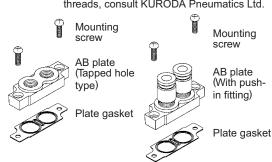


Locking cover

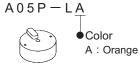


(Note) For common use with all A05 and A12

Tag for solenoid valve

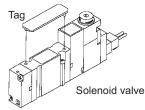


(Note) For common use with sub-base mountig type of A05, and A12


Base gasket

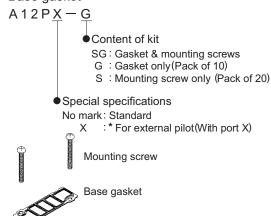

●Blank plate

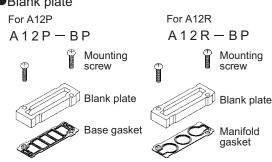

Manifold gasket

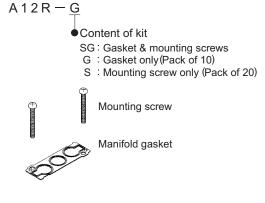


Dimensions

●MFS□-A12P-02 (C6, C8), MFX□-A12P-02 (C6, C8)

(Unit: mm)

With locking cover



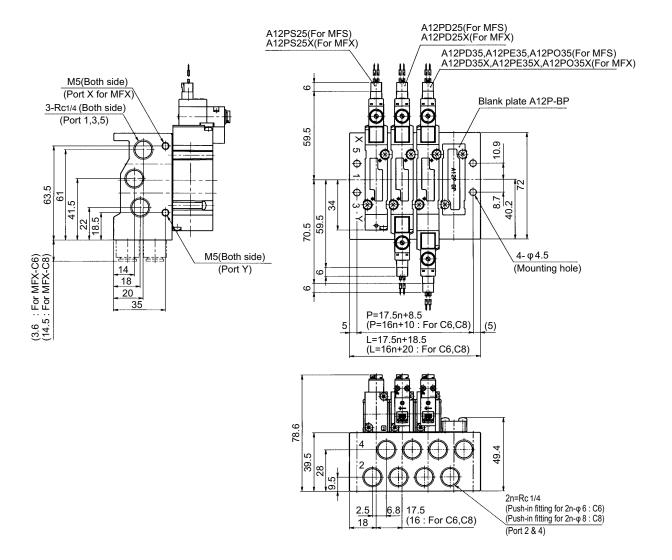




Dimensions


●MFU□-A12R-01 (C6, C8)


(Unit: mm)

With locking cover



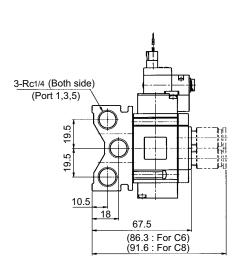

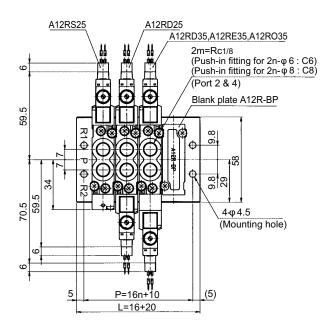

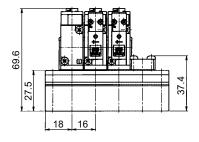



Multipin connector type manifold


MCO-A12R

Bar type

 $MCS \,\square\, \text{-A12P} \, {}^{\text{Common SUP, Common EXH}}_{\text{Ports 2 \& 4 on side}}$

MCX —-A12P Common SUP, Common EXH Common external pilot Ports 2 & 4 on side

 $MCU \square - A12R \stackrel{Common SUP, Common EXH}{\text{Ports 2 \& 4 on valve body}}$

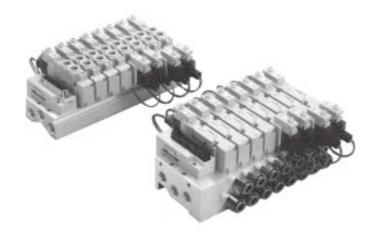

Manifold Specifications


| | | For A12 | P Series | For A12R Series |
|-------------|----------------|---|---|---|
| | | MCS□-A12P | MCX□-A12P | MCU□-A12R |
| Type of mar | nifold | Common SUP, Common EXH Pilot valve captured exhaust Ports 2 & 4 on side | Common SUP, Common EXH Common external pilot Pilot valve captured exhaust Ports 2 & 4 on side | Common SUP, Common EXF Pilot valve captured exhaust Ports 2 & 4 on valve body |
| | Ports 1, 3, 5 | Rc1/4 | Rc1/4 | Rc1/4 |
| Dort size | Ports 2, 4 | Rc1/4, C6, C8 | Rc1/4, C6, C8 | Rc1/8, C6, C8 |
| Port size | Port Y | _ | M5 | _ |
| | Port X | _ | M5 | _ |
| Number of | stations | | | |
| Mounting | | | Direct mount | |
| Mountable s | solenoid valve | A12PS25 A12PD25 A12PD35 A12PE35 A12PO35 | A12PS25X A12PD25X A12PD35X A12PE35X A12PO35X | A12RS25 A05RD25 A05RD35 A05RE35 A05RO35 |
| Blank plate | | A12P | PG-BP | A12RG-BP |

WIRING


When doing wiring work, be sure to turn off power beforehand. For wiring instructions, refer to Pages 23 and 24.



Ordering Instructions

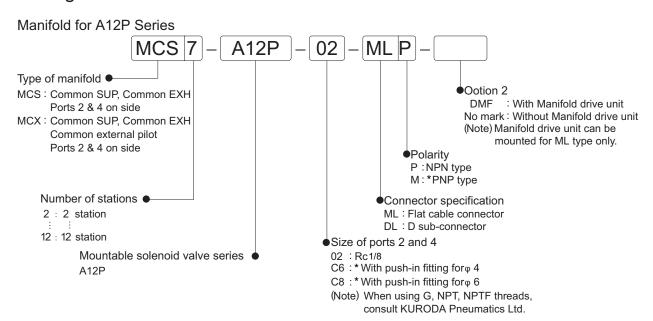


Mountable solenoid valve (For details refer to Pages 58~60.)

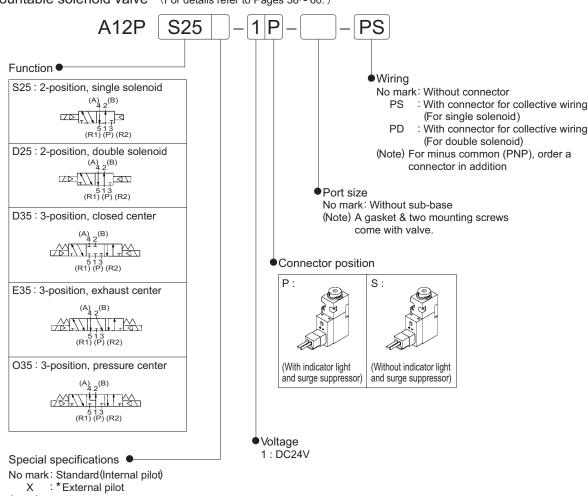


(Note) External pilot valve is available only when it is mounted on MCX.



Ordering Instructions

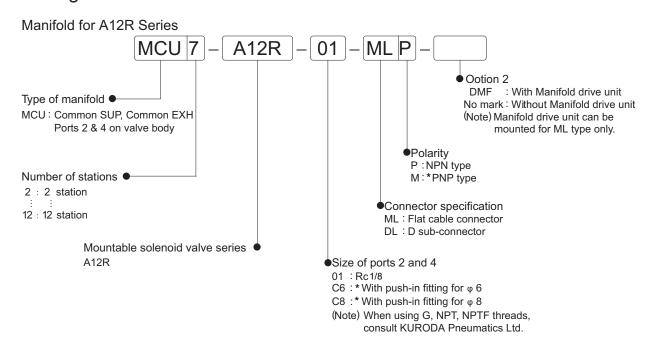


Mountable solenoid valve (For details refer to Pages 65~67.)

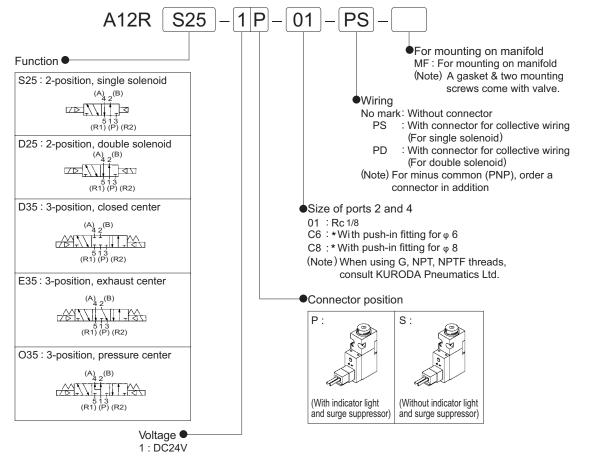




Optional Accessories and Spare parts



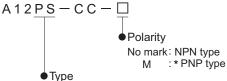


PS: For PR type single solenoid PD : For PR type double solenoid


For PR type single solenoid

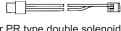

For PR type double solenoid

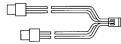


Locking cover

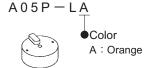


(Note) For common use with all A05 and A12

Tag for solenoid valve

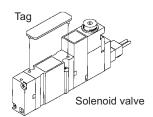



(Note) For common use with sub-base mountig type of A05, and A12.

Base gasket

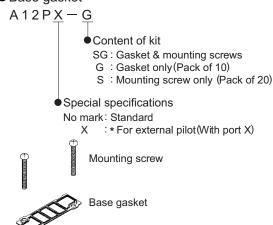


AB plate

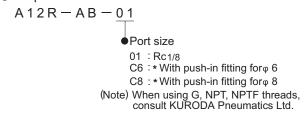


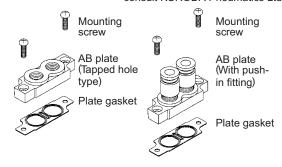

Blank plate

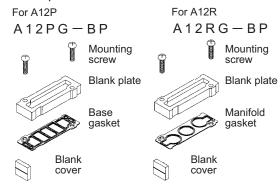

Manifold gasket

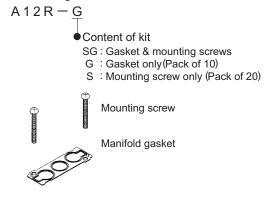




Dimensions

●MCS□-A12P-02 (C6, C8)-DL, MCX□-A12P-02 (C6, C8)-DL

(Unit: mm)

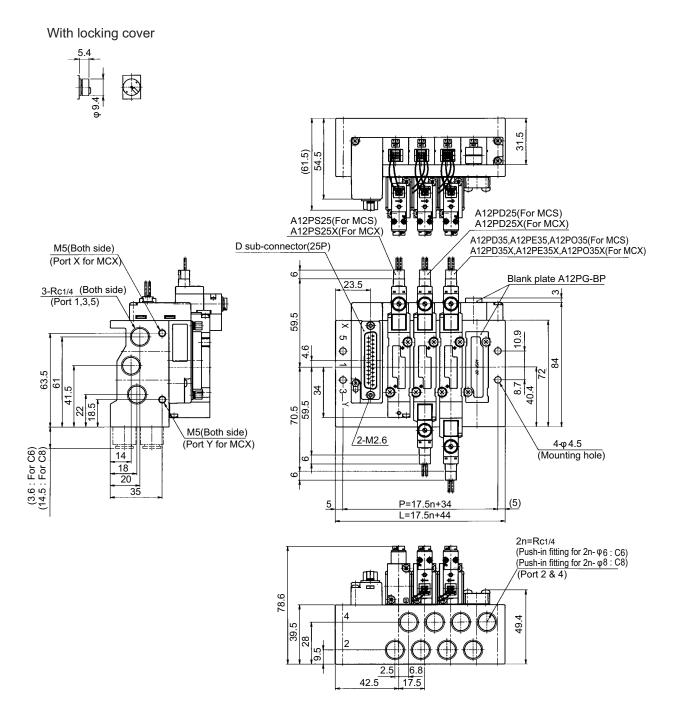




Dimensions

●MCS□-A12P-02 (C6, C8)-ML, MCX□-A12P-02 (C6, C8)-ML

(Unit: mm)

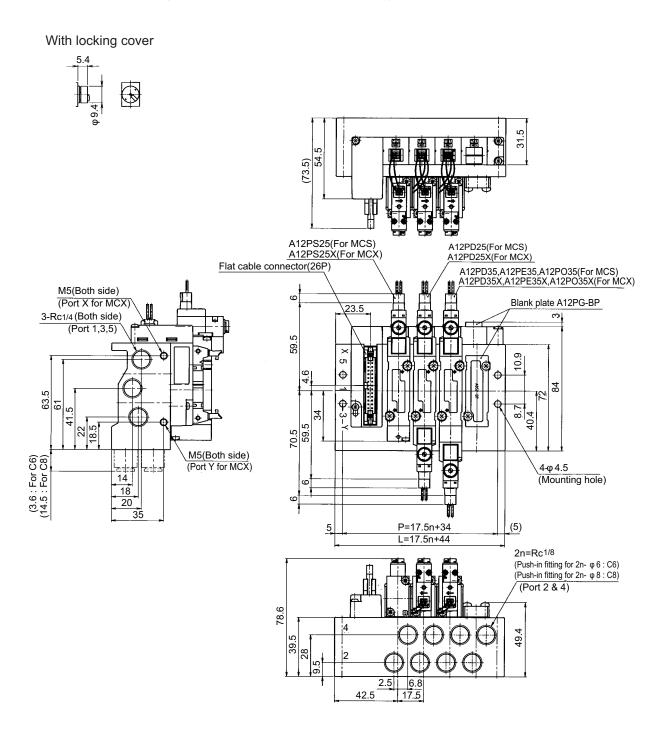




Dimensions

●MCU□-A12R-01 (C6, C8)-DL

(Unit: mm)

With locking cover



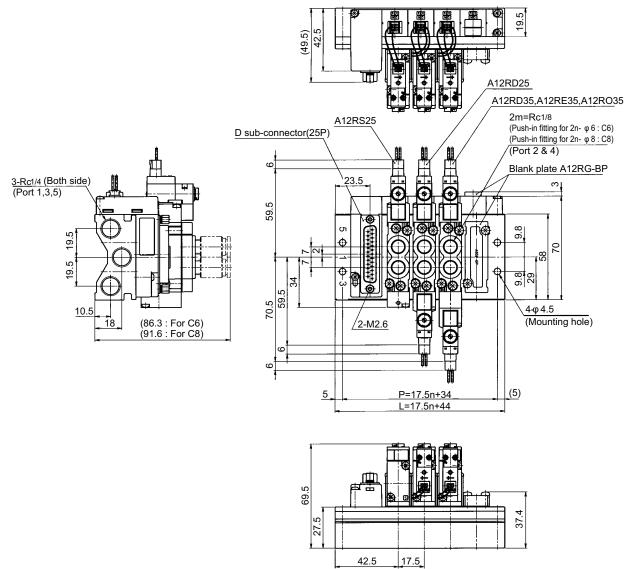




Dimensions

●MCU□-A12R-01 (C6, C8)-ML


(Unit: mm)





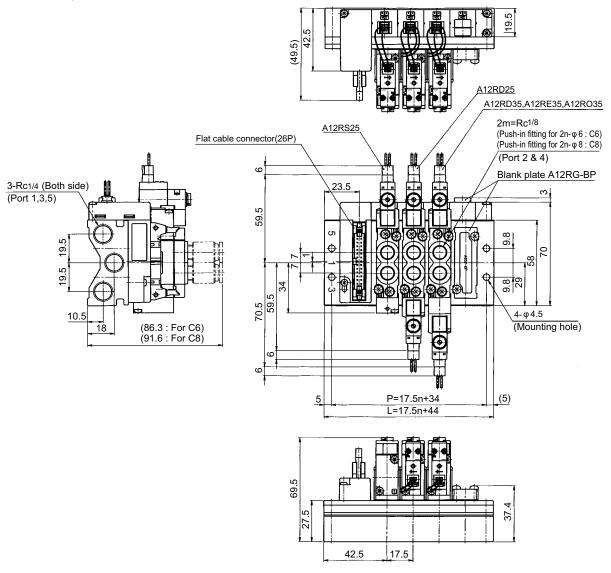



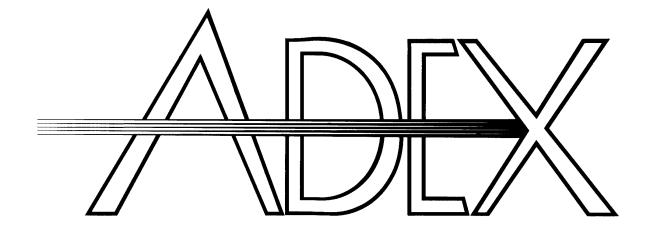



A00S SERIES



3 Port direct operated solenoid valve

A00S Series

Poppet Seal / Sub-base Mounting type

2-position A00SO23 Single solenoid Normal open 2-position A00SC23 Single solenoid Normal closed



Specifications

| Opcome | alic | 113 | | | | - | | |
|-----------------|---|--------|--|---------|---|---|-----|--|
| Model No. | | | Unit | A00SO23 | A00SO23 A00SC23 A00SO23J | | | |
| Fluid | | | | | Non-lubricated | d/lubricated air | | |
| Port size | | | | | M | 3 | | |
| Effective are | а | | mm² | 0. | 14 | 0.3 | 22 | |
| Cv value | | | | 0.0 | 008 | 0.0 |)12 | |
| Operating ambie | nt tempe | rature | °C | | -5 | ~50 | | |
| Pressure rar | nge | | MPa | 0~0.5 | 0~0.5 0~0.7 0~0.5 | | | |
| Vacuum version | | MPa | $-0.1 \sim 0.4$ Port 3 \rightarrow Vacuum Port 1 \rightarrow Pressured air Port 3 \rightarrow Vacuum | | -0.1~0.5 Port 3 → Vacuum Port 1 → Pressured air | -0.1~0.6 Port 1 → Pressured air Port 3 → Vacuum | | |
| Maximum fre | equenc | у | cycle/min | | 60 | 00 | | |
| Response | DC | ON | S | | 0.005 | | | |
| time | erating ambient temperature essure range MPa Cuum version MPa Port 3 – Port 1 – eximum frequency Cycle/min ON sponse DC | | 0.005(0.01) | | | | | |
| Manual over | ride | | | | Screwdriver-opera | ted locking button | | |
| Mounting po | sition | | | | Fr | ee | | |
| | | | m/s ² | | 150 | /30 | | |
| Mass | No ba | ise | g | | 12 | .6 | | |
| IVIGOS | With su | b-base | g | | 20 | .6 | | |

(Note) · Service kit not available


- When temperature of valve site goes down below 5°C, complete dry air should be supplied to prevent from freezing. Response time in bracket () shows with surge suppressor. Response time shown above is in accordance with JIS B 8375.
- · Effective area shown above is a value between ports 1 and 2, 4.

Electrical Specifications

| Rated voltage DC | | V | 24 | 4 | | | | | |
|-----------------------------------|---------|---|------|--|-------|--|--|--|--|
| Permissible voltage fluctuation % | | % | +10, | -10 | | | | | |
| Power consumption | DC | | W | 0.6 (with indicator light and surge suppresso); 0.91 (with indicator light and surge suppresso); 0.86 (without indicator l | | | | | |
| | ' | | | | | | | | |
| Grade of ins | ulation | | | JIS gr | ade E | | | | |
| Wiring | Wiring | | | Plug-in connector | | | | | |
| Surge suppressor | | | | Diode | | | | | |
| Indicator light | | | | LED | | | | | |




Ordering Instructions

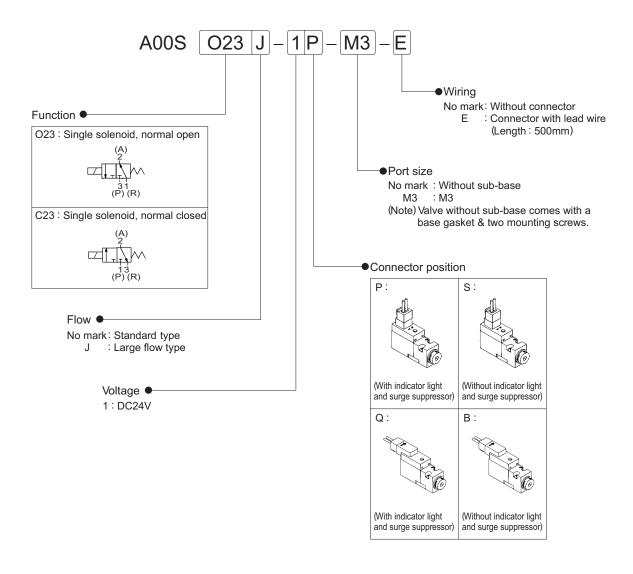



Optional Accessories and Spare parts

Connector with lead wire

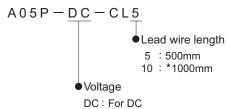





(Note) For common use with PR type of A05, A12 and A00S




(Note) For common use with all A05, A12 and A00S

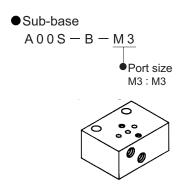

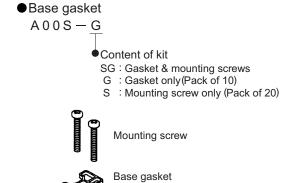



Material Specification

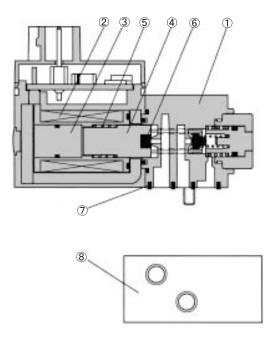

Main Parts


| No. | Description | Material |
|-----|----------------|-----------------|
| 1 | Body | Resin |
| 2 | Solenoid coil | _ |
| 3 | Core | Stainless |
| 4 | Armature ass'y | Stainless/NBR |
| (5) | Return spring | Stainless |
| 6 | Valve seat | NBR |
| 7 | Base gasket | NBR |
| 8 | Sub-base | Aluminium alloy |



Dimensions


●A00SO23-□P(S), A00SC23-□P(S)


(Unit: mm)

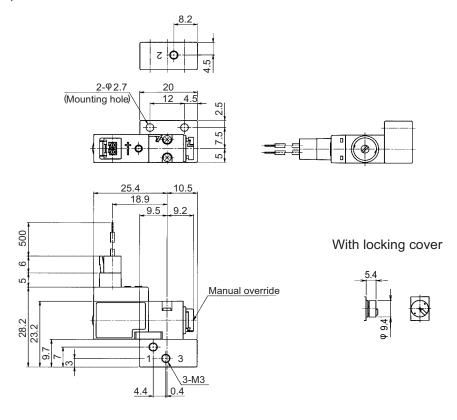


●A00SO23-□Q(B), A00SC23-□Q(B)

(Unit: mm)

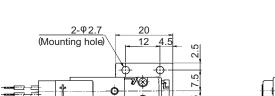

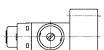

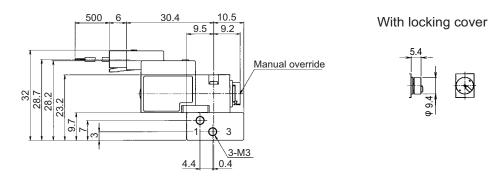




Individual Wiring type manifold

MFS-A00S

Bar type

MFS — A00S Common SUP, Common EXH Port 2 on side

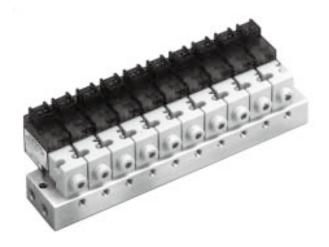


Manifold Specifications


| | | MFS□-A00S | |
|------------------|----------------|--|--|
| Type of manifold | | Common SUP, Common EXH Port 2 on side | |
| Port size | Port 1, 3 | M5 | |
| Port Size | Port 2 | M3, M5 | |
| Number of | stations | 2~20 | |
| Mounting | | Direct mount | |
| Mountable s | solenoid valve | A00SO23, A00SO23J A00SC23, A00SC23J | |
| Blank plate | | A00S-BP | |

(Note) A00SO23(J) cannot be mounted on the same manifold together with A00SC23(J).



Ordering Instructions

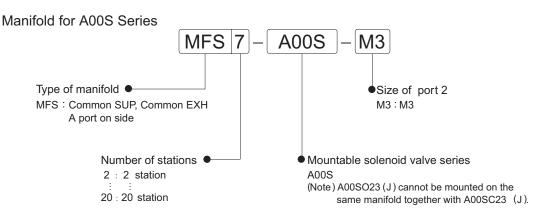


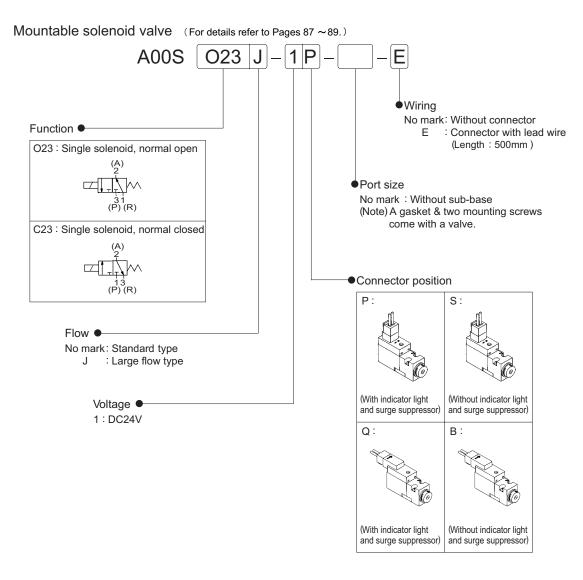



Optional Accessories Spare parts


Connector with lead wire

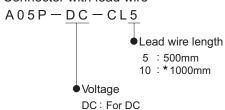




(Note) For common use with PR type of A05, A12 and A00S

Locking cover

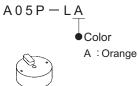


(Note) For common use with all A05, A12 and A00S


---, ----, -----, -----, -----

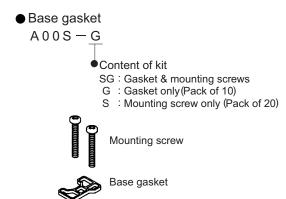

Blank plate




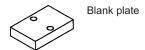


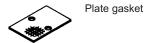


Dimensions ●MFS□-A00S-M3

(Unit: mm)

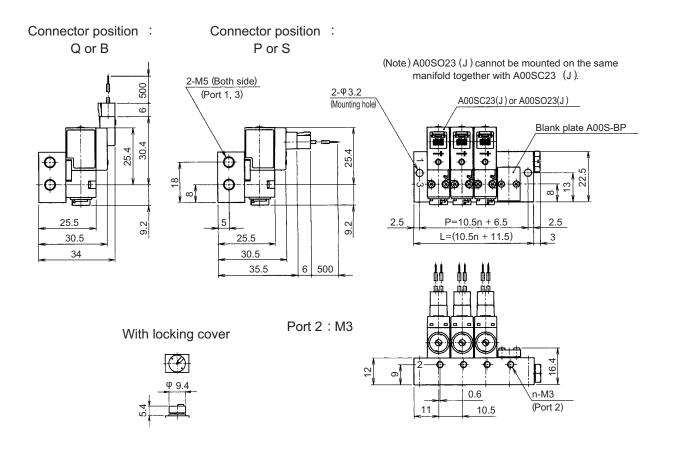

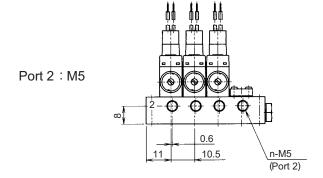



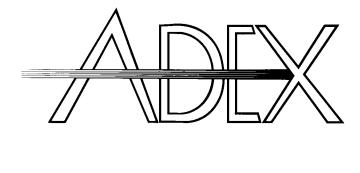



Manifold Specifications



INDIVIDUAL WIRING TYPE/MFC

MANIFOLD SPECIFICATIONS


(Duplicate this page and fill in this form).

| | Da | te o | fissue | | | |
|-------------------|-----|------|------------------|---|--|--|
| Your company name | | | | | | |
| Person in charge | | | | | | |
| Specification No. | | | | | | |
| Order No. | | | | | | |
| Quantity | Set | (s) | Date of delivery | | | |
| | | | | • | | |

Type of manifold


Write a mark of circle in at the head of the type of manifold to be used and fill in this form.

(Note) * : Made to order

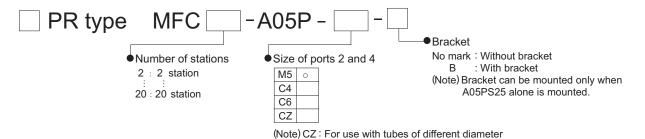

Type of mountable solenoid valve

Fill in blanks for type of solenoid valve.

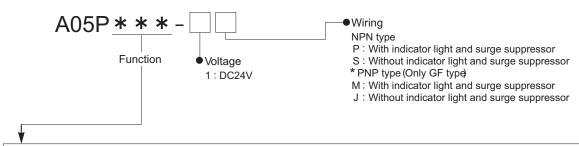

Number of stations

Specify the type and arrangement of solenoid valve to be mounted by a mark of circle. Standard manifold is so designed that all ports open.

When plugging a port, specify the intended place to be plugged by writing " $_{\rm x}$ " in the column of port specification.

When using tubes of different diameter on the same manifold, specify the required size by writing a symbol C4 or C6 in the column of port specification.

| umber of stations - | 1 | 2 | 3 | 4 | (5) | |
|---------------------|----------|--------|---|--------|--------|---|
| | д | ρ | Д | $^{-}$ | \Box | ı |
| | 0 | 0 | 0 | 0 | 0 | |
| 6 | | | | | | c |
| | ' | ١ | | | | _ |
| 0 | <u> </u> | b - | b | þ_ | Þ | 0 |

| Number of s | stations for ma | anifold | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | Quantity |
|----------------------------------|---------------------|---------|-------------|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----------|
| | Single solen | oid \$ | S25 | | | | | | | | | | | | | | | | | | | | | |
| Mounted | Double soler | noid [| D25 | | | | | | | | | | | | | | | | | | | | | |
| solenoid | Closed center | er [| 035 | | | | | | | | | | | | | | | | | | | | | |
| valve | Exhaust cen | ter I | E35 | | | | | | | | | | | | | | | | | | | | | |
| | Pressure center O35 | | D 35 | | | | | | | | | | | | | | | | | | | | | |
| Blank plate | | | | | | | | | | | | | | | | | | | | | | | | |
| Port specification Port 2 Port 4 | | | | | | | | | | | | | | | | | | | | | | | | |
| | | Port 4 | | | | | | | | | | | | | | | | | | | | | | |

| | For factory use | | For sales department use | | | | |
|-------------|-----------------|-------------|--------------------------|-----------------|--------------|------------------|--|
| Control No. | Approved by: | Checked by: | Received by: | Manufacture No. | Approved by: | Person in charge | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |



INDIVIDUAL WIRING TYPE/MFS,MFX

MANIFOLD SPECIFICATIONS


(Duplicate this page and fill in this form).

| | Date of | f issue | | |
|-------------------|---------|------------------|--|--|
| Your company name | | | | |
| Person in charge | | | | |
| Specification No. | | | | |
| Order No. | | | | |
| Quantity | Set(s) | Date of delivery | | |

| Type o | of r | nan | ifol | d |
|--------|------|-----|------|---|
|--------|------|-----|------|---|

Write a mark of circle in at the head of the type of manifold to be used and fill in this form.

(Note) * : Made to order

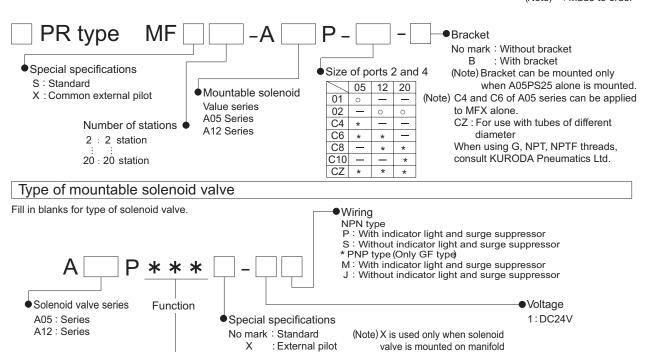

Number of stations

Specify the type and arrangement of solenoid valve to be mounted by a mark of circle.

Standard manifold is so designed that all ports open.

When plugging a port, specify the intended place to be plugged by writing"x" in the column of port specification.

When using tubes of different diameter on the same manifold, specify the required size by writing a symbol C4, C6, C8 or C10 in the column of port specification.

| MUITIDO | Oi | Stati | UIIG | 70 | _ | | • | 9 | |
|---------|----|-------|------|----|----|---|--------|--------|---|
| | | | | | | | \Box | \Box | |
| | | | | L. | 1 | 1 | = | | ı |
| | | | | 6 | 10 | 6 | 6 | ര | |

for common external pilot.

| Number of | stations for ma | anifold | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | Quantity |
|---------------|---------------------|----------|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----------|
| | Single solenoid S25 | | | | | | | | | | | | | | | | | | | | | | |
| Mounted | Double soler | noid D25 | | | | | | | | | | | | | | | | | | | | | |
| solenoid | Closed center | er D35 | | | | | | | | | | | | | | | | | | | | | |
| valve | Exhaust cen | ter E35 | | | | | | | | | | | | | | | | | | | | | |
| | Pressure cer | nter O35 | | | | | | | | | | | | | | | | | | | | | |
| Blank plate | | | | | | | | | | | | | | | | | | | | | | | |
| Dort aposific | Port 2 | | | | | | | | | | | | | | | | | | | | | | |
| Port specific | Port 4 | | | | | | | | | | | | | | | | | | | | | | |

| | For factory use | Э | For sales department use | | | | | | |
|-------------|-----------------|-------------|--------------------------|-----------------|--------------|------------------|--|--|--|
| Control No. | Approved by: | Checked by: | Received by: | Manufacture No. | Approved by: | Person in charge | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |



INDIVIDUAL WIRING TYPE/MFU

MANIFOLD SPECIFICATIONS


| (Duplicate this page and fill in this for | (Duplicate | this | page | and | fill | in | this | forr |
|---|------------|------|------|-----|------|----|------|------|
|---|------------|------|------|-----|------|----|------|------|

| | Date of | issue | |
|-------------------|---------|------------------|--|
| Your company name | | | |
| Person in charge | | | |
| Specification No. | | | |
| Order No. | | | |
| Quantity | Set(s) | Date of delivery | |

| Typ | 9 | Ωf | m | an | if∩l | Ы |
|-------|---|----|-----|----|------|---|
| ı y F | | Oi | 111 | an | 110 | ч |


Write a mark of circle in at the head of the type of manifold to be used and fill in this form.

(Note) * : Made to order

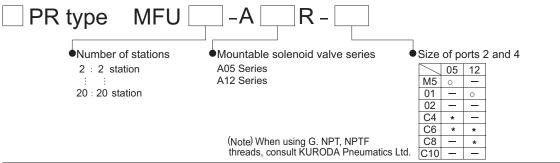

Type of mountable solenoid valve


Fill in blanks for type of solenoid valve.

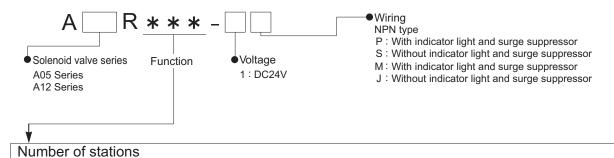

Specify the type and arrangement of solenoid valve to be mounted by a mark of circle.

Number of stations →①②③④⑤ Standard manifold is so designed that all ports open.

When plugging a port, specify the intended place to be plugged by writing"x" in the column of port specification.

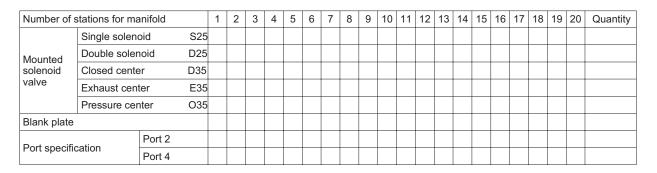

| | For factory use | | For sales department use | | | | | | |
|-------------|-----------------|-------------|--------------------------|-----------------|--------------|------------------|--|--|--|
| Control No. | Approved by: | Checked by: | Received by: | Manufacture No. | Approved by: | Person in charge | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |



MULTIPIN CONNECTOR TYPE/MCC

MANIFOLD SPECIFICATIONS


(Duplicate this page and fill in this form).

| | Date of | of issue | | |
|-------------------|---------|------------------|--|---|
| Your company name | | | | |
| Person in charge | | | | |
| Specification No. | | | | |
| Order No. | | | | |
| Quantity | Set(s) | Date of delivery | | _ |
| | • | • | | _ |

Type of manifold

Write a mark of circle in□ at the head of the type of manifold to be used and fill in this form.


(Note) * : Made to order

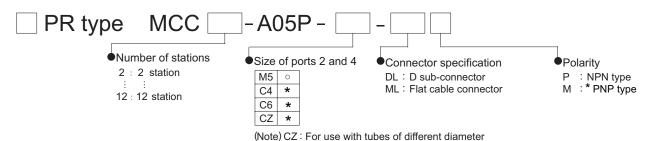

Type of mountable solenoid valve

Fill in blanks for type of solenoid valve.

(Note) *: Made to order

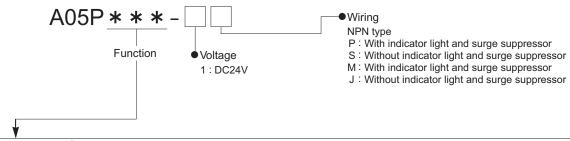


Number of stations

Specify the type and arrangement of solenoid valve to be mounted by a mark of circle. Standard manifold is so designed that all ports open.

When plugging a port, specify the intended place to be plugged by writing"x" in the column of port specification.

When using tubes of different diameter on the same manifold, specify the required size by writing a symbol C4 or C6 in the column of port specification.

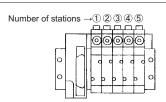

| Number of | stations for ma | anifold | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | Quantity |
|---------------|---------------------|----------|---|---|---|---|---|---|---|---|---|----|----|----|----------|
| | Single solenoid S25 | | 5 | | | | | | | | | | | | |
| Mounted | Double soler | noid D25 | 5 | | | | | | | | | | | | |
| solenoid | Closed center | er D35 | 5 | | | | | | | | | | | | |
| valve | Exhaust cen | ter E35 | 5 | | | | | | | | | | | | |
| | Pressure cer | nter 035 | 5 | | | | | | | | | | | | |
| Blank plate | | | | | | | | | | | | | | | |
| Dout on soifi | Port 2 | | | | | | | | | | | | | | |
| Port specifi | Port 4 | | | | | | | | | | | | | | |

| For factory use | | For sales department use | | | | | | |
|-----------------|-------------|--------------------------|-----------------|---|------------------|--|--|--|
| Approved by: | Checked by: | Received by: | Manufacture No. | Approved by: | Person in charge | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | _ | , , | | Approved by: Checked by: Received by: Manufacture No. | | | | |



MULTIPIN CONNECTOR TYPE/MCS, MCX

MANIFOLD SPECIFICATIONS


(Duplicate this page and fill in this form.)

| | | Date of | f issue | | |
|-------------------|---|---------|------------------|--|--|
| Your company name | | | | | |
| Person in charge | | | | | |
| Specification No. | | | | | |
| Order No. | | | | | |
| Quantity | (| Set(s) | Date of delivery | | |
| | | | | | |


| Tyne | Ωf | manifo | Id |
|------|-----|--------|----|
| IVDE | OI. | manno | IU |

Write a mark of circle in at the head of the type of manifold to be used and fill in this form.

(Note) * : Made to order

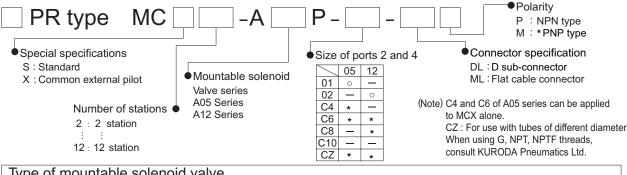

Type of mountable solenoid valve

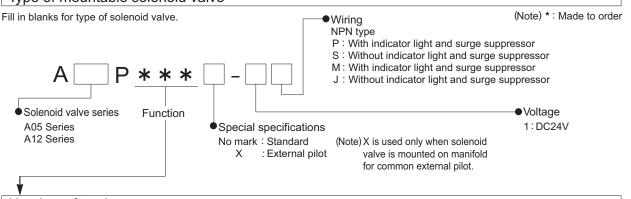


Number of stations

Specify the type and arrangement of solenoid valve to be mounted by a mark of circle. Standard manifold is so designed that all ports open.

When plugging a port, specify the intended place to be plugged by writing," " in the column of port specification.

When using tubes of different diameter on the same manifold, specify the required size by writing a symbol C4, C6, C8 or C10 in the column of port specification.

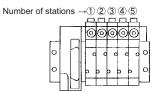

| Number of | stations for ma | anifold | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | Quantity |
|--------------|-----------------|----------|---|---|---|---|---|---|---|---|---|----|----|----|----------|
| | Single solen | oid S25 | | | | | | | | | | | | | |
| Mounted | Double sole | noid D25 | | | | | | | | | | | | | |
| solenoid | Closed center | er D35 | | | | | | | | | | | | | |
| valve | Exhaust cen | ter E35 | | | | | | | | | | | | | |
| | Pressure cer | nter O35 | | | | | | | | | | | | | |
| Blank plate | | | | | | | | | | | | | | | |
| Dort aposifi | Port 2 | | | | | | | | | | | | | | |
| Port specifi | Port 4 | | | | | | | | | | | | | | |

| | For factory use | For sales department use | | | | | | |
|-------------|-----------------|--------------------------|--------------|-----------------|--------------|------------------|--|--|
| Control No. | Approved by: | Checked by: | Received by: | Manufacture No. | Approved by: | Person in charge | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |



MULTIPIN CONNECTOR TYPE/MCU

MANIFOLD SPECIFICATIONS


(Duplicate this page and fill in this form).

| Date of | fissue | | | |
|---------|------------------|--|--|--|
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| Set(s) | Date of delivery | | | |
| | | Date of issue Set(s) Date of delivery | | |

Type of manifold

Write a mark of circle in at the head of the type of manifold to be used and fill in this form.


(Note) *: Made to order

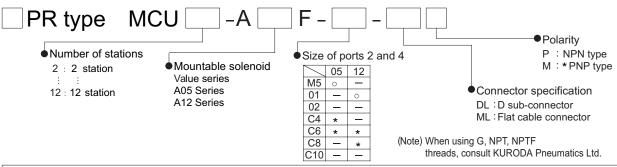

Type of mountable solenoid valve

Fill in blanks for type of solenoid valve.


(Note) *: Made to order

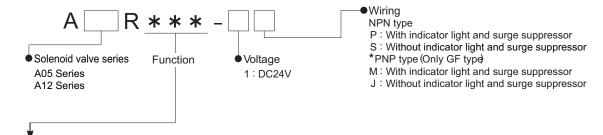

Number of stations

Specify the type and arrangement of solenoid valve to be mounted by a mark of circle. Standard manifold is so designed that all ports open.

When plugging a port, specify the intended place to be plugged by writing "x" in the column of port specification.

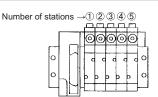

| Number of | stations for ma | anifold | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | Quantity |
|--------------------|---------------------|----------|---|---|---|---|---|---|---|---|---|----|----|----|----------|
| Mounted solenoid | Single solenoid S25 | | | | | | | | | | | | | | |
| | Double solenoid D25 | | | | | | | | | | | | | | |
| | Closed center D35 | | | | | | | | | | | | | | |
| valve | Exhaust center E35 | | | | | | | | | | | | | | |
| | Pressure cer | nter O35 | | | | | | | | | | | | | |
| Blank plate | Blank plate | | | | | | | | | | | | | | |
| Port specification | | Port 2 | | | | | | | | | | | | | |
| Fort specific | Jalion | Port 4 | | | | | | | | | | | | | |

| | For factory use |) | For sales department use | | | | | | |
|-------------|-----------------|-------------|--------------------------|-----------------|--------------|------------------|--|--|--|
| Control No. | Approved by: | Checked by: | Received by: | Manufacture No. | Approved by: | Person in charge | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |



INDIVIDUAL WIRING TYPE/MFS


MANIFOLD SPECIFICATIONS

(Duplicate this page and fill in this form.)

| Date of issue . | | | | | | | | | | |
|-------------------|--------|------------------|--|--|--|--|--|--|--|--|
| Your company name | | | | | | | | | | |
| Person in charge | | | | | | | | | | |
| Specification No. | | | | | | | | | | |
| Order No. | | | | | | | | | | |
| Quantity | Set(s) | Date of delivery | | | | | | | | |

Type of manifold


Fill in blanks for type of manifold.

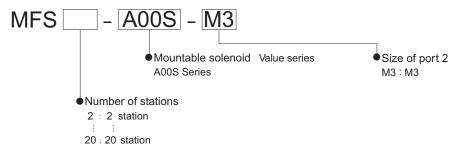

Type of mountable solenoid valve

Fill in blanks for type of solenoid valve.

(Note) * : Made to order

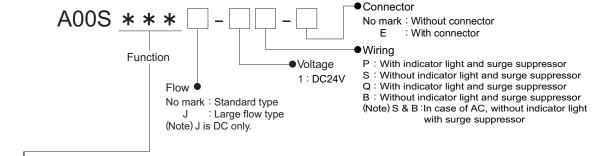


Number of stations

Specify the type and arrangement of solenoid valve to be mounted by a mark of circle.

However, A00SO23(J) cannot be mounted on the same manifold together with

Standard manifold is so designed that all ports open.

When plugging a port, specify the intended place to be plugged by writing"x" in the column of port specification.

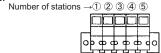

| Number of s | stations for ma | nifold | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | Quantity |
|---------------|-----------------|--------|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----------|
| solenoid | Normal open | 023 | 3 | | | | | | | | | | | | | | | | | | | | |
| | Normal close | ed C23 | 3 | | | | | | | | | | | | | | | | | | | | |
| Blank plate | | | | | | | | | | | | | | | | | | | | | | | |
| Port specific | cation | Port 2 | | | | | | | | | | | | | | | | | | | | | |

| For factory use | ; | For sales department use | | | | | | |
|-----------------|-------------|--------------------------|-----------------|--|------------------|--|--|--|
| Approved by: | Checked by: | Received by: | Manufacture No. | Approved by: | Person in charge | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | Approved by: Checked by: | <u> </u> | For factory use For sales de Approved by: Checked by: Received by: Manufacture No. | | | | |



ADEX VALVE



Offer of Sale

The items described in this document and other documents or descriptions provided by Parker Hannifin Corporation, its subsidiaries and its authorized distributors, are hereby offered for sale at prices to be established by Parker Hannifin Corporation, its subsidiaries and its authorized distributors. This offer and its acceptance by any customer ("Buyer") shall be governed by all of the following Terms and Conditions. Buyer's order for any such item, when communicated to Parker Hannifin Corporation, its subsidiaries or an authorized distributor ("Seller") verbally or in writing, shall constitute acceptance of this offer.

- 1. Terms and Conditions of Sale: All descriptions, quotations, proposals, offers, acknowledgments, acceptances and sales of Seller's products are subject to and shall be governed exclusively by the terms and conditions stated herein. Buyer's acceptance of any offer to sell is limited to these terms and conditions. Any terms or conditions in addition to, or inconsistent with those stated herein, proposed by Buyer in any acceptance of an offer by Seller, are hereby objected to. No such additional, different or inconsistent terms and conditions shall become part of the contract between Buyer and Seller unless expressly accepted in writing by Seller. Seller's acceptance of any offer to purchase by Buyer is expressly conditional upon Buyer's assent to all the terms and conditions stated herein, including any terms in addition to, or inconsistent with those contained in Buyer's offer. Acceptance of Seller's products shall in all events constitute such assent.
- 2. Payment: Payment shall be made by Buyer net 30 days from the date of delivery of the items purchased hereunder. Amounts not timely paid shall bear interest at the maximum rate permitted by law for each month or portion thereof that the Buyer is late in making payment. Any claims by Buyer for omissions or shortages in a shipment shall be waived unless Seller receives notice thereof within 30 days after Buyer's receipt of the shipment.
- 3. Delivery: Unless otherwise provided on the face hereof, delivery shall be made F.O.B. Seller's plant. Regardless of the method of delivery, however, risk of loss shall pass to Buyer upon Seller's delivery to a carrier. Any delivery dates shown are approximate only and Seller shall have no liability for any delays in delivery.
- 4. Warranty: Seller warrants that the items sold hereunder shall be free from defects in material or workmanship for a period of 18 months from date of shipment from Parker Hannifin Corporation. THIS WARRANTY COMPRISES THE SOLE AND ENTIRE WARRANTY PERTAINING TO ITEMS PROVIDED HEREUNDER. SELLERMAKES NO OTHERWARRANTY, GUARANTEE, OR REPRESENTATION OF ANY KIND WHATSOEVER. ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO, MERCHANTABILITY AND FITNESS FOR PURPOSE, WHETHER EXPRESS, IMPLIED, OR ARISING BY OPERATION OF LAW, TRADE USAGE, OR COURSE OF DEALING ARE HEREBY DISCLAIMED.

NOTWITHSTANDING THE FOREGOING, THERE ARE NO WARRANTIES WHATSOEVER ON ITEMS BUILT OR ACQUIRED WHOLLY OR PARTIALLY, TO BUYER'S DESIGN OR SPECIFICATIONS.

- 5. Limitation of Remedy: SELLER'S LIABILITY ARISING FROM OR IN ANY WAY CONNECTED WITH THE ITEMS SOLD OR THIS CONTRACT SHALL BE LIMITED EXCLUSIVELY TO REPAIR OR REPLACEMENT OF THE ITEMS SOLD OR REFUND OF THE PURCHASE PRICE PAID BY BUYER, AT SELLER'S SOLE OPTION. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES OF ANY KIND OR NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS ARISING FROM OR IN ANY WAY CONNECTED WITH THIS AGREEMENT OR ITEMS SOLD HEREUNDER, WHETHER ALLEGED TO ARISE FROM BREACH OF CONTRACT, EXPRESS OR IMPLIED WARRANTY, OR IN TORT, INCLUDING WITHOUT LIMITATION, NEGLIGENCE, FAILURE TO WARN OR STRICT LIABILITY
- 6. Changes, Reschedules and Cancellations: Buyer may request to modify the designs or specifications for the items sold hereunder as well as the quantities and delivery dates thereof, or may request to cancel all or part of this order, however, no such requested modification or cancellation shall become part of the contract between Buyer and Seller unless accepted by Seller in a written amendment to this Agreement. Acceptance of any such requested modification or cancellation shall be at Seller's discretion, and shall be upon such terms and conditions as Seller may require.
- 7. Special Tooling: A tooling charge may be imposed for any special tooling, including without limitations, dies, fixtures, molds and patterns, acquired to manufacture items sold pursuant to this contract. Such special tooling shall be and remain Seller's property notwithstanding payment of any charges by Buyer. In no event will Buyer acquire any interest in apparatus belonging to Seller which is utilized in the manufacture of the items sold hereunder, even if such apparatus has been specially converted or adapted for such manufacture and notwithstanding any charges paid by Buyer. Unless otherwise agreed, Seller shall have the right to alter, discard or otherwise dispose of any special tooling or other property in its sole discretion at any time.

- 8. Buyer's Property: Any designs, tools, patterns, materials, drawings, confidential information or equipment furnished by Buyer, or any other items which become Buyer's property, may be considered obsolete and may be destroyed by Seller after two (2) consecutive years have elapsed without Buyer placing an order for the items which are manufactured using such property. Seller shall not be responsible for any loss or damage to such property while it is in Seller's possession or control.
- 9. Taxes: Unless otherwise indicated on the face hereof, all prices and charges are exclusive of excise, sales, use, property, occupational or like taxes which may be imposed by any taxing authority upon the manufacture, sale or delivery of the items sold hereunder. If any such taxes must be paid by Seller or if Seller is liable for the collection of such tax, the amount thereof shall be in addition to the amounts for the items sold. Buyer agrees to pay all such taxes or to reimburse Seller therefore upon receipt of its invoice. If Buyer claims exemption from any sales, use or other tax imposed by any taxing authority, Buyer shall save Seller harmless from and against any such tax, together with any interest or penalties thereon which may be assessed if the items are held to be taxable.
- 10. Indemnity For Infringement of Intellectual Property Rights: have no liability for infringement of any patents, trademarks, copyrights, trade dress, trade secrets or similar rights except as provided in this Part 10. Seller will defend and indemnify Buyer against allegations of infringement of U.S. patents, U.S. trademarks, copyrights, trade dress and trade secrets (hereinafter "Intellectual Property Rights"). Seller will defend at its expense and will pay the cost of any settlement or damages awarded in an action brought against Buyer based on an allegation that an item sold pursuant to this contract infringes the Intellectual Property Rights of a third party. Seller's obligation to defend and indemnify Buyer is contingent on Buyer notifying Seller within ten (10) days after Buyer becomes aware of such allegations of infringement, and Seller having sole control over the defense of any allegations or actions including all negotiations for settlement or compromise. If an item sold hereunder is subject to a claim that it infringes the Intellectual Property Rights of a third party, Seller may, at its sole expense and option, procure for Buyer the right to continue using said item, replace or modify said item so as to make it noninfringing, or offer to accept return of said item and return the purchase price less a reasonable allowance for depreciation. Notwithstanding the foregoing, Seller shall have no liability for claims of infringement based on information provided by Buyer, or directed to items delivered hereunder for which the designs are specified in whole or part by Buyer, or infringements resulting from the modification, combination or use in a system of any item sold hereunder. The foregoing provisions of this Part 10 shall constitute Seller's sole and exclusive liability and Buyer's sole and exclusive remedy for infringement of Intellectual Property Rights.

If a claim is based on information provided by Buyer or if the design for an item delivered hereunder is specified in whole or in part by Buyer, Buyer shall defend and indemnify Seller for all costs, expenses or judgements resulting from any claim that such item infringes any patent, trademark, copyright, trade dress, trade secret or any similar right.

- 11. Force Majeure: Seller does not assume the risk of and shall not be liable for delay or failure to perform any of Seller's obligations by reason of circumstances beyond the reasonable control of Seller (hereinafter "Events of Force Majeure"). Events of Force Majeure shall include without limitation, accidents, acts of God, strikes or labor disputes, acts, laws, rules or regulations of any government or government agency, fires, floods, delays or failures in delivery of carriers or suppliers, shortages of materials and any other cause beyond Seller's control.
- 12. Entire Agreement/Governing Law: The terms and conditions set forth herein, together with any amendments, modifications and any different terms or conditions expressly accepted by Seller in writing, shall constitute the entire Agreement concerning the items sold, and there are no oralor other representations or agreements which pertain thereto. This Agreement shall be governed in all respects by the law of the State of Ohio. No actions arising out of sale of the items sold hereunder or this Agreement may be brought by either party more than two (2) years after the cause of action accrues.



Parker Worldwide

AE – UAE, Dubai Tel: +971 4 8127100 parker.me@parker.com

AR – Argentina, Buenos Aires Tel: +54 3327 44 4129

AT – Austria, Wiener Neustadt Tel: +43 (0)262223501-0 parker.austria@parker.com

AT – Eastern Europe, Wiener Neustadt Tel: +43 (0)2622 23501 900 parker.easteurope@parker.com

AU – Australia, Castle Hill Tel: +61 (0)2-9634 7777

AZ – Azerbaijan, Baku Tel: +994 50 2233 458 parker.azerbaijan@parker.com

BE/LU – Belgium, Nivelles Tel: +32 (0)67280900 parker.belgium@parker.com

BR – Brazil, Cachoeirinha RS Tel: +55 51 3470 9144

BY – Belarus, Minsk Tel: +375 17 209 9399 parker.belarus@parker.com

CA – Canada, Milton, Ontario Tel: +1 905 693 3000

CH – Switzerland, Etoy Tel: +41 (0)21 821 02 30 parker.switzerland@parker.com

CL – Chile, Santiago Tel: +56 2 623 1216

CN – China, Shanghai Tel: +86 21 2899 5000

CZ – Czech Republic, Klecany Tel: +420 284 083 111 parker.czechrepublic@parker.com

DE – Germany, Kaarst Tel: +49 (0)21314016 0 parker.germany@parker.com

DK – Denmark, Ballerup Tel: +45 43 56 04 00 parker.denmark@parker.com

ES – Spain, Madrid Tel: +34 902 330 001 parker.spain@parker.com

FI – Finland, Vantaa Tel: +358 (0)20753 2500 parker.finland@parker.com FR – France, Contamine s/Arve Tel: +33 (0)450 25 80 25 parker.france@parker.com

GR – Greece, Athens Tel: +30 210 933 6450 parker.greece@parker.com

HK – Hong Kong Tel: +852 2428 8008

HU – Hungary, Budapest Tel: +36 1 220 4155 parker.hungary@parker.com

IE – Ireland, Dublin Tel: +353 (0)1466 6370 parker.ireland@parker.com

IN – India, Mumbai Tel: +91 22 6513 7081-85

IT – Italy, Corsico (MI) Tel: +39 02 45 19 21 parker.italy@parker.com

JP – Japan, Tokyo Tel: +(81) 3 6408 3901

KR – South Korea, Seoul Tel: +82 2 559 0400

KZ – Kazakhstan, Almaty Tel: +7 7272 505 800 parker.easteurope@parker.com

LV – Latvia, Riga Tel: +371 6 745 2601 parker.latvia@parker.com

MX – Mexico, Apodaca Tel: +52 81 8156 6000

MY – Malaysia, Shah Alam Tel: +60 3 7849 0800

NL – The Netherlands, Oldenzaal Tel: +31 (0)541 585 000 parker.nl@parker.com

NO – Norway, Ski Tel: +47 64 91 10 00 parker.norway@parker.com

NZ – New Zealand, Mt Wellington Tel: +64 9 574 1744

PL – Poland, Warsaw Tel: +48 (0)225732400 parker.poland@parker.com

PT – Portugal, Leca da Palmeira Tel: +351 22 999 7360 parker.portugal@parker.com RO – Romania, Bucharest Tel: +40 21 252 1382 parker.romania@parker.com

RU – Russia, Moscow Tel: +7 495 645-2156 parker.russia@parker.com

SE – Sweden, Spånga Tel: +46 (0)859 79 50 00 parker.sweden@parker.com

SG – Singapore Tel: +65 6887 6300

SK – Slovakia, Banská Bystrica Tel: +421 484 162 252 parker.slovakia@parker.com

SL – Slovenia, Novo Mesto Tel: +386 7 337 6650 parker.slovenia@parker.com

TH – Thailand, Bangkok Tel: +662 717 8140

TR – Turkey, Istanbul Tel: +90 216 4997081 parker.turkey@parker.com

TW – Taiwan, Taipei Tel: +886 2 2298 8987

UA – Ukraine, Kiev Tel +380 44 494 2731 parker.ukraine@parker.com

UK – United Kingdom, Warwick Tel: +44 (0)1926317 878 parker.uk@parker.com

US – USA, Cleveland Tel: +1 216 896 3000

VE – Venezuela, Caracas Tel: +58 212 238 5422

ZA – South Africa, Kempton Park Tel: +27 (0)11 961 0700 parker.southafrica@parker.com

European Product Information Centre Free phone: 00 800 27 27 5374 (from AT, BE, CH, CZ, DE, DK, EE, ES, FI, FR, IE, IL, IS, IT, LU, MT, NL, NO, PL, PT, RU, SE, UK, ZA)



