

Parker Hydra-Tool

Hydraulic Flaring and Presetting Tool
 Bulletin 4392-B10



ENGINEERING YOUR SUCCESS.

Table of Contents

Introduction..... 1

Set-Up Instructions 2

Tube-End Preparation..... 3

Flaring Information for 37° Triple-Lok® Fittings 4

Flaring for 37° Triple-Lok® Fittings 5

Presetting for EO and EO-2 Fittings 11

Presetting Ferulok Fittings..... 15

Maintenance and Troubleshooting..... 19

Parts Schematic 20

Offer of Sale 21

 **WARNING**

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalog. Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met.

The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.

Offer of Sale

The items described in this document are hereby offered for sale by Parker Hannifin Corporation, its subsidiaries or its authorized distributors. This offer and its acceptance are governed by the provisions stated in the "Offer of Sale".




Hydra-Tool

Portable Flaring and Presetting Tool

Easy to Operate

The Hydra-Tool is capable of flaring or presetting with a few simple operations. Simply select the components for the function that is to be completed and finish the tube assembly with ease.

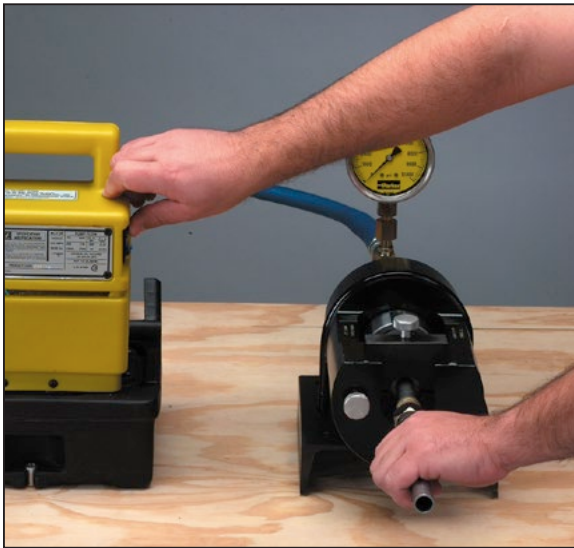

Portable

The lightweight Hydra-Tool (60 lb. base unit) can be easily moved around the workplace.




37° Flaring

The Hydra-Tool is capable of completing 37° flares on steel, stainless steel, copper and aluminum tube from 1/4" (6mm) through 2" (50mm) outside diameters.



Presetting

The Hydra-Tool is capable of presetting Ferulok ferrules for tube sizes 1/4" through 2" and EO/EO-2 cutting rings and functional nuts for tube sizes 6mm through 42mm.

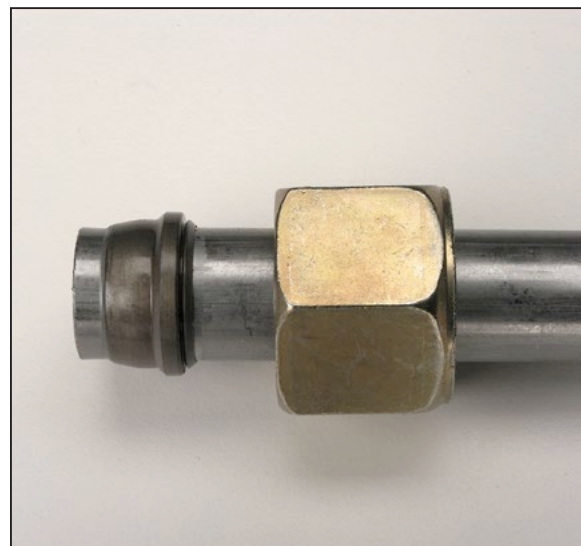

Step 1 Hydra-Tool Adapter
 Install the straight adapter, part number 6-8 F5OLO-S, into the SAE straight thread port in the rear of the Hydra-Tool.


Step 2 Swivel Tee
 Install the swivel end of the “T” fitting, part number 6 R6LO-S, on the Hydra-Tool adapter. Make certain the branch end of the “T” is oriented upward.

Step 3 Pressure Gauge
 Install the conversion adapter, part number 6 G6L-S, to the pressure gauge, part number 900044. Install the adapter/gauge assembly to branch end of the “T” fitting.

Step 4 Hose / Pump Assembly
 Install the male pipe thread end of the hose assembly, part number 910004, to the female pipe thread port of either the electric-hydraulic or hand-hydraulic pump


Step 5 Hose / Hydra-Tool Assembly
 Install the swivel end of the hose to the remaining end of the “T” fitting that is connected to the Hydra-Tool.

Step 6 Check for Leaks
 Operate the hydraulic pump and check for leaks at the connections. **CAUTION: Do not extend the Hydra-Tool cylinder without tooling installed. Cylinder damage may occur.**

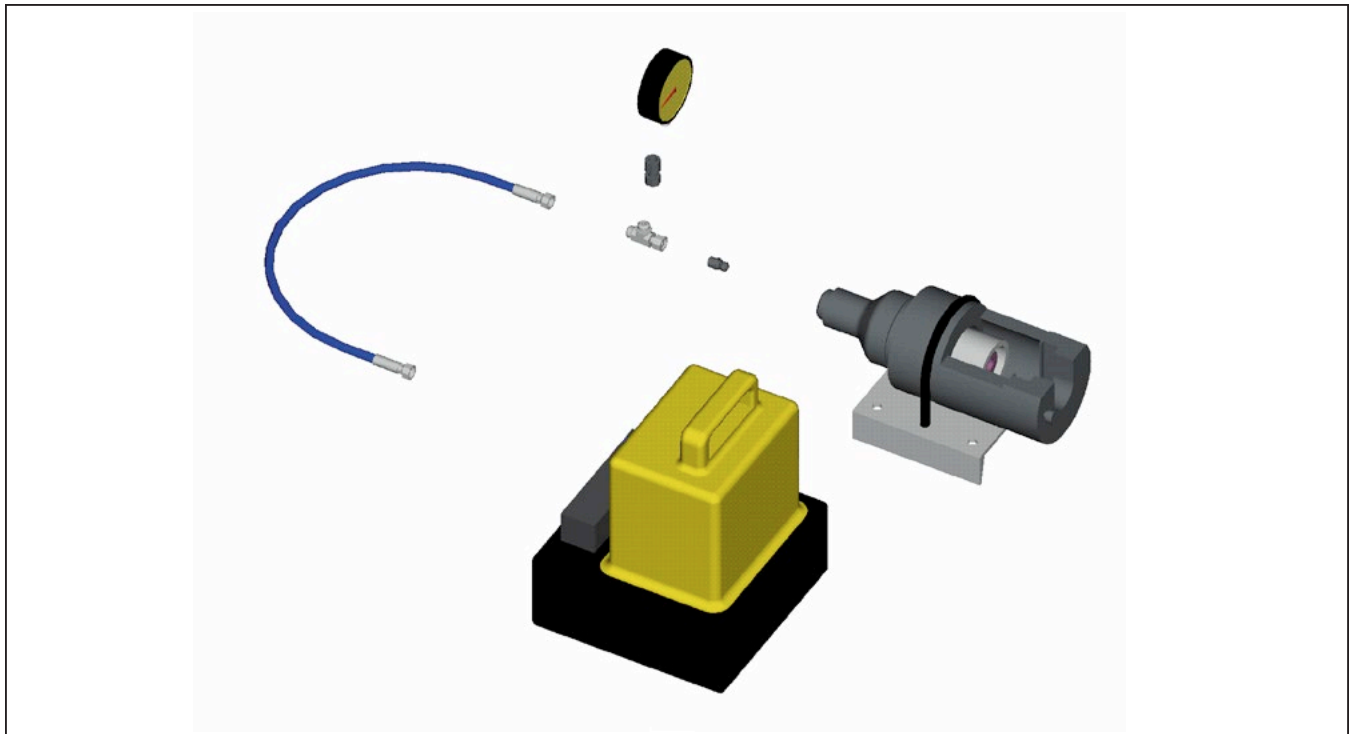


For Your Safety

When using this machine on a bench, be sure that the hose assembly does not extend over the edge of the bench where it can be struck by plant equipment.

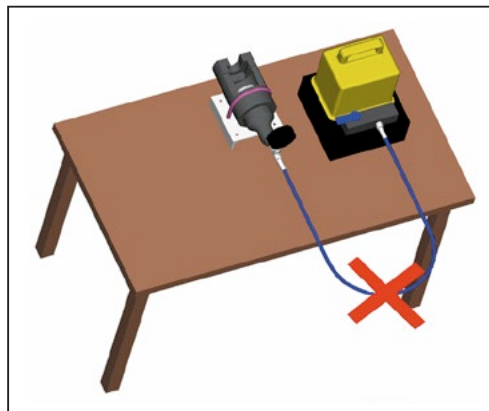

Incorrect Method

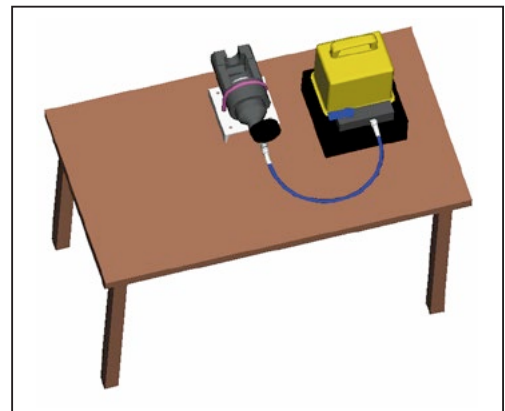


Correct Method

Tube-End Preparation

Tube-end preparation is one of the most critical processes in obtaining an optimum seal of a flared or preset tube end connection. Regardless of the tube material, similar guidelines for tube cut-off, deburring and cleanliness can help assure the tube to fitting connection remains leak free.

Tube Cutting

- It is critical that the tube be cut squarely within $\pm 1^\circ$ in order to assure the proper tube to fitting connection. If the tube is not cut squarely, it will result in the tube not resting properly in fitting body (presetting). A tube end which is not cut squarely may also result in a flare which is not circular.
- When cutting tube in preparation for flaring or presetting, a saw which utilizes a toothed blade is recommended. This type of tool will assure that the tube end is not hardened from excessive heat or cold working of material.


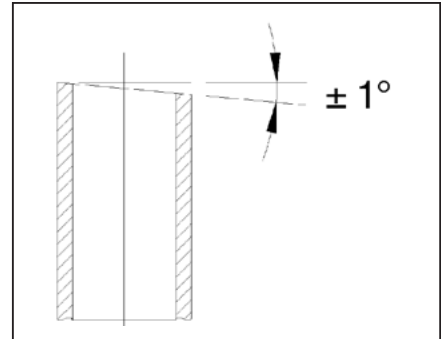


Recommended:

Hacksaw, Low-Speed Circular Saw.


Not Recommended:

Tube Cutter, Abrasive Saw.

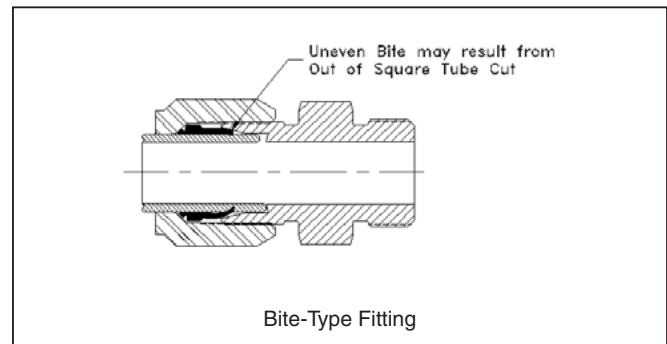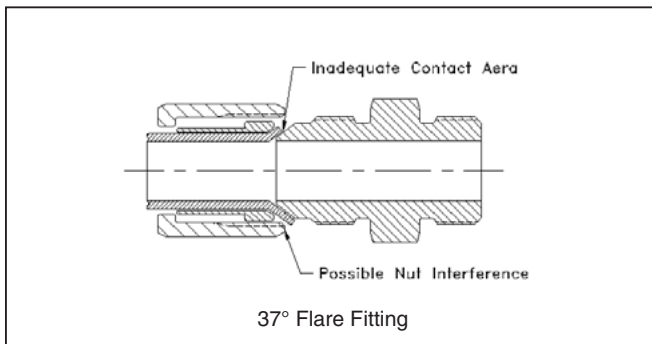

Tube Deburring

- Deburring the inside and outside diameter of the tube end is necessary to assure the tube fits properly inside the flare sleeve or ferrule and fitting body. Proper deburring of the tube end is necessary to form a flared tube end which is free of imperfections that may create a leak path between the tube and the fitting.

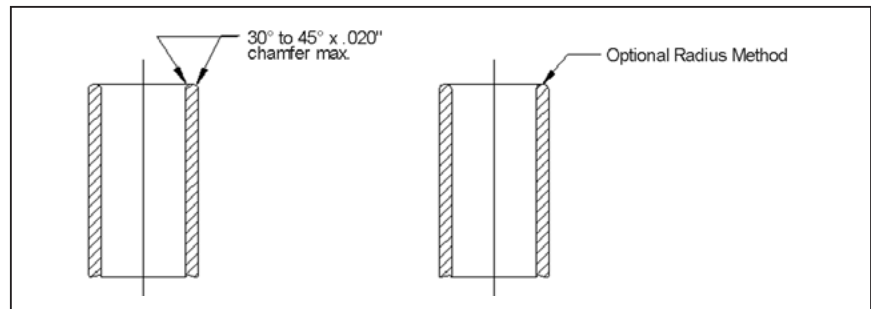

Flaring Information for 37° Triple-Lok® Fittings

Flaring Die Set, Inch Sizes


Size	Tube O.D. (in.)	Steel Die Set Part No.	Stainless Steel Die Set Part No.
4	1/4	710417-4	710417-4 SS
5	5/16	710417-5	710417-5 SS*
6	3/8	710417-6	710417-6 SS
8	1/2	710417-8	710417-8 SS
10	5/8	710417-10	710417-10 SS
12	3/4	710417-12	710417-12 SS
14	7/8	710417-14	710417-14 SS*
16	1	710417-16	710417-16 SS
20	1-1/4	710417-20	710417-20 SS
24	1-1/2	710415-24	710415-24 SS
32	2	710415-32	710415-32 SS

* Non-standard

Flaring Die Set, Metric Sizes

Tube O.D./ Size (mm)	Part No.
6	770106-6
8	770106-8
10	770106-10
12	770106-12
14	770106-14*
15	770106-15
16	770106-16
18	770106-18
20	770106-20
22	770106-22
25	770106-25
28	770106-28
30	770106-30
32	770106-32
35	770095-35
38	770095-38
42	770095-42
50	770095-50

*Non-standard

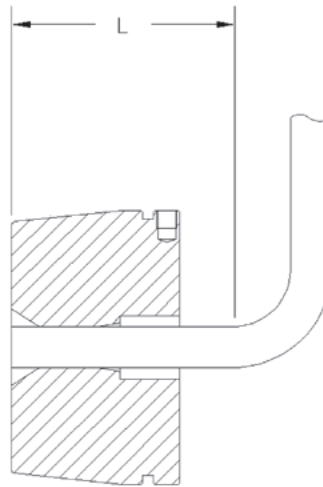

L = Minimum Straight Length to Start of Bend

Size	Tube O.D. (in.)	Tube O.D. (mm)	"L" min. (in.)
-4	1/4	6	1.63
-5	5/16	8	1.63
-6	3/8	10	1.63
-8	1/2	12	2.19
-10	5/8	14, 15, 16	2.22
-12	3/4	18, 20	2.32
-14	7/8	-	2.38
-16	1	25	2.41
-20	1-1/4	30, 32	2.54
-24	1-1/2	35, 38	2.88
-32	2	42, 50	2.94

Recommended Flaring Pressure for Inch Tube

Size	Material	Tube Wall Thickness							
		0.035	0.049	0.065	0.083	0.095	0.109	0.120	0.134
4	SS	400	700	1100					
	Steel	300	500	800					
	Copper	150	200	350					
5	Aluminum	150	200	350					
	SS	500	800	1300					
	Steel	400	600	1000					
6	Copper	150	250	400					
	Aluminum	150	250	400					
	SS	600	900	1500					
8	Steel	500	700	1100					
	Copper	200	300	500					
	Aluminum	200	300	500					
10	SS	800	1200	2000	2500				
	Steel	600	900	1500	1900				
	Copper	250	350	600	750				
12	Aluminum	250	350	600	750				
	SS	900	2000	2500	2800	3000			
	Steel	680	1500	1900	2100	2300			
14	Copper	275	600	750	800	900			
	Aluminum	275	600	750	800	900			
	SS	1000	1700	2500	3100	3500	4000		
16	Steel	750	1300	1900	2300	2700	3000		
	Copper	300	500	750	900	1100	1200		
	Aluminum	300	500	750	900	1100	1200		
20	SS		1500	2400	3000	3400	4200		
	Steel		1100	1800	2300	2600	3200		
	Copper		500	700	900	1000	1300		
24	Aluminum		500	700	900	1000	1300		
	SS			2400	3000	3400	4200	4800	
	Steel			1800	2300	2600	3200	3600	
32	Copper			700	900	1000	1300	1400	
	Aluminum			700	900	1000	1300	1400	
	SS			2800	3400	4000	4800	5300	
24	Steel			2100	2600	3000	3600	4000	
	Copper			800	1000	1200	1400	1600	
	Aluminum			800	1000	1200	1400	1600	
32	SS				4000	4500	5300	5800	
	Steel				3000	3400	4000	4400	
	Copper				1200	1300	1600	1700	
32	Aluminum				1200	1300	1600	1700	
	SS					3300	4000	5000	6300
	Steel					2500	3000	3800	4700
32	Copper					1000	1200	1500	1900
	Aluminum					1000	1200	1500	1900

Note: If tube size and wall thickness are not shown on this chart, see Catalog 4300, General Technical Section for recommended tube size for use with 37° flare fittings.

The values provided in this chart are to be used as a guide and normally will produce a satisfactory flare when using the Parker Hydra-Tool.

Recommended Flaring Pressure for Metric Tube

Size (mm)	Material	Tube Wall Thickness				
		1.0	1.5	2.0	2.5	3.0
6	SS	400	700	1100		
	Steel	300	500	800		
	Copper	150	200	350		
	Aluminum	150	200	350		
8	SS	500	800	1300		
	Steel	400	600	1000		
	Copper	150	250	400		
	Aluminum	150	250	400		
10	SS	600	900	1500		
	Steel	500	700	1100		
	Copper	200	300	500		
	Aluminum	200	300	500		
12	SS	800	1200	2000	2500	
	Steel	600	900	1500	1900	
	Copper	250	350	600	750	
	Aluminum	250	350	600	750	
14	SS	850	1600	2300	2600	
	Steel					
	Copper					
	Aluminum					
15	SS	875	1800	2400	2700	
	Steel					
	Copper					
	Aluminum					
16	SS	900	2000	2500	2800	3000
	Steel	680	1500	1900	2100	2300
	Copper	275	600	750	800	900
	Aluminum	275	600	750	800	900
18	SS	1000	1700	2500	3100	3500
	Steel	750	1300	1900	2300	2700
	Copper	300	500	750	900	1100
	Aluminum	300	500	750	900	1100
20	SS		1500	2400	3000	3400
	Steel		1100	1800	2300	2600
	Copper		500	700	900	1000
	Aluminum		500	700	900	1000

Size (mm)	Material	Tube Wall Thickness				
		1.0	1.5	2.0	2.5	3.0
22	SS		1500	2400	3000	3400
	Steel		1100	1600	2300	2600
	Copper		500	700	900	1000
	Aluminum		500	700	900	1000
25	SS			2400	3000	3400
	Steel			1800	2300	2600
	Copper			700	900	1000
	Aluminum			700	900	1000
28	SS			2600	3200	3700
	Steel			2000	2500	2800
	Copper			800	1000	1100
	Aluminum			800	1000	1100
30	SS			2800	3400	4000
	Steel			2100	2600	3000
	Copper			800	1000	1200
	Aluminum			800	1000	1200
32	SS				4000	4500
	Steel				3000	3400
	Copper				1200	1300
	Aluminum				1200	1300
38	SS				4500	5800
	Steel				3400	4400
	Copper				1300	1700
	Aluminum				1300	1700
42	SS				4700	6500
	Steel				3600	5200
	Copper				1500	1900
	Aluminum				1500	1900
50	SS				5200	7200
	Steel				3900	6100
	Copper				1900	2300
	Aluminum				1900	2300

Note: The values provided in this chart are to be used as a guide and normally will produce a satisfactory flare when using the Parker Hydra-Tool.

Flaring for 37° Triple-Lok Fittings

Components Required

Sizes -4 through -20 (6mm - 32mm)


Description	Part Number
Flaring Cone	710419
Die Ring	710416A
Die Retainer Assy.	710424-1
Flaring Die Set	See Chart pg. 4

Sizes -24 through -32 (35mm - 50mm)

Description	Part Number
Flaring Cone	710411
Die Ring	710412
Die Retainer Assy.	710424-2
Flaring Die Set	See Chart pg. 4



Flaring Cone

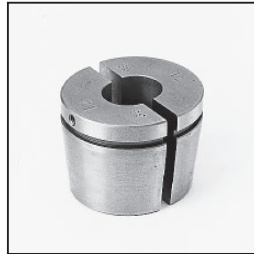

Flaring Die Set




Die Ring



Die Retainer


Step 1 Select Tooling

Based on the tube size to be flared, select the Flaring Cone, Die Ring, and Die Retainer Assembly from the tables above. Select the Flaring Die Set from the chart on page 4.

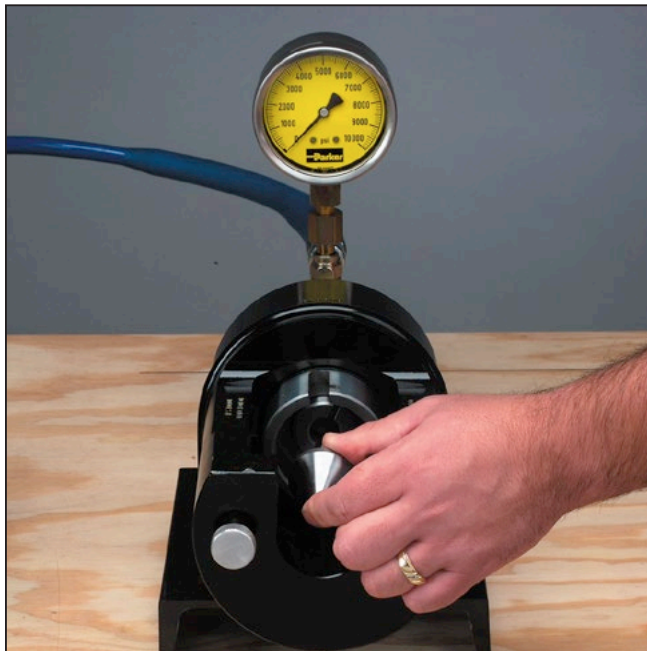

Step 2 Install Flaring Cone

Insert the Flaring Cone into the piston and turn to allow the roll pin to engage and hold the cone in the locked position.

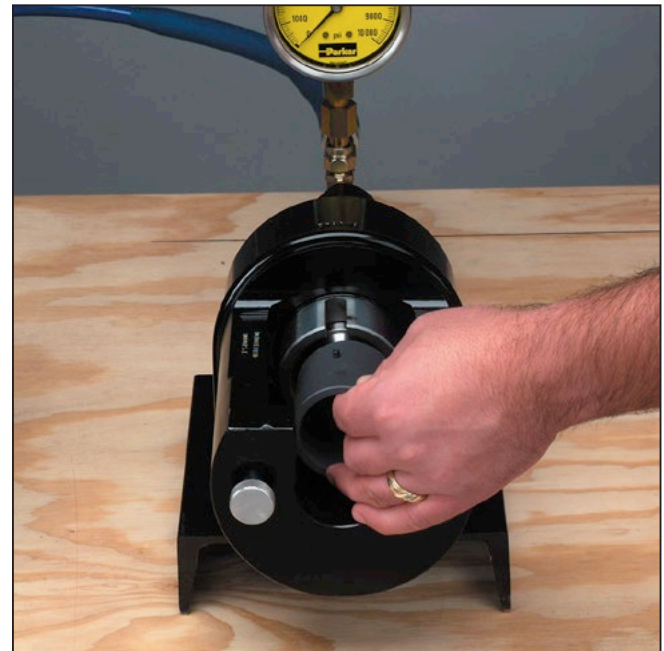

Step 3 Install Die Ring

Install the Die Ring by inserting and turning to engage the roll pin and lock the Die Ring into place.



Step 4 Lubricate Surfaces
Lubricate the outside surface of the Flaring Cone and the inside surface of the Die Ring with an extreme pressure lubricant (such as STP oil treatment). This will prevent galling and adhesion of components during operation.




Step 5 Lower Die Retainer
Install the Lower Die Retainer into the Hydra-Tool by placing into the slot located near the front of the Hydra-Tool. Assure that the slot in the retainer is facing upward.



Step 6 Install Lower Die Halve
Lubricate the outer conical surface of the Die half. Place the lower Die half in the lower Die Retainer.



Step 7 Install Upper Die
Install the Flaring Die half with the threaded hole into the upper half of the Die Retainer Assembly with the knurled thumb screw. Secure the die in place by turning the knurled thumb screw clockwise.

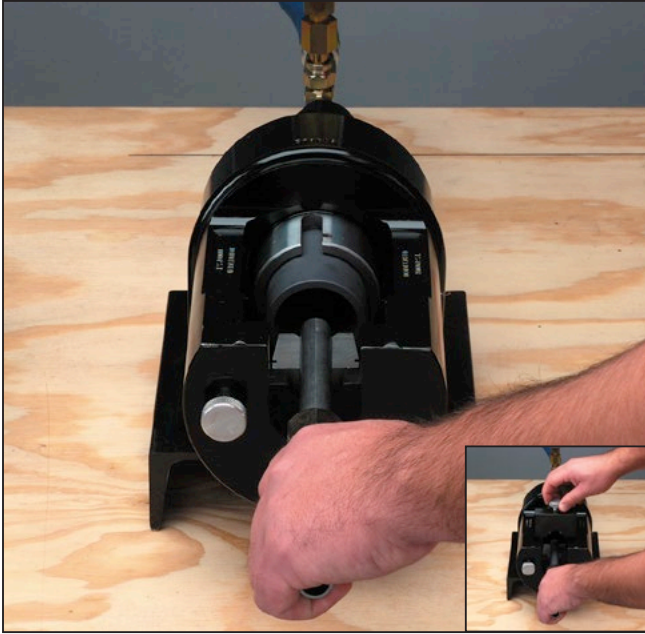**Step 8 Install Tube**

Place the properly prepared tube end to be flared on the lower die half in the Hydra-Tool. Then, place the top Die Retainer with the Upper Die into the slot over the tube assembly.


Step 9 Flaring Pressure

Refer to the charts on pages 5 & 6 for the outside diameter and wall thickness of the tube to be flared.

**Step 10 Position Tube**

Position the Tube Stop by rotating the knurled knob located on the front of the Hydra-Tool counter-clockwise until the Tube Stop is centered against the front of the die halves. Pull the knurled knob so the tube stop contacts the front of the dies. Position the tube end against the Tube Stop. Release the knurled knob and allow the Tube Stop to return to its original position.

CAUTION: Do not operate the Hydra-Tool with the Tube Stop in the “up” position. Damage will result.

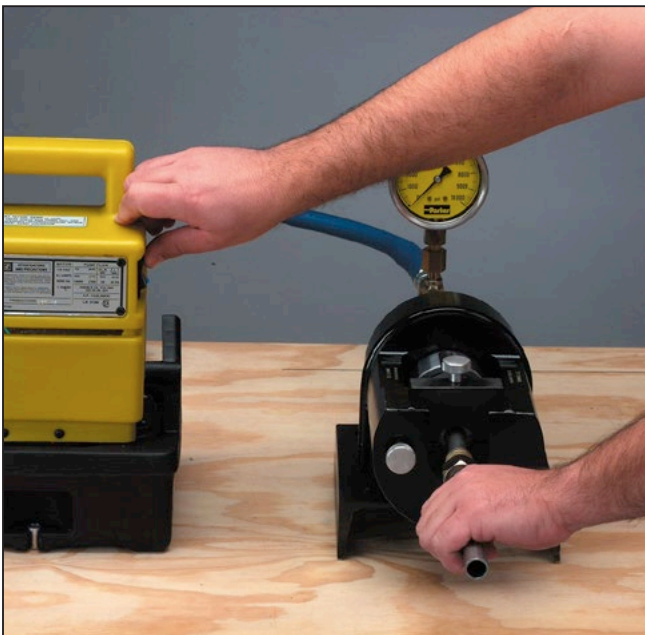**Step 11 Begin Flare**

Ensure the tube is held in position and energize the hydraulic power unit to begin the flaring process. The Die Ring will engage the Die Halves and clamp the tube in position. The Pressure Gauge will show a rapid rise as the Flaring Cone is forced solidly against the tube.




Step 12 Flare Tube

When the Pressure Gauge reading reaches the pressure that was previously determined in step 9, de-energize the hydraulic power supply. This will allow the Hydra-Tool cylinder to retract. The flare is complete.



Step 13 Remove Flared Tube

Remove the upper Die Retainer and Flaring Die then remove the tube.

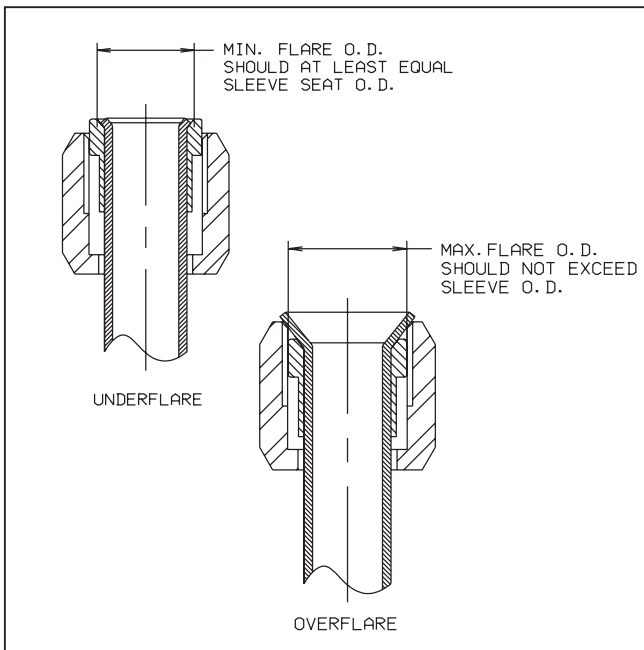

Step 14 Inspect Flare

Inspect the flare diameter using the visual inspection as shown.

Presetting EO and EO-2 Fittings

Components Required

Sizes 6mm through 42mm

Description	Part Number
Large Piston Stop Adapter	971107
Small Ram Insert	971108
Back-Up Plate (6mm-28mm only)	770102
Nut Die (6mm-28mm only)	See Table
Split Back-Up Plate (30mm-42mm only)	See Table
Body Die	See Table

Tube O.D. Size (mm)	Part No.			
	Nut Die Set	Body Die L-Series	Body Die S-Series	Split Back-Up Plate
6	910291-6 mm	910290-6L	910289-6S	—
8	910291-8 mm	910290-8L	910289-8S	—
10	910291-10 mm	910290-10L	910289-10S	—
12	910291-12 mm	910290-12L	910289-12S	—
14	910291-14 mm	—	910289-14S	—
15	910291-15 mm	910290-15L	—	—
16	910291-16 mm	—	910289-16S	—
18	910291-18 mm	910290-18L	—	—
20	910291-20 mm	—	910289-20S	—
22	910291-22 mm	910290-22L	—	—
25	910291-25 mm	—	910289-25S	—
28	910291-28 mm	910290-28L	—	—
30	—	—	910289-30S	970135-30 mm
35	—	910290-35L	—	970135-35 mm
38	—	—	910289-38S	970135-38 mm
42	—	910290-42L	—	970135-42 mm

Step 1 Select Tooling

Select the necessary tooling from the chart at the left based on the size tube/fitting to be preset.



Nut Die Set



Back-Up Plates



Body Die



Small Ram Insert and Stop Adapter (EO and EO-2 only)

Hydra-Tool Presetting Pressure for Steel EO and EO-2 Fittings

Pressures for Steel EO Fittings

Pre-Setting Pressures (psi) for EO Fittings							
Wall Thickness (mm)							
Size	Series	1.0	1.5	2.0	2.5	3.0	4.0
6	L	500	500	500			
6	S	500					
8	L	500		500			
8	S	500	500				
10	L		500				
10	S		500				
12	L	300	300	500			
12	S		300				
14	S			1,500			
15	L		500	800			
16	S			1,200		1,300	
18	L		1,000			1,300	
20	S				2,000		
22	L		1,500	1,500			
25	S					2,000	2,000
28	L			2,000			
30	S					3,000	
35	L			3,000		3,300	
38	S						3,500
42	L					4,000	

Pressures for Steel EO-2 Fittings

Hydra-Tool		
Pre-Setting Pressures (psi) for EO-2 Fittings using the large piston stop adapter		
Size	Series	Any wall
6	L	1,000
6	S	1,000
8	L	800
8	S	800
10	L	1,000
10	S	1,100
12	L	1,700
12	S	1,700
14	S	2,300
15	L	1,700
16	S	2,600
18	L	2,000
20	S	3,700
22	L	3,100
25	S	4,300
28	L	3,600
30	S	5,900
35	L	5,200
38	S	8,400
42	L	7,600

Note: The values provided in these charts are provided as a guide only and normally will produce a satisfactory bite when using the Parker Hydra-Tool.

**Step 2 Install Stop Adapter**

Insert the Large Piston Stop Adapter into the opening in the housing of the Hydra-Tool. Orient the adapter so the notch in the adapter is aligned with the Tube Stop.

**Step 3 Install Ram Insert**

Install the Small Ram Insert into the center piston of the Hydra-Tool. When inserting, rotate the Ram Insert so the roll pin engages the center piston and locks the Ram Insert in place.


**Step 4 Install Nut Support (6mm - 28mm only)**

First, drop the Back-Up Plate into the slot near the front of the machine. Then insert the nut support in the Back-Up Plate opening from the inside so that the Nut Support shoulder seats squarely in the counterbore of the Back-Up Plate.






- Step 5 Install Split Back-up Plates (30mm - 42mm only)**
Install the Split Back-Up Plates into the slot located in the front housing of the Hydra-Tool.

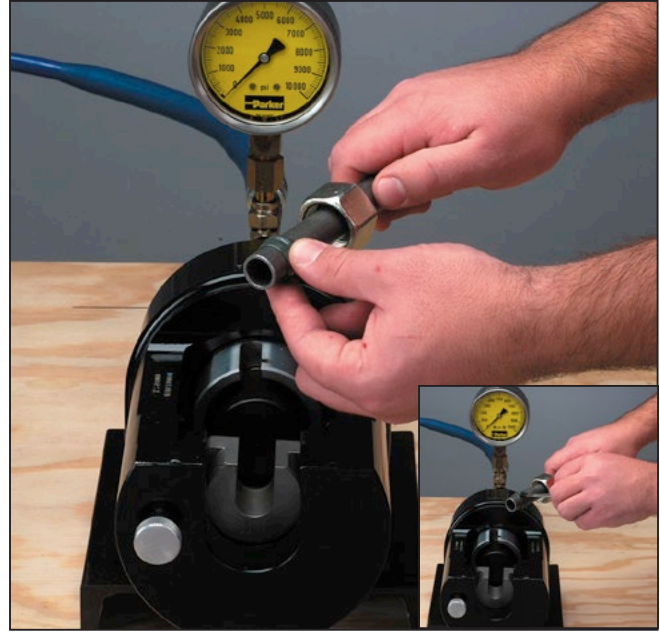

- Step 6 Assemble Nut and Ferrule to Tube**
Slide nut and ferrule onto the tube. For EO, the straight pilot section (bite edge) points toward the end of the tube which is to be preset, and the raised portion of the ferrule points toward the nut. For EO-2, slide the functional nut assembly onto the tube with the threaded end of the nut facing the end of the tube which is to be preset.

- Step 7 Lubricate Ferrule — EO Only**
Lubricate leading outer (bite) edge of ferrule with lubricant. Lubrication reduces wear on the die and reduces friction to ensure that all the force is available to preset the ferrule.

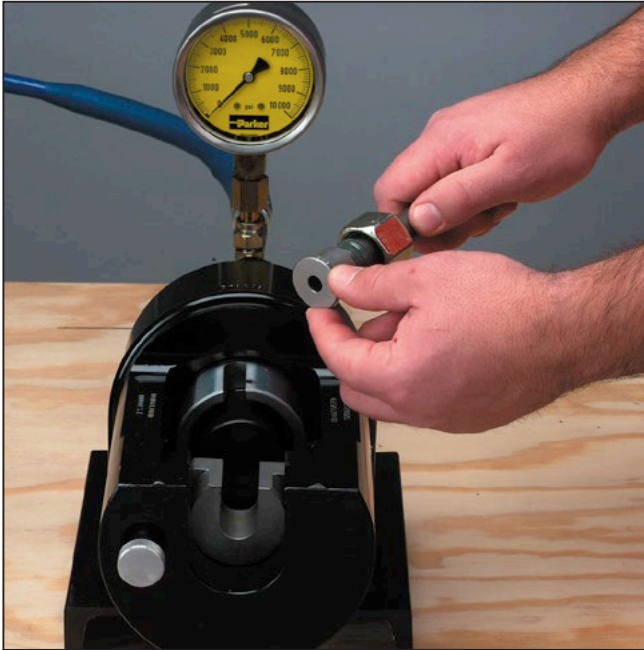**Step 8 Install Body Die**


Lubricate the inside of the Body Die with lubricant (EO only), then install the Body Die over the tube end until the tube bottoms on die shoulder. Push nut and ferrule forward to place parts in correct position, the Body Die will enter the bore of the nut, and the parts will be ready for presetting.

**Step 9 Position Assembly for Presetting**

Place the tube within the slot in the nut support.

Step 10 Preset the Ferrule

Determine the required preset pressure based on the tube size from the chart on page 11. Apply hydraulic pressure to advance the piston of the Hydra-Tool. Continue operation until the predetermined pressure is reached. De-energize the hydraulic power supply, the Hydra-Tool piston will retract.

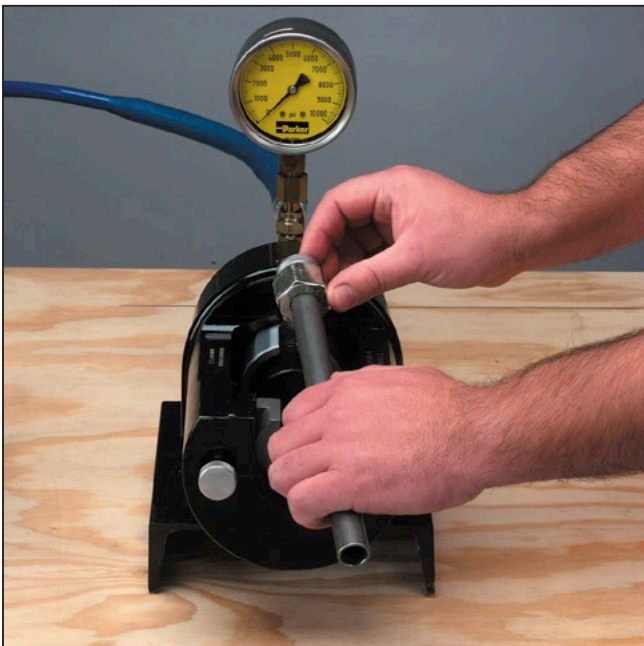**Step 11 Remove Tube**

Lift tube with preset ferrule out and inspect according to recommended procedures. Refer to Catalog 4300, EO/EO-2 Technical Section.

Presetting Ferulok Fittings

Components Required

Description	Part Number
Ram Insert	770101
Back-Up Plate	770102
Nut Die	See Table
Body Die	See Table

Size	Tube O.D. (in.)	Nut Die Part No.	Body Die Part No.
4	1/4	680370-4	720105-4
6	3/8	680370-6	720105-6
8	1/2	680370-8	720105-8
10	5/8	680370-10	720105-10
12	3/4	680370-12	720105-12
14	7/8	680370-14	720105-14
16	1	680370-16	720105-16
20	1-1/4	680370-20	720105-20
24	1-1/2	680370-24	720105-24
32	2	680370-32	720105-32

Step 1 Select Tooling

Select the necessary tooling from the chart above based on the size tube to be preset.



Ram Insert (Ferulok Only)



Back-up Plate



Nut Die Set




Body Die


Hydra-Tool Presetting Pressures for Ferulok Fittings ¹⁾²⁾³⁾

Tube Size	Wall Thickness – Steel							Wall Thickness – Stainless Steel						
	0.035	0.049	0.065	0.083	0.095	0.109	0.120	0.035	0.049	0.065	0.083	0.095	0.109	0.120
4	300	300	500	600	600	600		300	300	500	700	700	700	
6	300	500	600	700	700	700	700	300	500	700	700	700	700	800
8		500	700	800	900	1,000	1,000		600	700	1,000	1,000	1,100	1,100
10			700	900	1,000	1,100	1,100			800	1,000	1,100	1,300	1,300
12			900	1,000	1,100	1,100	1,300			1,000	1,100	1,300	1,300	1,500
14			1,000	1,100	1,100	1,300	1,500			1,000	1,300	1,300	1,500	1,600
16				1,100	1,300	1,500	1,600				1,500	1,500	1,600	1,600
20					1,500	1,600	1,800					1,600	2,000	2,000
24					1,800	2,000	2,300					2,100	2,300	2,300
32					2,800	2,900	3,300					3,100	3,300	3,300

- 1) These values are provided as a guide only and normally will produce a satisfactory bite.
- 2) Ferulok presetting dies are positive stop dies. Use of above pressures is optional.
- 3) For wall thicknesses greater than those listed, contact the Tube Fittings Division.

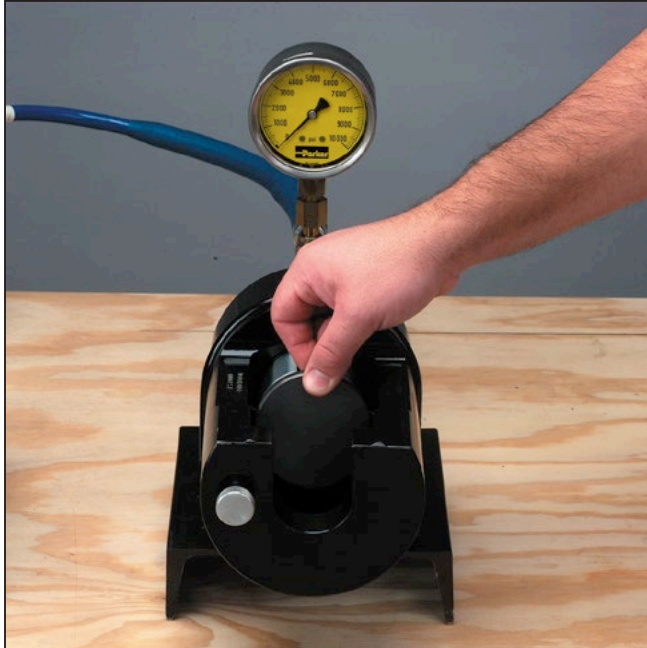


Step 2 Install Ram Insert
 Install the Ram Insert into the large piston of the Hydra-Tool.

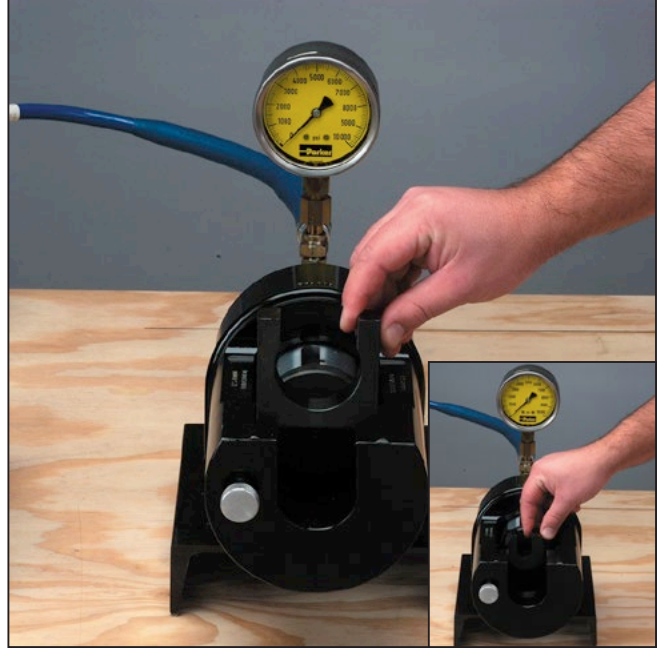

Step 3 Install Nut Support
 First, drop the Back-Up Plate into the slot near the front of the machine. Then insert the nut support in the Back-Up Plate opening from the inside so that the Nut Support shoulder seats squarely in the counterbore of the Back-Up Plate.


Step 4 Presetting Pressure (optional for inch sizes)
 Based on the tube outside diameter and wall thickness, determine the presetting pressure from the chart on page 15.

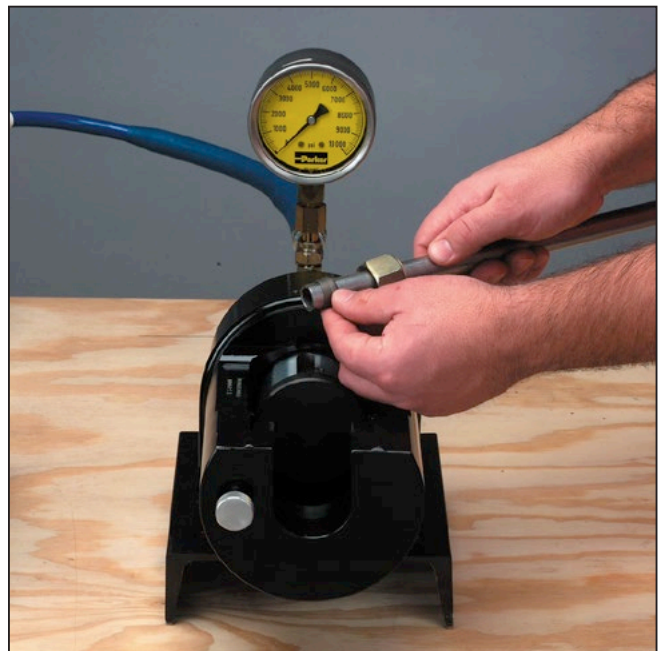


Step 5 Assemble Nut and Ferrule
 Slide nut and ferrule onto the tube. The straight pilot section (bite edge) points toward the end of the tube which is to be preset, and the raised portion of the ferrule points toward the nut.




Step 6 Lubricate Ferrule
Lubricate leading outer (bite) edge of ferrule with lubricant. Lubrication reduces wear on the die and reduces friction to ensure that all force is available to preset the ferrule.

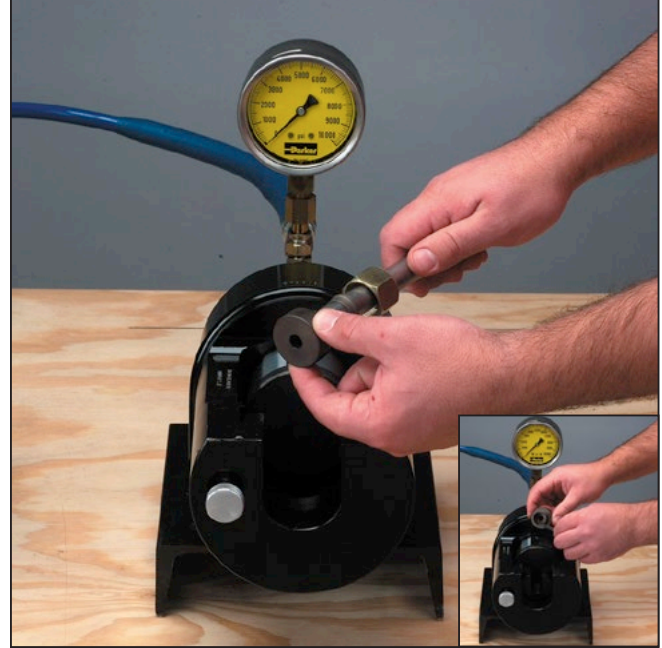

Step 7 Install Body Die
Lubricate the inside of the Body Die with lubricant, then install the Body Die over the tube end until the tube bottoms on die shoulder. Push nut and ferrule forward. The Body Die will enter the bore of the nut, and the parts will be in the correct position for presetting.

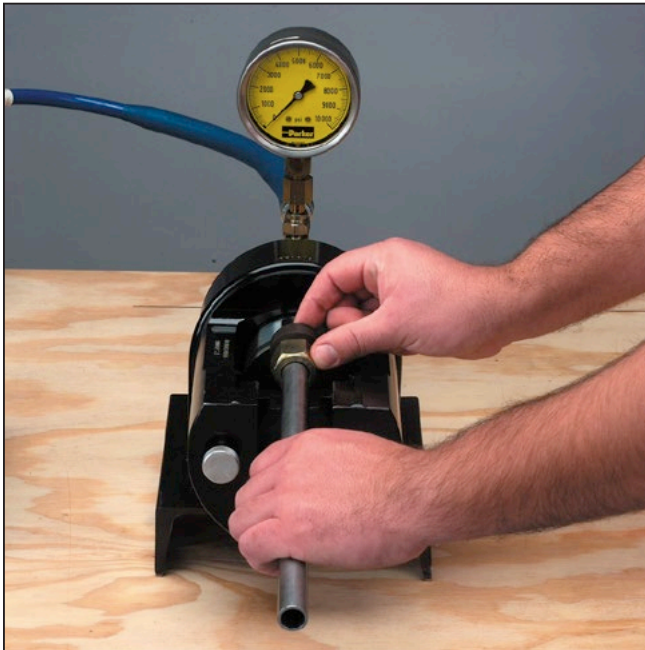


Step 8 Position Assembly for Presetting
Place the tube within the slot in the Nut Support.

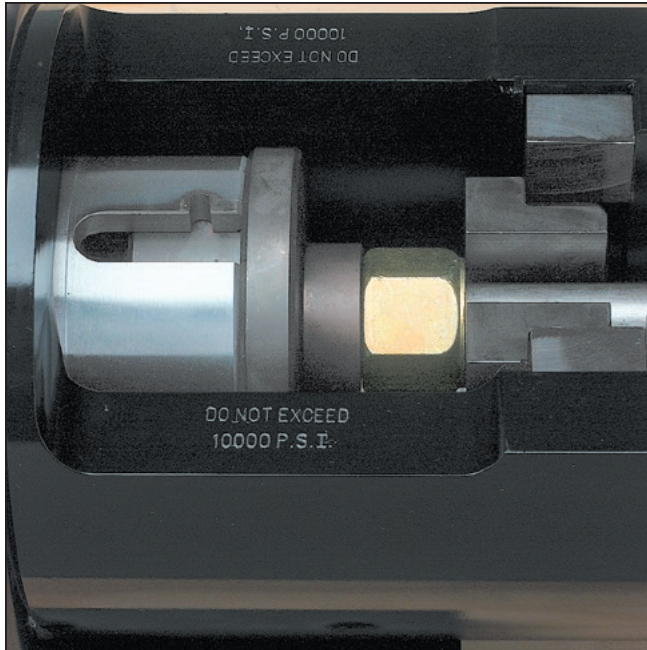**Step 9 Preset the Ferrule****Method 1:**

Apply hydraulic pressure to advance the piston of the Hydra-Tool. Continue operation until the predetermined pressure is reached. De-energize the hydraulic power supply. The Hydra-Tool piston will retract.

Method 2:

Follow Steps 1-8, skipping step 4, then watch the nut make positive contact (bottom out) on the shoulder of the body die. After contact is made, de-energize the hydraulic power supply, allowing the Hydra-Tool to retract.

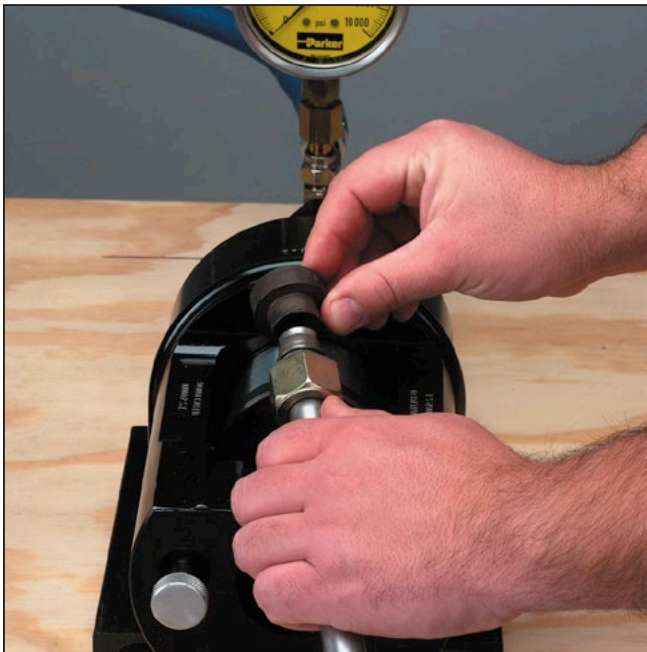**Step 10 Remove Tube**

Lift tube with preset ferrule out and inspect according to recommended procedures. Refer to Catalog 4300, Ferulok Technical Section.


Maintenance

- All moving parts should be kept clean and free from dirt and grit.
- All tooling should be handled carefully to avoid damaging the smooth surfaces. Presence of nicks, burrs, pieces of dirt or chips may mar the surfaces of the tube.
- Lubrication is a necessity when flaring or presetting.

Caution: Do not extend the cylinder without proper tooling assembled in the machine. Extending this assembly can cause the piston return spring to stretch. The piston will not return to its original position once the spring is deformed.

Troubleshooting

Problem	Cause / Solution
Cylinder does not advance	<ul style="list-style-type: none"> • Check the pump to see if fluid flow is being provided. • Check all connections for leaks.
Cylinder does not retract	<ul style="list-style-type: none"> • Required surfaces are not adequately lubricated with a high pressure lubricant such as STP. • Valve on hydraulic pump has not been released to allow hydraulic fluid to flow back to the pump. • The cylinder may have been extended without tooling in position. This may have caused the return spring to be damaged.
Flare is too large	<ul style="list-style-type: none"> • Too high of a flaring pressure was used. • Too much tube was extended in front of the flaring dies.
Flare is too small	<ul style="list-style-type: none"> • Too low of a flaring pressure was used. • The tube was not extended into the dies and against the tube stop properly.
Surface of flare is rough	<ul style="list-style-type: none"> • Tube was not properly cut and deburred. • Surface of the flaring cone is damaged. • No lubricant was applied to the flaring cone.
Ferrule preset is inadequate	<ul style="list-style-type: none"> • Too low of a presetting pressure was used. • Positive stop of tube nut to body die was not reached (Ferulok only). • Ferrule placed on tube incorrectly. • No lubrication was used on ferrule and body.
Ferrule preset is excessive	<ul style="list-style-type: none"> • Too high of a presetting pressure was used.

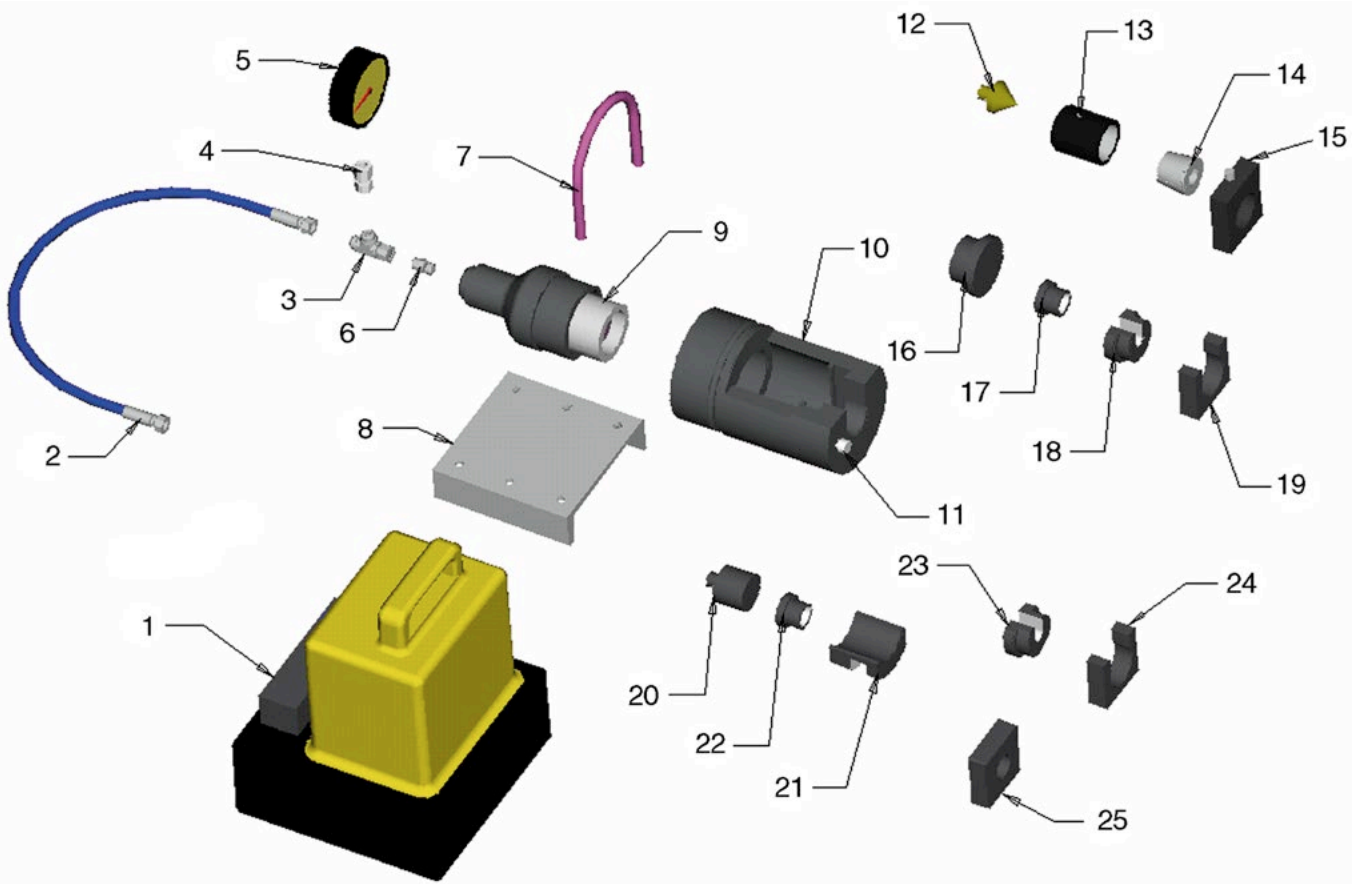

Item No.	Part Description	Part Number	Item No.	Part Description	Part Number
1	Electric – Hydraulic Pump, 10,000psi	900085	15	Die Retainer Assembly (-4 to -20, 6mm to 32mm)	710424-1
	Hand – Hydraulic Pump, 10,000psi	900086		Die Retainer Assembly (-24 to -32, 35mm to 50m)	710424-2
2	3' Hose Assembly, 10,000psi	910004		Die Retainer Knob	710414
3	"T" Adapter for gage	6 R6LO-S		Roll Pin for Knob	1/16X7/16
4	Swivel Adapter for gage	6 G6L-S		Die Ret. Screw (-4 to -20, 6mm to 32mm)	710413-2
5	Pressure Gage	900044		Die Ret. Screw (-24 to -32, 35mm to 502mm)	710413-1
6	Male Connector	6-8 F5OLO-S	16	Ram Insert for Ferulok	770101
7	Mounting U-Bolt	870091	17	Body Die for Ferulok	See page 15
8	Mounting Base	870092	18	Nut Support for Ferulok	See page 15
9	Cylinder Assembly*	710400B-Cylinder	19	Back-Up Plate	770102
10	Sub-Assembly Housing	870090	20	Small Ram Insert for EO and EO-2	971108
11	Tube Stop Assembly	710420B	21	Large Piston Stop Adapter	971107
12	Flaring Cone (-4 to -20, 6mm to 32mm)	710419	22	Body Die for EO and EO-2	See page 11
	Flaring Cone (-24 to -32, 35mm to 50m)	710411	23	Nut Support for EO and EO-2 (6mm to 28mm)	See page 11
13	Die Ring (-4 to -20, 6mm to 32mm)	710416A	24	Back-Up Plate	770102
	Die Ring (-24 to -32, 35mm to 50m)	710412	25	Split Back-Up Plate	See page 11
	Roll Pin for Die Rings	5/32X1/2			
14	Flaring Die Set	See page 4			

*Rebuilt cylinder assemblies available. Contact Parker Tube Fittings Division Repair Department (614-279-7070) for further information.

PARKER-HANNIFIN CORPORATION
OFFER OF SALE

The goods, services or work (referred to as the "Products") offered by Parker-Hannifin Corporation, its subsidiaries, groups, divisions, and authorized distributors ("Seller") are offered for sale at prices indicated in the offer, or as may be established by Seller. The offer to sell the Products and acceptance of Seller's offer by any customer ("Buyer") is contingent upon, and will be governed by all of the terms and conditions contained in this Offer of Sale. Buyer's order for any Products specified in Buyer's purchase document or Seller's offer, proposal or quote ("Quote") attached to the purchase order, when communicated to Seller verbally, or in writing, shall constitute acceptance of this offer.

1. Terms and Conditions. Seller's willingness to offer Products for sale or accept an order for Products is subject to the terms and conditions contained in this Offer of Sale or any newer version of the same, published by Seller electronically at www.parker.com/saleterms/. Seller objects to any contrary or additional terms or conditions of Buyer's order or any other document or other communication issued by Buyer.

2. Price; Payment. Prices stated on Seller's Quote are valid for thirty (30) days, except as explicitly otherwise stated therein, and do not include any sales, use, or other taxes or duties unless specifically stated. Seller reserves the right to modify prices to adjust for any raw material price fluctuations. Unless otherwise specified by Seller, all prices are F.C.A. Seller's facility (INCOTERMS 2010). Payment is subject to credit approval and payment for all purchases is due thirty (30) days from the date of invoice (or such date as may be specified by Seller's Credit Department). Unpaid invoices beyond the specified payment date incur interest at the rate of 1.5% per month or the maximum allowable rate under applicable law.

3. Shipment; Delivery; Title and Risk of Loss. All delivery dates are approximate. Seller is not responsible for damages resulting from any delay. Regardless of the manner of shipment, delivery occurs and title and risk of loss or damage pass to Buyer, upon placement of the Products with the shipment carrier at Seller's facility. Unless otherwise stated, Seller may exercise its judgment in choosing the carrier and means of delivery. No deferral of shipment at Buyer's request beyond the respective dates indicated will be made except on terms that will indemnify, defend and hold Seller harmless against all loss and additional expense. Buyer shall be responsible for any additional shipping charges incurred by Seller due to Buyer's acts or omissions.

4. Warranty. Seller warrants that the Products sold hereunder shall be free from defects in material or workmanship for a period of twelve (12) months from the date of delivery or 2,000 hours of normal use, whichever occurs first. All prices are based upon the exclusive limited warranty stated above, and upon the following disclaimer: **DISCLAIMER OF WARRANTY: THIS WARRANTY IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO PRODUCTS PROVIDED. SELLER DISCLAIMS ALL OTHER WARRANTIES, EXPRESS AND IMPLIED, INCLUDING DESIGN, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.**

5. Claims; Commencement of Actions. Buyer shall promptly inspect all Products upon receipt. No claims for shortages will be allowed unless reported to the Seller within ten (10) days of delivery. No other claims against Seller will be allowed unless asserted in writing within thirty (30) days after delivery. Buyer shall notify Seller of any alleged breach of warranty within thirty (30) days after the date the defect is or should have been discovered by Buyer. Any claim or action against Seller based upon breach of contract or any other theory, including tort, negligence, or otherwise must be commenced within twelve (12) months from the date of the alleged breach or other alleged event, without regard to the date of discovery.

6. LIMITATION OF LIABILITY. IN THE EVENT OF A BREACH OF WARRANTY, SELLER WILL, AT ITS OPTION, REPAIR OR REPLACE A DEFECTIVE PRODUCT, OR REFUND THE PURCHASE PRICE WITHIN A REASONABLE PERIOD OF TIME. **IN NO EVENT IS SELLER LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF, OR AS THE RESULT OF, THE SALE, DELIVERY, NON-DELIVERY, SERVICING, USE OR LOSS OF USE OF THE PRODUCTS OR ANY PART THEREOF, OR FOR ANY CHARGES OR EXPENSES OF ANY NATURE INCURRED WITHOUT SELLER'S WRITTEN CONSENT, WHETHER BASED IN CONTRACT, TORT OR OTHER LEGAL THEORY. IN NO EVENT SHALL SELLER'S LIABILITY UNDER ANY CLAIM MADE BY BUYER EXCEED THE PURCHASE PRICE OF THE PRODUCTS.**

7. User Responsibility. The user, through its own analysis and testing, is solely responsible for making the final selection of the system and Product and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application and follow applicable industry standards and Product information. If Seller provides Product or system options based upon data or specifications provided by the user, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the Products or systems.

8. Loss to Buyer's Property. Any designs, tools, patterns, materials, drawings, confidential information or equipment furnished by Buyer or any other items which become Buyer's property, will be considered obsolete and may be destroyed by Seller after two (2) consecutive years have elapsed without Buyer ordering the items manufactured using such property. Seller shall not be responsible for any loss or damage to such property while it is in Seller's possession or control.

9. Special Tooling. A tooling charge may be imposed for any special tooling, including without limitation, dies, fixtures, molds and patterns, acquired to manufacture Products. Such special tooling shall be and remain Seller's property notwithstanding payment of any charges by Buyer. In no event will Buyer acquire any interest in apparatus belonging to Seller which is utilized in the manufacture of the Products, even if such apparatus has been specially converted or adapted for such manufacture and notwithstanding any charges paid by Buyer. Unless otherwise agreed, Seller has the right to alter, discard or otherwise dispose of any special tooling or other property in its sole discretion at any time.

10. Buyer's Obligation; Rights of Seller. To secure payment of all sums due or otherwise, Seller retains a security interest in all Products delivered to Buyer and this agreement is deemed to be a Security Agreement under the Uniform Commercial Code. Buyer authorizes Seller as its attorney to execute and file on Buyer's behalf all documents Seller deems necessary to perfect its security interest.

11. Improper Use and Indemnity. Buyer shall indemnify, defend, and hold Seller harmless from any losses, claims, liabilities, damages, lawsuits, judgments and costs (including attorney

fees and defense costs), whether for personal injury, property damage, patent, trademark or copyright infringement or any other claim, brought by or incurred by Buyer, Buyer's employees, or any other person, arising out of: (a) improper selection, application, design, specification or other misuse of Products purchased by Buyer from Seller; (b) any act or omission, negligent or otherwise, of Buyer; (c) Seller's use of patterns, plans, drawings, or specifications furnished by Buyer to manufacture Products; or (d) Buyer's failure to comply with these terms and conditions. Seller shall not indemnify Buyer under any circumstance except as otherwise provided.

12. Cancellations and Changes. Buyer may not cancel or modify or cancel any order for any reason, except with Seller's written consent and upon terms that will indemnify, defend and hold Seller harmless against all direct, incidental and consequential loss or damage. Seller may change Product features, specifications, designs and availability.

13. Limitation on Assignment. Buyer may not assign its rights or obligations under this agreement without the prior written consent of Seller.

14. Force Majeure. Seller does not assume the risk and is not liable for delay or failure to perform any of Seller's obligations by reason of events or circumstances beyond its reasonable control (hereinafter "Events of Force Majeure"). Events of Force Majeure shall include without limitation: accidents, strikes or labor disputes, acts of any government or government agency, acts of nature, delays or failures in delivery from carriers or suppliers, shortages of materials, or any other cause beyond Seller's reasonable control.

15. Waiver and Severability. Failure to enforce any provision of this agreement will not invalidate that provision; nor will any such failure prejudice Seller's right to enforce that provision in the future. Invalidation of any provision of this agreement by legislation or other rule of law shall not invalidate any other provision herein. The remaining provisions of this agreement will remain in full force and effect.

16. Termination. Seller may terminate this agreement for any reason and at any time by giving Buyer thirty (30) days prior written notice. Seller may immediately terminate this agreement, in writing, if Buyer: (a) breaches any provision of this agreement (b) appoints a trustee, receiver or custodian for all or any part of Buyer's property (c) files a petition for relief in bankruptcy on its own behalf, or one if filed by a third party (d) makes an assignment for the benefit of creditors; or (e) dissolves its business or liquidates all or a majority of its assets.

17. Governing Law. This agreement and the sale and delivery of all Products are deemed to have taken place in, and shall be governed and construed in accordance with, the laws of the State of Ohio, as applicable to contracts executed and wholly performed therein and without regard to conflicts of laws principles. Buyer irrevocably agrees and consents to the exclusive jurisdiction and venue of the courts of Cuyahoga County, Ohio with respect to any dispute, controversy or claim arising out of or relating to this agreement.

18. Indemnity for Infringement of Intellectual Property Rights. Seller is not liable for infringement of any patents, trademarks, copyrights, trade dress, trade secrets or similar rights except as provided in this Section. Seller will defend and indemnify Buyer against allegations of infringement of U.S. patents, U.S. trademarks, copyrights, trade dress and trade secrets ("Intellectual Property Rights"). Seller will defend at its expense and will pay the cost of any settlement or damages awarded in an action brought against Buyer based on an allegation that a Product sold pursuant to this agreement infringes the Intellectual Property Rights of a third party. Seller's obligation to defend and indemnify Buyer is contingent on Buyer notifying Seller within ten (10) days after Buyer becomes aware of such allegations of infringement, and Seller having sole control over the defense of any allegations or actions including all negotiations for settlement or compromise. If a Product is subject to a claim that it infringes the Intellectual Property Rights of a third party, Seller may, at its sole expense and option, procure for Buyer the right to continue using the Product, replace or modify the Product so as to make it noninfringing, or offer to accept return of the Product and refund the purchase price less a reasonable allowance for depreciation. Notwithstanding the foregoing, Seller is not liable for claims of infringement based on information provided by Buyer, or directed to Products delivered hereunder for which the designs are specified in whole or part by Buyer, or infringements resulting from the modification, combination or use in a system of any Product sold hereunder. The foregoing provisions of this Section constitute Seller's sole and exclusive liability and Buyer's sole and exclusive remedy for infringement of Intellectual Property Rights.

19. Entire Agreement. This agreement contains the entire agreement between the Buyer and Seller and constitutes the final, complete and exclusive expression of the terms of sale. All prior or contemporaneous written or oral agreements or negotiations with respect to the subject matter are herein merged. The terms contained herein may not be modified unless in writing and signed by an authorized representative of Seller.

20. Compliance with Laws. Buyer agrees to comply with all applicable laws, regulations, and industry and professional standards of care, including those of the United Kingdom, the United States of America, and the country or countries in which Buyer may operate, including without limitation the U. K. Bribery Act, the U.S. Foreign Corrupt Practices Act ("FCPA"), the U.S. Anti-Kickback Act ("Anti-Kickback Act") and the U.S. Food Drug and Cosmetic Act ("FDCA"), each as currently amended, and the rules and regulations promulgated by the U.S. Food and Drug Administration ("FDA"), and agrees to indemnify and hold harmless Seller from the consequences of any violation of such provisions by Buyer, its employees or agents. Buyer acknowledges that it is familiar with the provisions of the U. K. Bribery Act, the FCPA, the FDA, and the Anti-Kickback Act, and certifies that Buyer will adhere to the requirements thereof. In particular, Buyer represents and agrees that Buyer will not make any payment or give anything of value, directly or indirectly to any governmental official, any foreign political party or official thereof, any candidate for foreign political office, or any commercial entity or person, for the purpose of influencing such person to purchase Products or otherwise benefit the business of Seller.

05/14



Parker Fluid Connectors Group

North American Divisions & Distribution Service Centers

Your complete source for quality tube fittings, hose & hose fittings, brass & composite fittings, quick-disconnect couplings, valves and assembly tools, locally available from a worldwide network of authorized distributors.

Fittings:

Available in inch and metric sizes covering SAE, BSP, DIN, GAZ, JIS and ISO thread configurations, manufactured from steel, stainless steel, brass, aluminum, nylon and thermoplastic.

Hose, Tubing and Bundles:

Available in a wide variety of sizes and materials including rubber, wire-reinforced, thermoplastic, hybrid and custom compounds.

Worldwide Availability:

Parker operates Fluid Connectors manufacturing locations and sales offices throughout North America, South America, Europe and Asia-Pacific.

For information, call toll free...

**1-800-C-PARKER
(1-800-272-7537)**

North American Divisions

Fluid System Connectors Division

Otsego, MI
phone 269 694 9411
fax 269 694 4614

Hose Products Division

Wickliffe, OH
phone 440 943 5700
fax 440 943 3129

Industrial Hose Division

Wickliffe, OH
phone 440 883 2120
fax 440 833 2230

Parflex Division

Ravenna, OH
phone 330 296 2871
fax 330 296 8433

Quick Coupling Division

Minneapolis, MN
phone 763 544 7781
fax 763 544 3418

Tube Fittings Division

Columbus, OH
phone 614 279 7070
fax 614 279 7685

Distribution Service Centers

Buena Park, CA

phone 714 522 8840
fax 714 994 1183

Conyers, GA

phone 770 929 0330
fax 770 929 0230

Louisville, KY

phone 502 937 1322
fax 502 937 4180

Portland, OR

phone 503 283 1020
fax 503 283 2201

Toledo, OH

phone 419 878 7000
fax 419 878 7001
fax 419 878 7420
(FCG Kit Operations)

Canada

Grimsby, ONT

phone 905 945 2274
fax 905 945 3945
(Contact Grimsby for other Service Center locations.)

Mexico

Toluca, MEX

phone (52) 722 2754 200
fax (52) 722 2722 168

